

# Automatic Multimeter PM2521

## Service Manual

9499 475 01911

820407

# S&I

Scientific & Industrial Equipment Division



# PHILIPS

# Automatic Multimeter PM2521

## Service Manual

9499 475 01911  
820407



### IMPORTANT

This service manual is based on instruments with a serial number DM 01 1145 and onwards.

In chapter 11, modifications to the PM2521, an overview is given of modifications in the earlier instruments.



# PHILIPS

**IMPORTANT**

In correspondence concerning this instrument, please quote the type number and serial number as given on the type plate.

**NOTE:** *The design of this instrument is subject to continuous development and improvement. Therefore the instrument may not exactly comply with the information in the manual.*

**WICHTIG**

Bei Schriftwechsel über dieses Gerät wird gebeten, die genaue Typenbezeichnung und die Gerätenummer anzugeben. Diese befinden sich auf dem Leistungsschild.

**BEMERKUNG:** *Die Konstruktion und Schaltung dieses Geräts wird ständig weiterentwickelt und verbessert. Deswegen kann dieses Gerät von den in dieser Anleitung stehenden Angaben abweichen.*

**IMPORTANT**

Dans votre correspondance se rapportant à cet appareil, veuillez indiquer le numéro de type et le numéro de série qui sont marqués sur la plaquette de caractéristiques.

**REMARQUES:** *Cet appareil est l'objet de développements et améliorations continus. En conséquence, certains détails mineurs peuvent différer des informations données dans la présente notice d'emploi et d'entretien.*

## CONTENTS

Page

|  |          |
|--|----------|
| <b>1. CIRCUIT DESCRIPTION</b>                  | <b>1</b> |
| 1.1. General                                   | 1        |
| 1.2. Survey of main sections                   | 1        |
| 1.2.1. Analog section                          | 1        |
| 1.2.2. Control section                         | 6        |
| 1.2.3. Display section                         | 6        |
| 1.3. Functional description                    | 6        |
| 1.3.1. General                                 | 6        |
| 1.3.2. Analog section (standard measurements)  | 7        |
| 1.3.2.1. Direct voltage measurements           | 7        |
| 1.3.2.2. Alternating voltage measurements      | 8        |
| 1.3.2.3. Direct current measurements           | 9        |
| 1.3.2.4. Alternating current measurements      | 9        |
| 1.3.2.5. Resistance measurements               | 10       |
| 1.3.2.6. Diode measurements                    | 11       |
| 1.3.2.7. Temperature measurements              | 11       |
| 1.3.3. Analog section (extended measurements)  | 12       |
| 1.3.3.1. Frequency measurements                | 12       |
| 1.3.3.2. Time measurements                     | 13       |
| 1.3.3.3. Trigger measurements                  | 13       |
| 1.3.4. Analog section (multifunction circuits) | 14       |
| 1.3.4.1. R.M.S. convertor                      | 14       |
| 1.3.4.2. Impedance convertor                   | 14       |
| 1.3.4.3. Active filter                         | 15       |
| 1.3.4.4. Analog-to-Digital convertor           | 15       |
| 1.3.5. Control section                         | 17       |
| 1.3.5.1. Microprocessor 8035                   | 17       |
| 1.3.5.2. Interrupt controller                  | 21       |
| 1.3.5.3. Counter                               | 22       |
| 1.3.5.4. Analog control                        | 22       |
| 1.3.5.5. ROM's and Address/Data decoding       | 23       |
| 1.3.6. Display section                         | 23       |
| 1.4. Detailed circuit description              | 26       |
| 1.4.1. Measuring sequence                      | 26       |
| 1.4.1.1. Initialisation                        | 27       |
| 1.4.1.2. Internal test and adjust routine      | 28       |
| 1.4.1.3. Set up routine                        | 31       |
| 1.4.1.4. Measurement routine                   | 31       |
| 1.4.1.5. Calculation routine                   | 32       |
| 1.4.1.6. Display output routine                | 32       |
| 1.4.2. Analog section (standard measurements)  | 33       |
| 1.4.2.1. Direct voltage measurements           | 33       |
| 1.4.2.2. Alternating voltage measurements      | 34       |
| 1.4.2.3. Direct current measurements           | 35       |
| 1.4.2.4. Alternating current measurements      | 36       |
| 1.4.2.5. Resistance measurements               | 37       |
| 1.4.2.6. Diode measurements                    | 38       |
| 1.4.2.7. Temperature measurements              | 38       |



|          |   |    |
|----------|---|----|
| 1.4.3.   | Analog section (extended measurements)      | 39 |
| 1.4.3.1. | Frequency measurements                      | 39 |
| 1.4.3.2. | Time measurements                           | 40 |
| 1.4.3.3. | Trigger measurements                        | 40 |
| 1.4.4.   | Analog section (multifunction measurements) | 41 |
| 1.4.4.1. | R.M.S. convertor                            | 41 |
| 1.4.4.2. | Impedance convertor                         | 42 |
| 1.4.4.3. | Active filter                               | 43 |
| 1.4.4.4. | Analog-to-Digital convertor                 | 44 |
| 1.4.5.   | Control section                             | 45 |
| 1.4.5.1. | Interrupt controller                        | 45 |
| 1.4.5.2. | Counter and Input control                   | 47 |
| 1.4.5.3. | Analog control                              | 48 |
| 1.4.5.4. | ROM circuit and Address/Data decoding       | 54 |
| 1.4.6.   | Display section                             | 56 |
| 1.4.7.   | Power supply                                | 56 |

|   |           |
|---|-----------|
| <b>2. ACCESS</b>  | <b>57</b> |
| 2.1. Dismantling the PM2521   | 57        |
| 2.1.1. Removing the top cover   | 57        |
| 2.1.2. Removing the bottom cover  | 57        |
| 2.1.3. Removing the front assembly  | 57        |
| 2.2. Replacing parts  | 58        |
| 2.2.1. Liquid crystal display, display unit N3, interconnection rubber or function knob | 58        |
| 2.2.2. Function switch  | 58        |
| 2.2.3. Thermal fuse   | 58        |
| <b>3. CHECKING AND ADJUSTING</b>  | <b>62</b> |
| 3.1. DC ranges  | 63        |
| 3.2. AC ranges  | 65        |
| 3.3. Trigger level ranges   | 66        |
| 3.4. Current ranges   | 68        |
| 3.5. Resistance ranges  | 68        |
| 3.6. Temperature ranges   | 69        |
| 3.7. Frequency ranges   | 69        |
| 3.8. Time ranges  | 70        |
| <b>4. FAULT-FINDING</b>   | <b>71</b> |
| 4.1. General  | 71        |
| 4.1.1. Service hints  | 71        |
| 4.1.2. Fault-finding procedure  | 71        |
| 4.1.3. Fault-finding with the signature analyser  | 71        |
| 4.2. Fault-finding flow-charts  | 72        |
| 4.2.1. Basic check  | 72        |
| 4.2.2. Function part  | 73        |
| 4.2.3. V $\rightarrow$ part   | 74        |
| 4.2.4. V $\sim$ part  | 74        |
| 4.2.5. Trigger level part   | 76        |
| 4.2.6. A $\rightarrow$ and A $\sim$ part  | 78        |
| 4.2.7. $\Omega$ part  | 79        |
| 4.2.8. Analog part  | 80        |
| 4.2.9. ADC part   | 81        |
| 4.2.10. Digital part  | 82        |
| 4.2.11. Free-run  | 84        |
| 4.2.12. Display part  | 86        |
| 4.2.13. Power supply check  | 88        |

|  |            |
|--|------------|
| <b>5. PARTS LIST</b>   | <b>89</b>  |
| 5.1. Top cover assembly . . . . .                                    | 89         |
| 5.2. Bottom cover assembly . . . . .                                 | 89         |
| 5.3. Front assembly . . . . .  | 89         |
| 5.4. Switch assembly . . . . .                                       | 89         |
| 5.5. Printed circuit board . . . . .                                 | 90         |
| 5.5.1. Miscellaneous . . . . .                                       | 90         |
| 5.5.2. Resistors . . . . .   | 91         |
| 5.5.3. Capacitors . . . . .  | 94         |
| 5.5.4. Semi-conductors . . . . .                                     | 96         |
| 5.5.5. Integrated circuits . . . . .                                 | 98         |
| <b>6. CIRCUIT DIAGRAMS AND P.C.B. LAY-OUT</b>                        | <b>99</b>  |
| <b>7. MODIFICATIONS TO THE PM2521</b>                                | <b>115</b> |
| 7.1. Modifications to circuit diagrams and p.c.b. lay-outs . . . . . | 115        |
| 7.2. Modifications to components . . . . .                           | 120        |
| 7.3. Modifications to the adjusting procedure . . . . .              | 120        |
| <b>8. COMPONENT DATA</b>   | <b>121</b> |
| 8.1. Semi-conductors . . . . .                                       | 121        |
| 8.2. LOCMOS circuits (HEF) . . . . .                                 | 122        |
| 8.3. OQ circuits . . . . .   | 127        |
| 8.4. Display interface circuits . . . . .                            | 133        |
| 8.5. Operational amplifiers . . . . .                                | 137        |
| 8.6. Low power Schottky circuits (LS) . . . . .                      | 139        |
| 8.7. Memory and microprocessor . . . . .                             | 143        |
| 8.8. Resistors . . . . .   | 146        |


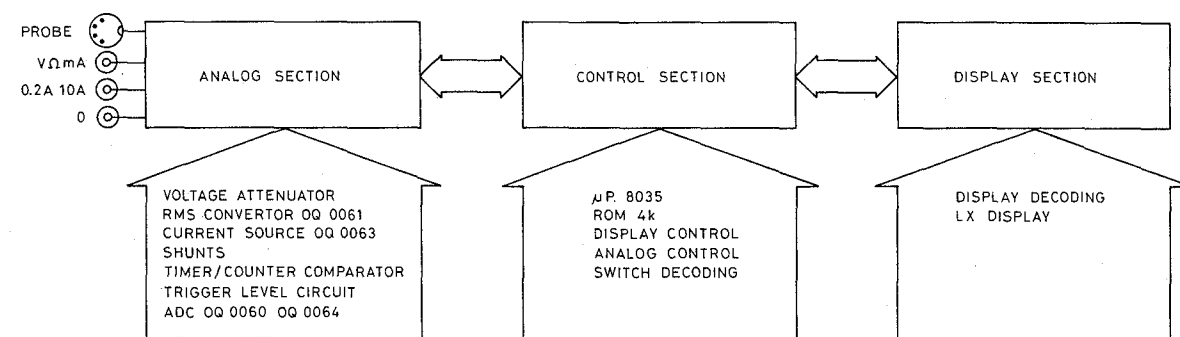


Fig. 1. Basic built-up of PM2521

ST 3007

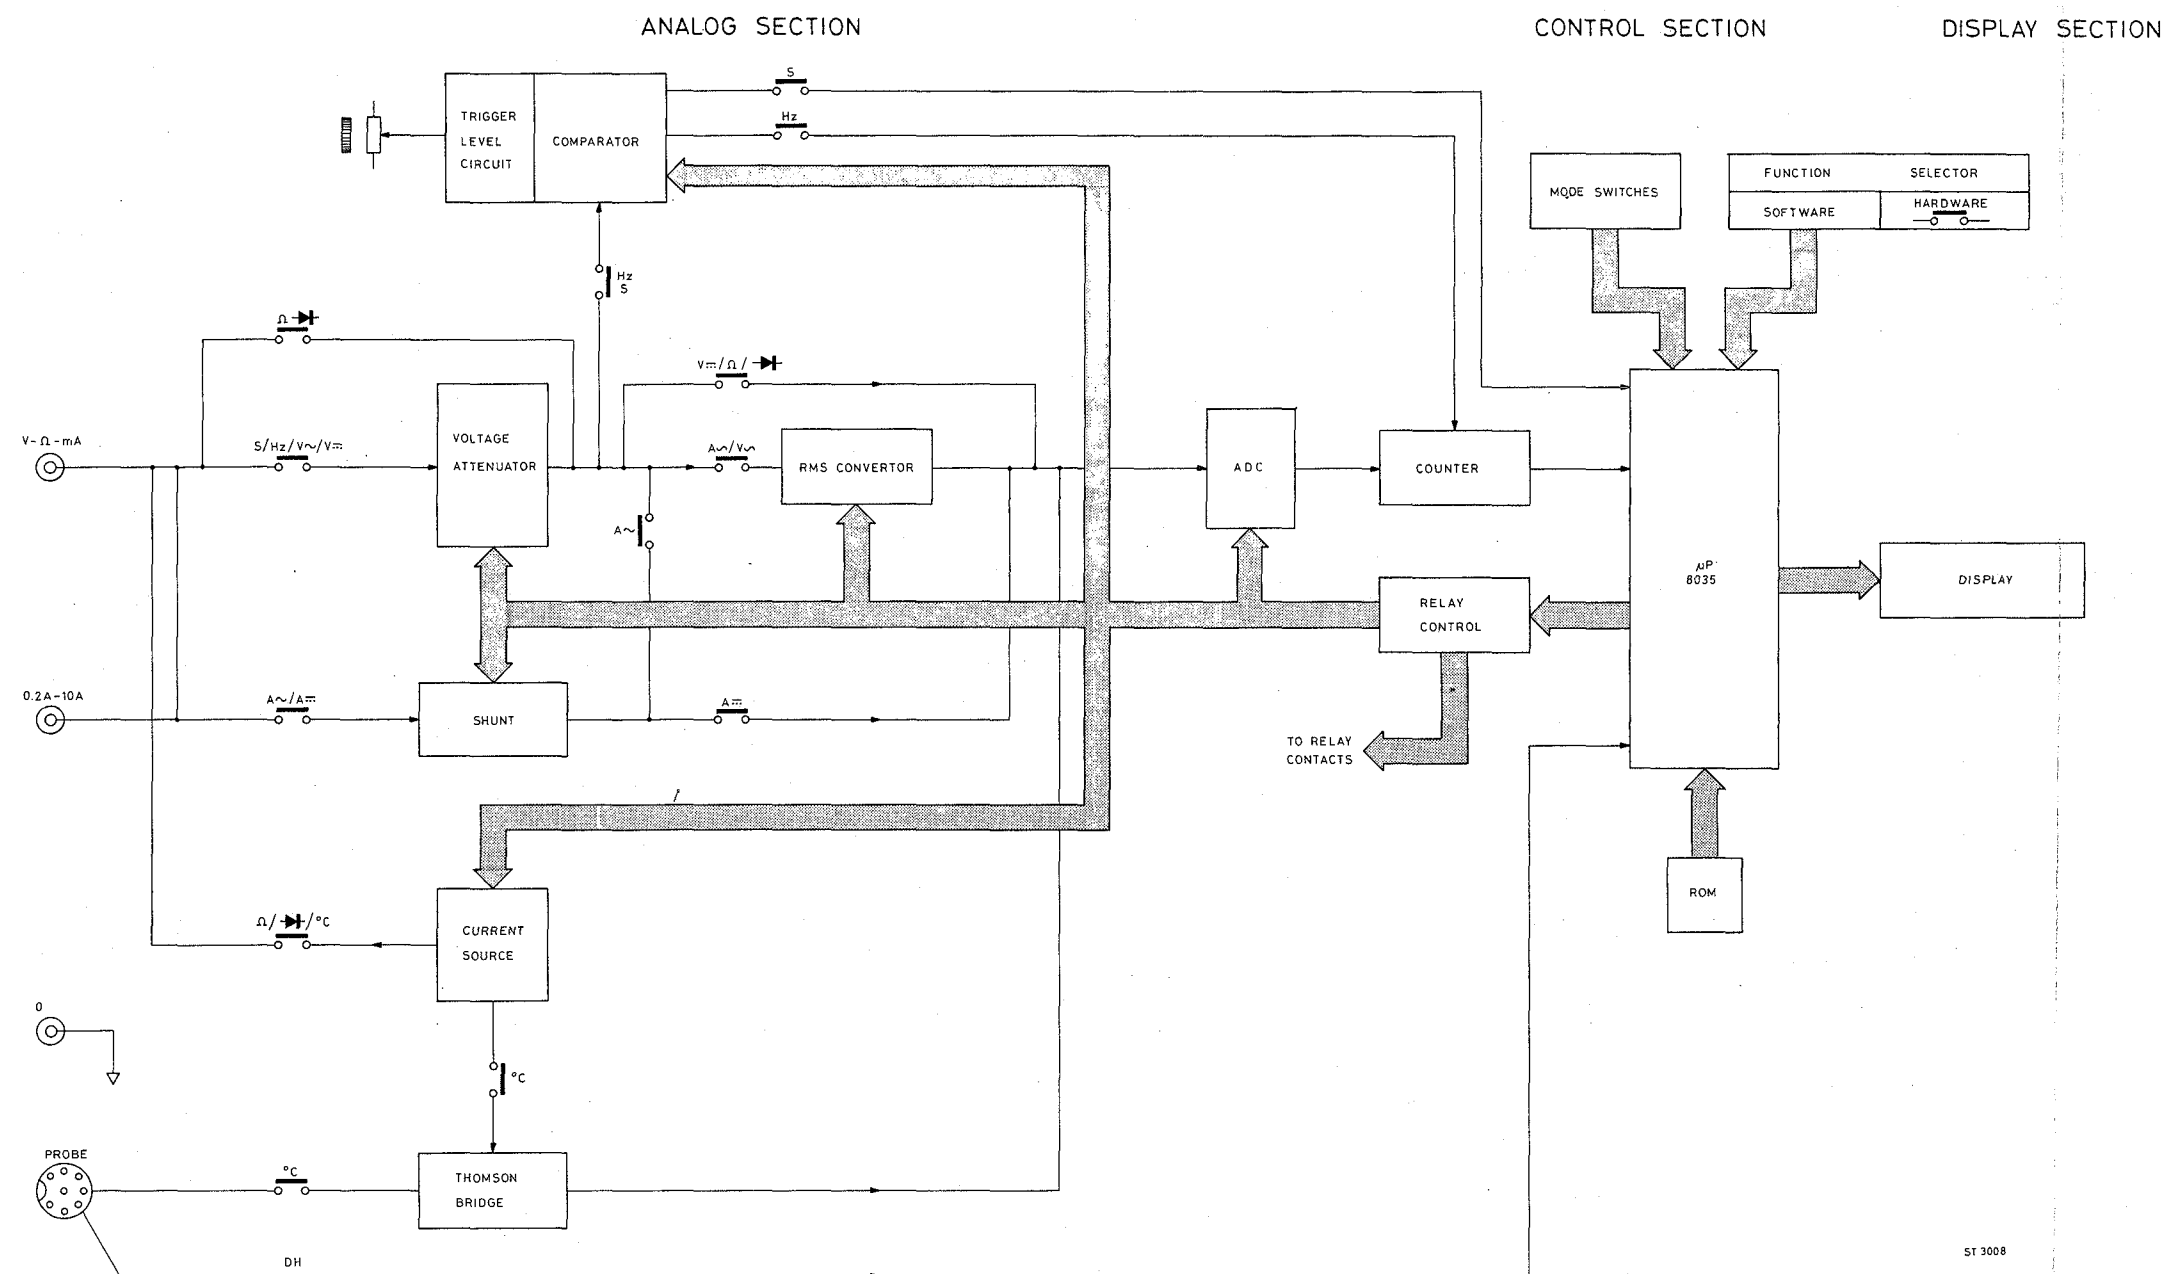

ST 3008

Fig. 2. Blockdiagram PM2521

Fig. 1. Basic built-up of PM2521

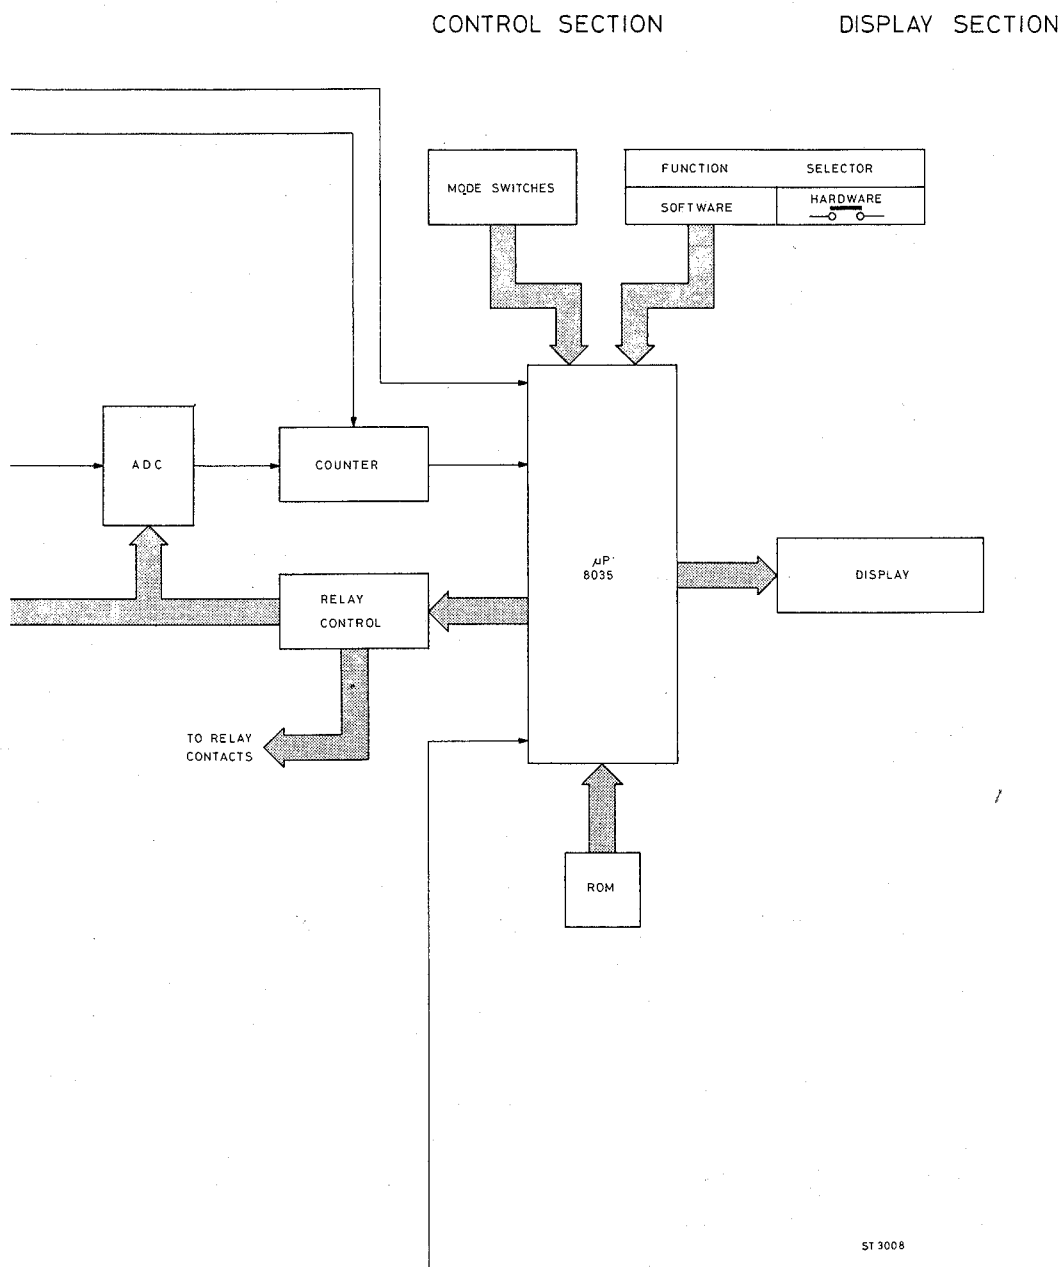


Fig. 2. Blockdiagram PM2521

### 1.2.2. Control Section

The control section comprises the following circuit elements:

- The interrupt controller  
The inputs for the interrupt controller are the mode switches and the trigger level circuit output (timer part)
- The counter with its input control  
The inputs for the counter circuit are:
  - The ADC output
  - The trigger level circuit output (counter part)
 The input control is directed from the microcomputer
- The ROM with address/data decoding
- The microcomputer 8035
- The function selector with decoding
- The mode switches
- The relay/FET switch control

### 1.2.3. Display section

The display section consists of:

- The display interface circuit
- The 5-digit liquid-crystal display

## 1.3. FUNCTIONAL DESCRIPTION

### 1.3.1. General

In common with most microcomputer-based measuring instruments, the Automatic Multimeter PM2521 is designed around the microcomputer integrated circuit - an 8035 with a 4K external ROM. The 8035 comprises a microprocessor with an internal 64-byte RAM, one true 8-bit bidirectional port and two quasi-bidirectional ports.

In conjunction with the 4K ROM, the  $\mu P$  controls the timing and measuring functions of the instrument. It also provides the reading of the display.

In the analog section, all the inputs are converted into d.c. signals, attenuated as necessary under  $\mu P$  control and supplied to the ADC.


The ADC converts these d.c. analog representations of the input signals into digital logic signals suitable for the  $\mu P$ .

The measuring sequence from analog section to control and display sections is briefly outlined in the flow-chart, Fig. 3.

## LIST OF FIGURES

|           |  |    |
|-----------|--|----|
| Fig. 1.   | Basic build-up of PM2521                     | 4  |
| Fig. 2.   | Block diagram PM2521                         | 4  |
| Fig. 3.   | Measurement flow-chart                       | 7  |
| Fig. 4.   | DC attenuator                                | 8  |
| Fig. 5.   | AC attenuator                                | 8  |
| Fig. 6.   | Basic I-V convertor                          | 9  |
| Fig. 7.   | $\Omega$ measurements                        | 10 |
| Fig. 8.   | Thomson bridge                               | 11 |
| Fig. 9.   | Block diagram - frequency measurements       | 12 |
| Fig. 10.  | Normal trigger mode                          | 13 |
| Fig. 11.  | Special trigger mode                         | 13 |
| Fig. 12.  | Basic V-I convertor                          | 14 |
| Fig. 13.  | Low-pass active filter                       | 15 |
| Fig. 14.  | Switching part ADC                           | 15 |
| Fig. 15.  | Basic functional blocks of 8035 $\mu$ P      | 17 |
| Fig. 16.  | Pin allocation and functions of 8035 $\mu$ P | 19 |
| Fig. 17.  | Mode switch interrupts                       | 21 |
| Fig. 18.  | Block diagram of the control section         | 24 |
| Fig. 19.  | Measuring sequence                           | 26 |
| Fig. 20.  | Calibration routine                          | 29 |
| Fig. 21.  | Flow-chart internal test and adjust routine  | 28 |
| Fig. 22.  | Flow-chart display output routine            | 32 |
| Fig. 23.  | DC attenuator details                        | 33 |
| Fig. 24.  | AC attenuator details                        | 34 |
| Fig. 25.  | I-V convertor                                | 35 |
| Fig. 26.  | $\Omega$ measurements details                | 37 |
| Fig. 27.  | Temperature bridge                           | 38 |
| Fig. 28.  | Frequency measurements                       | 39 |
| Fig. 29.  | R.M.S. convertor                             | 41 |
| Fig. 30.  | Impedance convertor                          | 42 |
| Fig. 31.  | Active filter                                | 43 |
| Fig. 32.  | V-I convertor                                | 44 |
| Fig. 33.  | Interrupt controller                         | 45 |
| Fig. 34.  | Counter input control                        | 47 |
| Fig. 35.  | Counter                                      | 48 |
| Fig. 36.  | Switch decoding                              | 49 |
| Fig. 37.  | Relay/FET control                            | 51 |
| Fig. 38.  | Address decoding                             | 54 |
| Fig. 39.  | Memory                                       | 55 |
| Fig. 40.  | Display interface                            | 56 |
| Fig. 41.  | Removing the top cover                       | 60 |
| Fig. 42.  | Removing the bottom cover and front          | 60 |
| Fig. 43.  | Removing the front                           | 60 |
| Fig. 44.  | Front assembly                               | 60 |
| Fig. 45.  | Removing the thermal fuse                    | 60 |
| Fig. 45a. | Removing the thermal fuse                    | 60 |
| Fig. 46.  | Adjusting elements                           | 61 |
| Fig. 47.  | Waveforms V $\sim$ part                      | 74 |
| Fig. 48.  | Waveforms trigger-level part                 | 77 |
| Fig. 49.  | Waveform, analog part                        | 80 |
| Fig. 50.  | Waveform, ADC part                           | 81 |

|          |  |     |
|----------|--|-----|
| Fig. 51. | Waveforms, digital part                                | 82  |
| Fig. 52. | Waveforms, free-run                                    | 85  |
| Fig. 53. | Switch for high current ranges                         | 90  |
| Fig. 54. | Switch p.c.b. lay-out, front view                      | 99  |
| Fig. 55. | Switch p.c.b. lay-out, rear view                       | 99  |
| Fig. 56. | Display p.c.b. lay-out, component side                 | 100 |
| Fig. 57. | Display p.c.b. lay-out, conductor side                 | 100 |
| Fig. 58. | Adapting the mains transformer                         | 101 |
| Fig. 59. | Main p.c.b. lay-out, component side                    | 102 |
| Fig. 60. | Main p.c.b. lay-out, conductor side                    | 103 |
| Fig. 61. | Additional components on conductor side of main p.c.b. | 104 |
| Fig. 62. | Power supply circuit diagram                           | 105 |
| Fig. 63. | Analog section circuit diagram                         | 110 |
| Fig. 64. | Digital section circuit diagram                        | 111 |
| Fig. 65. | Modifications in active filter                         | 115 |
| Fig. 66. | Modifications in current source                        | 116 |
| Fig. 67. | Main p.c.b. lay-out, component side former version     | 117 |
| Fig. 68. | Main p.c.b. lay-out, conductor side former version.    | 118 |
| Fig. 69. | Additional components on conductor side of main p.c.b. | 119 |

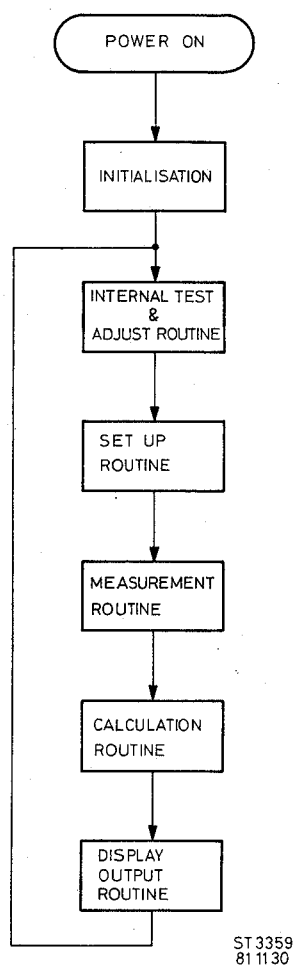

*Fig. 3. Measurement flow-chart*

The various circuit functions are now described together with explanations of basic principles as necessary.

### 1.3.2. Analog section (standard measurements)

#### 1.3.2.1. Direct voltage measurements

The unknown voltage to be measured is passed to the a.c./d.c. voltage attenuator where by means of resistors switched by relay contacts controlled from the  $\mu P$ , the attenuation factor is changed from the basic 2V range to give 20V, 200V and 2000V ranges. The 200mV range uses the 2V range attenuator position, but the ADC is switched to the 100mV position to give the necessary x10 gain factor.

From the voltage attenuator the signal is fed to an active filter, which stabilises the voltage passed to the ADC. The ADC converts this analog voltage into digital form for the  $\mu P$  to measure.



### 1.3.2.5. Resistance measurements

The unknown resistance is connected between the V- $\Omega$ -mA and 0 input terminals and supplied internally with a constant-current source dependent on the range selected. This current results in a potential difference across the resistor which (by Ohm's Law) is proportional to the resistance value. The resulting voltage signal is applied as for V measurements to the voltage attenuator, the active filter and the ADC.

The circuit functions as shown in Fig. 7.


A known constant current supplied by the programmable current source A401 (000063) flows through the unknown resistor  $R_x$ .

There are three basic ranges:

|            |   |    |     |
|------------|---|----|-----|
| $\Omega$   |   |    | 200 |
| k $\Omega$ | 2 | 20 | 200 |
| M $\Omega$ | 2 | 20 |     |

Depending on the range selected (manual or automatic selection), the currents are determined by the signals RNGC, RNGD and RNGE:

| $I_{rx}$    | RNGC | RNGD | RNGE | RANGE         | $V_x$ | INDICATION       |
|-------------|------|------|------|---------------|-------|------------------|
| 1mA         | -10V | -10V | 0V   | 200 $\Omega$  | -0,2V | 200.00 $\Omega$  |
| 1mA         | -10V | -10V | 0V   | 2k $\Omega$   | - 2V  | 2.0000k $\Omega$ |
| 100 $\mu$ A | -10V | -10V | -10V | 20k $\Omega$  | - 2V  | 20.000k $\Omega$ |
| 10 $\mu$ A  | 0V   | -10V | -10V | 200k $\Omega$ | - 2V  | 200.00k $\Omega$ |
| 1 $\mu$ A   | -10V | 0V   | -10V | 2M $\Omega$   | - 2V  | 2.0000M $\Omega$ |
| 100n A      | 0V   | 0V   | -10V | 20M $\Omega$  | - 2V  | 20.000M $\Omega$ |

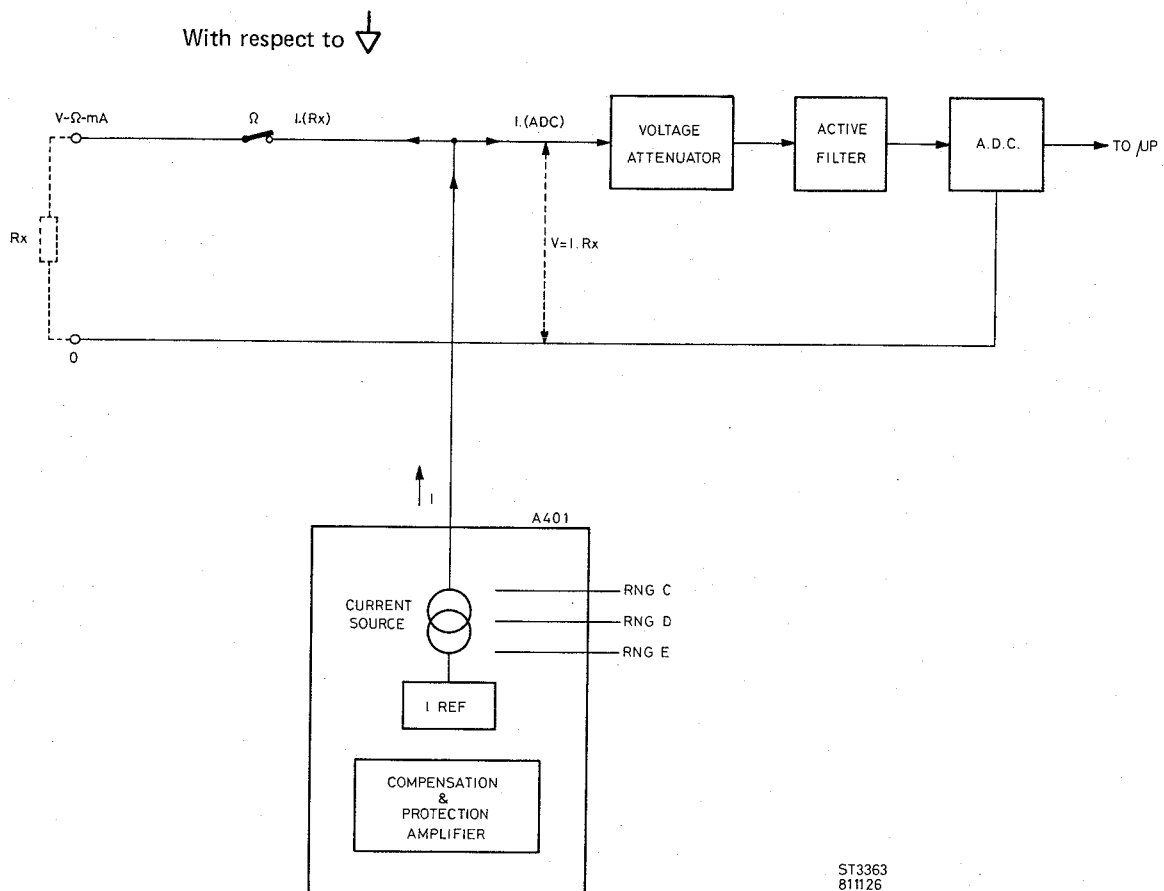

ST3363  
81126

Fig. 7.  $\Omega$  measurements

In practice, the internal resistance of the ADC (10M $\Omega$ ) also draws a small amount of current, but this is compensated by an equivalent current through the compensation amplifier circuit.

### 1.3.2.6. Diode measurements

The measurement of diodes and semiconductor junctions is performed in the same way as for resistance measurements in the  $2k\Omega$  range.

The value displayed is the equivalent of the voltage measured in the forward or reverse direction across the diode junction in the 2V range; i.e. the constant current multiplied by the diode resistance.

For diode measurements the constant current derived from the OQ0063 is 1mA (see previous section).

### 1.3.2.7. Temperature measurements


For temperature measurements, a constant current from the A401 current source flows through the resistance element of the temperature probe to produce a voltage drop across it. This resistance is connected as one of the ratio arms of a Thomson bridge. The voltage drop is an indication of the temperature of the Pt-100 probe ( $-50^{\circ}\text{C} \dots +200^{\circ}\text{C}$ ) and is applied to the ADC for measurement.

#### circuit element principles:

##### Thomson bridge:

The temperature probe (resistance thermometer) is included in one arm of a balanced resistive 4-wire bridge. The balancing potentiometer is R708; the slider connects the output of the bridge directly to the ADC.

In this configuration, the small resistances of the connecting leads are counter-acted; they are either in series with the current source or in series with the much higher resistance arms of the bridge, so their effect is negligible.

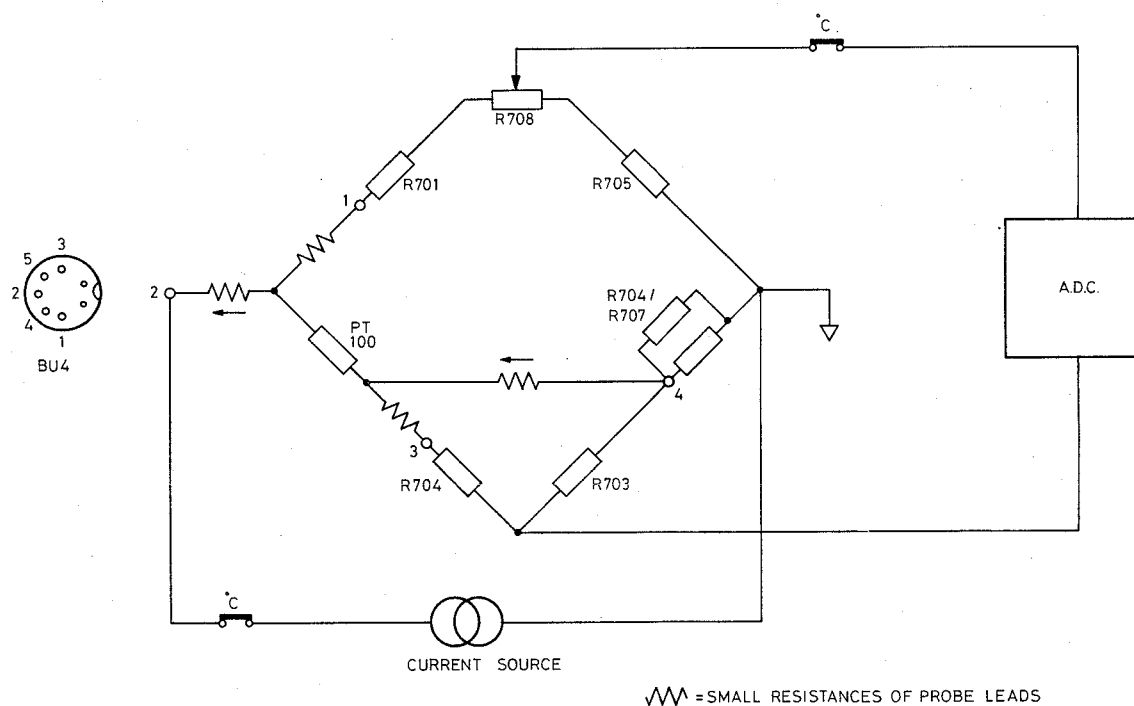

ST3364

Fig. 8. Thomson bridge

### 1.3.3. Analog section (extended measurements).

#### 1.3.3.1. Frequency measurements

The unknown frequency source to be measured is applied to the V and 0 input terminals. After suitable attenuation as necessary in the a.c. voltage attenuator and impedance conversion (to match the low-impedance comparator) the signal is fed to one input of the comparator A502.

The trigger level input selected by the front-panel thumbwheel control is applied via an impedance convertor to the other input of the comparator.

The trigger level is set to a value lower than the amplitude of the signal to be measured. During counting, each time the amplitude of the signal from the input exceeds the selected trigger level, the comparator gives an output pulse to the counter. The internal counter of the  $\mu P$  is also used as an overflow counter for frequency measurements.

Triggering is also possible on the negative-going pulses of a signal by using the  $+/-$  switch to reverse the polarity of the trigger level.

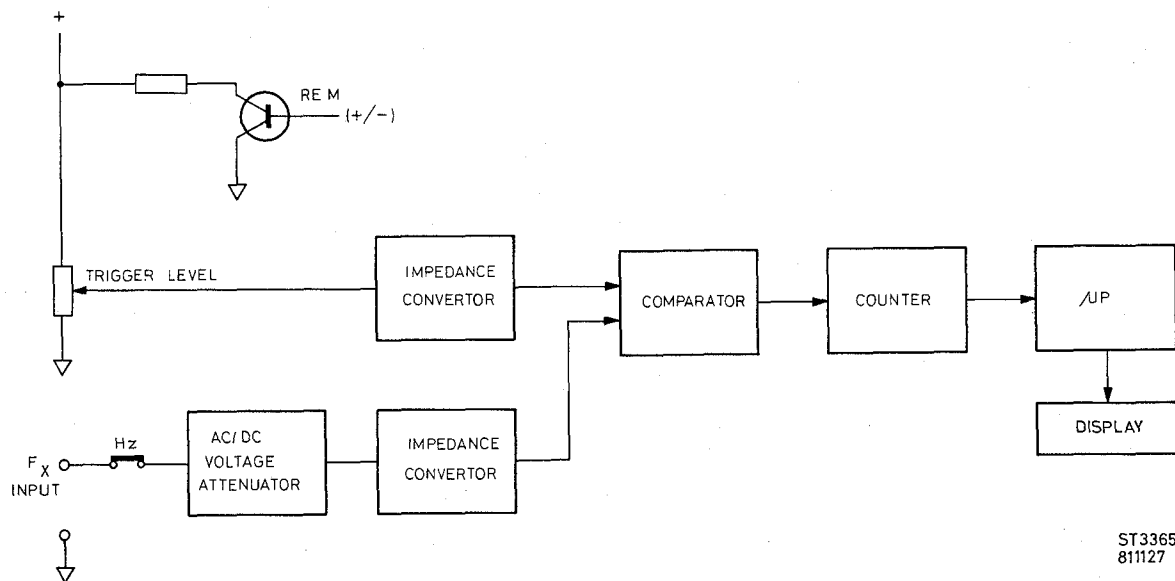


Fig. 9. Block diagram-frequency measurements

### 1.3.3.2. Time measurements

Time measurements of signals are determined in conjunction with the trigger level function in a similar way to frequency measurements.

The input signal is applied via the voltage attenuator to one input of the comparator A502. The selected trigger level is applied to the other input.

When the amplitude of the signal exceeds that of the selected trigger level, an output pulse from the comparator is applied direct to the microprocessor.

Two trigger modes are possible for the time measurement function:

In the normal trigger mode, signals that are higher or lower than the circuit zero (0 terminal of PM2521) can be triggered with the + or – trigger level respectively.

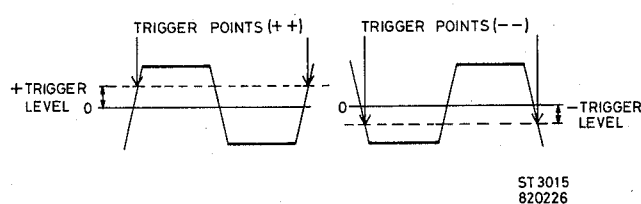


Fig. 10. Normal trigger mode

In the special trigger mode, using Data Hold Probe PM9263, the PM2521 triggers in the + level mode on positive and negative crossings of the trigger level.

Conversely, in the – level mode it triggers on negative and positive crossings of the trigger level.

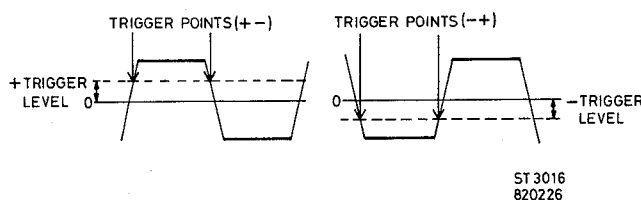


Fig. 11. Special trigger mode

### 1.3.3.3. Trigger measurements

In addition to time and frequency applications, the trigger level function permits other selective measurements to be made.

To measure the peak voltage of an input signal the front-panel trigger level control is rotated until the GATE indicator display is triggered either on or off. At this switch-over point the voltage indicated on the display represents the amplitude or peak voltage of the input signal.

### 1.3.4. Analog section (multifunction circuits)

#### 1.3.4.1. R.M.S. convertor

Basically, the circuit is an a.c. to d.c. convertor built around the OQ0061 IC, which consists of three parts:

- A voltage-to-current convertor with two selectable input ranges
- A current rectifier with offset cancellation
- A log-antilog calculating R.M.S circuit

#### Circuit element principles:

As shown in Fig. 12, the basic V-to-I convertor consists of two input devices T1, T2 fed from two equal current sources and a conversion resistor R. The voltage  $V (= V_{in1} - V_{in2})$  developed across R gives a current  $I = \frac{V}{R}$  through R. This current increases the emitter current of T1 and decreases the emitter current of T2.

This results in collector output currents of  $I + \Delta I$  for T1 and  $I - \Delta I$  for T2.


Then the current is rectified to give a signal proportional to the R.M.S. value of the input signal  $V_{in}$ .

In practice, a more complex circuit is used to compensate for the differences in base-emitter currents.

The two equal currents  $I$  are derived from a current bias source.

For electronic range selection, two V-to-I convertors are used with common input and output devices but with separate conversion resistors.

The selection circuit for these has a selection input and a selection reference input that can be connected to various d.c. levels to give more control flexibility.

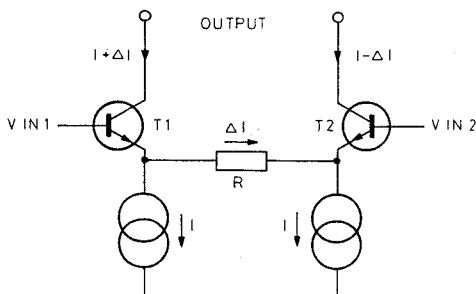

ST3366  
811126

Fig. 12. Basic V-to-I convertor

#### 1.3.4.2. Impedance convertor

The impedance convertor converts the high input impedance signal to a low impedance to match the input of the R.M.S. convertor.

This impedance matching also applies to the input of the trigger level comparator, as otherwise it would draw current from the signal.

#### 1.3.4.3. Active filter

Filters placed in feedback loops around an amplifier stage are referred to as active filters. They have sharper transition between the pass-band and stop-band than their passive counterparts, inductors are not needed, and small signals are not further attenuated.

In this application, good filtering is necessary especially when measuring small a.c. signals.

In this circuit, the basic active filter elements are as shown:

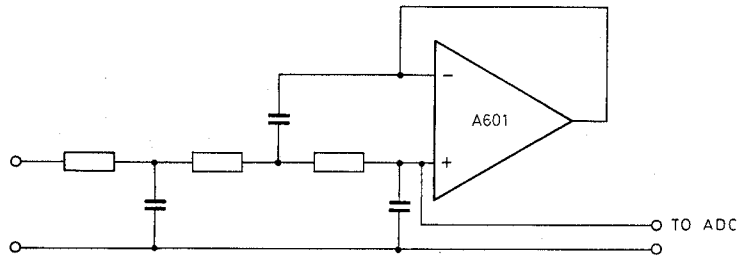


Fig. 13. Low-pass active filter

ST3367  
820503

In the PM2521, the track shielding network on the filter output keeps the two signal lines that are connected to it at the same potential; i.e. prevents tracking across the p.c.b. insulation.

#### 1.3.4.4. Analog-to-digital Convertor

The ADC converts the analog signal into a digital signal by the 'delta-modulation' principle.

Basically, the delta-modulation ADC counts the difference in the time taken to charge and to discharge a capacitor about a fixed level, over a fixed period of time.

The number of charge/discharge cycles within this fixed time depends on the charge/discharge current which is made proportional to the unknown input voltage to the ADC.

Therefore, the number of pulses counted within a fixed measuring period is proportional to the unknown voltage  $V_x$ .

##### Circuit principles:

The capacitor is charged by a constant reference current added to the constant current derived from  $V_x$  to give  $(I_{\text{ref}} + \Delta I)$ .

The capacitor is discharged by the constant reference current minus the constant current derived from  $V_x$  to give  $(I_{\text{ref}} - \Delta I)$ .

Each value of  $V_x$  has a certain number of charge/discharge cycles within the fixed period of a specific number of clock-pulses counted by a timer.

The fixed level between charging and discharging is determined by the voltage between the inputs of a comparator ( $\approx 0V$ ) a flip-flop and clock signals.

A simple example of the principle is shown in Fig. 14.

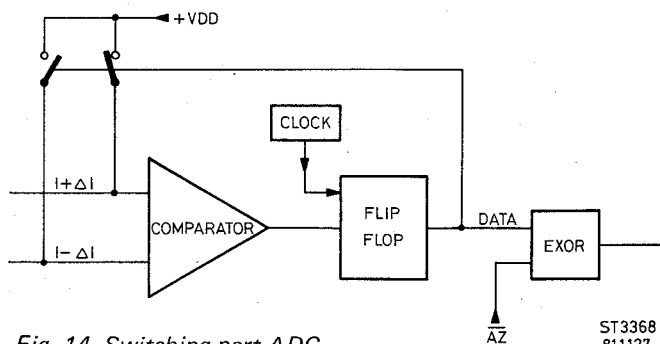


Fig. 14. Switching part ADC

ST3368  
811127

When the fixed level is reached, the comparator switches and on receipt of the next clock-pulse the flip-flop changes its state. The flip-flop output is fed back to control the switches that connect the charging current  $(I + \Delta I)$  and the discharging current  $(I - \Delta I)$  to the capacitor. The ADC output (DATA) from the flip-flop is a square-wave, the duty-cycle of which is determined by the charge/discharge times. This is routed to a counter together with the clock pulses.

During the logic 1 state of the data signal the clock pulses are counted.

To obtain automatic zero, i.e. to counteract drift and internal offset, one complete measurement consists of two fixed measuring periods. This auto-zero function is carried out with the aid of the AZ and  $\overline{AZ}$  signals from the control logic.

When a measurement is started (1st. measuring period), the unknown voltage is supplied to the + input of the OQ0064 while the - input is connected to zero. The signal which is converted will be  $+V_{in} + V_{off}$ ; i.e.

$I + \Delta I_1 + \Delta I_2$  ( $\Delta I_1$  is caused by the input voltage.  $\Delta I_2$  is caused by the offset).

In the second measuring period, the input signal is connected to the - input while the + input is now connected to zero. This signal which is converted, will be  $-V_{in} + V_{off}$ ; i.e.  $I - \Delta I_1 + \Delta I_2$  ( $\Delta I_1$  is caused by the input voltage,  $\Delta I_2$  is caused by the offset).

The results of the two measurements are subtracted and divided by two:

$$\begin{array}{rcl}
 I + \Delta I_1 + \Delta I_2 & \dots\dots & \text{1st. measurement} \\
 I - \Delta I_1 + \Delta I_2 & \dots\dots & \text{2nd. measurement} \\
 \hline
 2\Delta I_1 & \text{which divided by two} & = \Delta I_1 \text{ the counted value for display.}
 \end{array}$$

### 1.3.5. Control section (Refer to Fig. 18.)

#### 1.3.5.1. Microprocessor 8035

The integrated circuit microprocessor 8035, one of the MCS-48 family of single-chip microcomputers forms the basis of the control section of the PM2521 automatic multimeter. The 8035 is the equivalent of the 8048 except that it has no internal program memory.

However, it uses two externally-located read-only memories (2kx8-bit EPROM's) with address/data decoding facilities for program instruction storage.

In addition to the true bidirectional 8-line databus, the 8035 has two quasi-bidirectional 8-bit data ports for extra address lines and communication with the external circuits in the PM2521. Data written to these ports remains unchanged until rewritten. Each line is able to serve as input or output, or both, even though outputs are statically latched.

The internal data memory is a random-access store of 64x8-bits, indirectly addressable through the RAM pointer register.

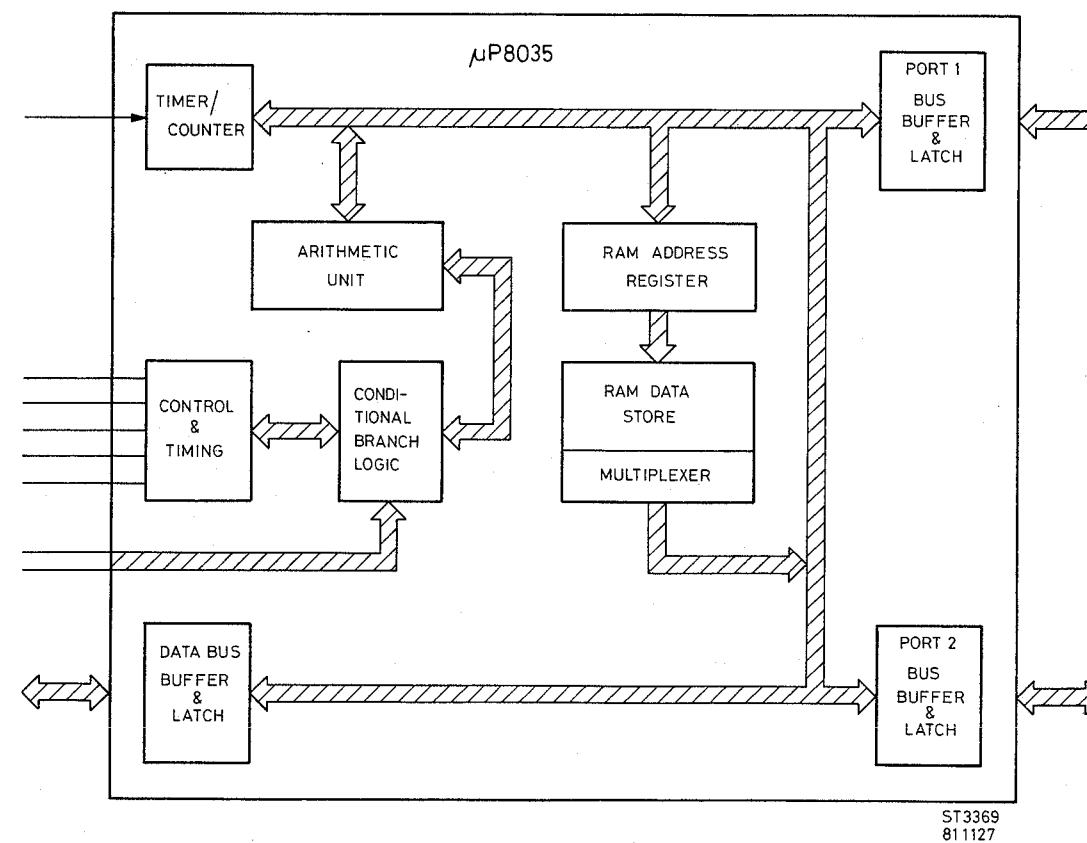


Fig. 15. Basic functional blocks of 8035 $\mu$ P.



The following part gives an indication of which pins are used in the PM2521.

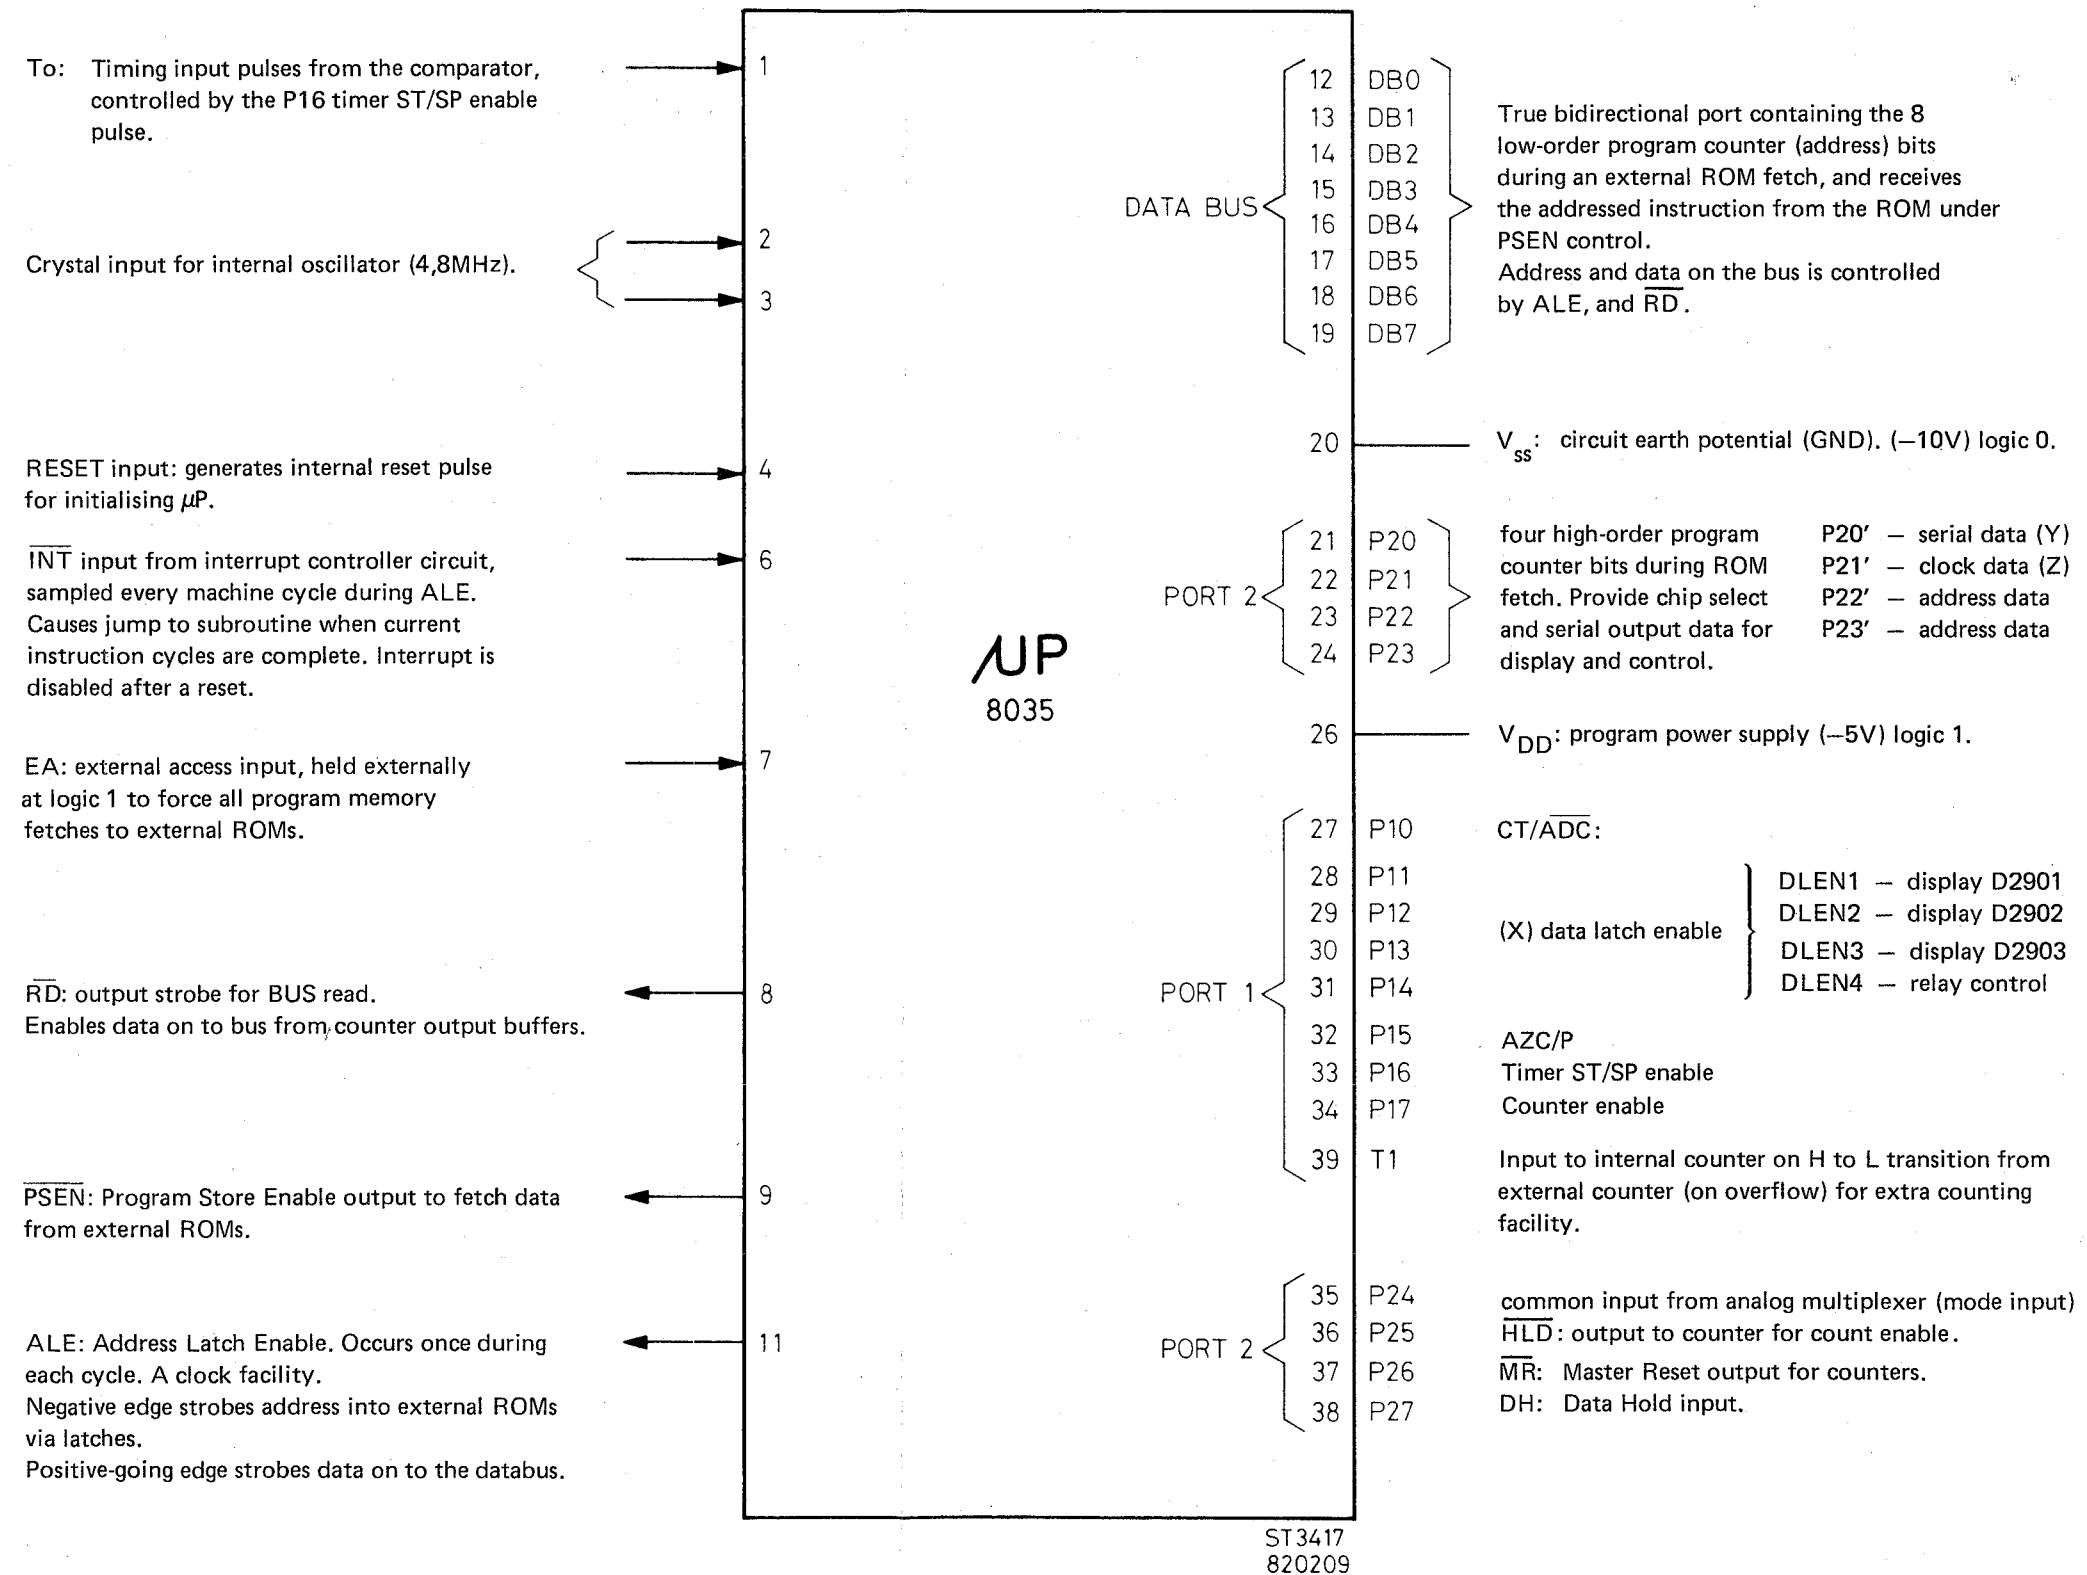


Fig. 16. Pin allocation & functions of 8035 $\mu P$

### 1.3.5.2. Interrupt controller

The interrupt controller activates the microprocessor interrupt input facility to allow certain subroutines to be performed either by manual or automatic control. The control inputs are interrupt pulses applied from either one of the four front-panel mode switches or from timing pulses generated from the comparator output in the timing mode.

#### a) Mode switch interrupts

The logic 0 required for interrupt is derived from one of the four mode pushbuttons. It provides for: UP and DOWN ranging in the manual mode, AUTO ranging (except in timer function).

- Trigger mode polarity selection
- Selecting relative reference with ZERO SET in V..., dB,  $\Omega$ , and  $^{\circ}\text{C}$  range
- Manual STOP/RESET in timing mode

The functional circuit for interrupts given by the mode switches is shown below:

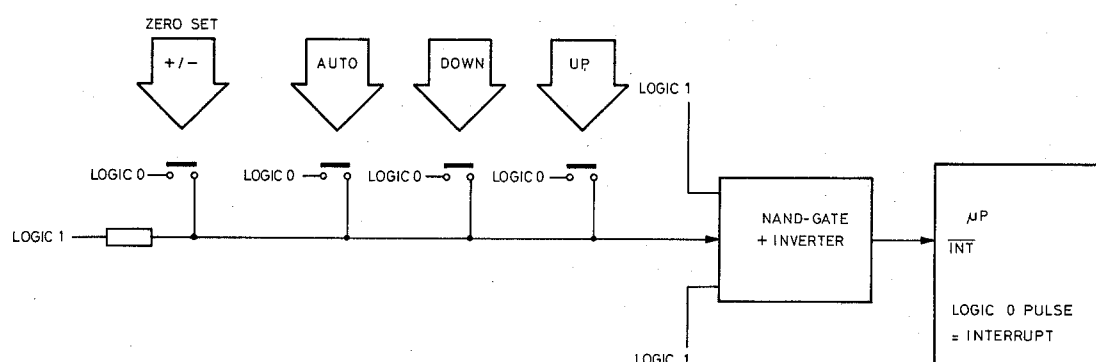


Fig. 17. Mode switch interrupts

ST3370  
811127

Normally the three inputs to the NAND-gate are at logic 1, and the double inversion of the NAND-gate + the inverter gives a logic 1 at the  $\overline{\text{INT}}$  input of the microprocessor; i.e. no interrupt is given.

However, when one of the four pushbuttons is depressed momentarily, a logic 0 pulse is given to the middle input shown, which results in a logic 0 being applied to the  $\overline{\text{INT}}$  input, the condition for interrupt.

#### b) Trigger level interrupts

In the timing measurement mode, interrupts are generated by the trigger level circuit via the comparator for starting and stopping the  $\mu\text{P}$  internal counter during time measuring.

In the **normal trigger mode**, by the use of delays and exclusive-OR gating, logic 0 outputs are generated on the positive-going crossings of the trigger level; i.e. an interrupt is given at the leading edges of successive comparator output pulses to start and stop the  $\mu\text{P}$  counter.

In the **special trigger mode**, a logic 0 applied from the data hold probe switch enables timing of the duty-cycle of an input by stopping the timing period at the negative crossings of the trigger level. In this case, the leading edge of the comparator output pulse starts the  $\mu\text{P}$  counter and the trailing edge stops it.

When the negative trigger level is selected, the start/stop polarities will be the reverse.

### 1.3.5.3. Counter

The counter receives logic input pulses from the ADC output, or from the comparator output when measuring in the frequency mode.

Selection between the two inputs is made in the counter input control stage by a control signal from the microprocessor.

The counter itself consists of two high-speed 4-bit binary counters in cascade which give an 8-bit output via buffers to the databus.

When measuring frequency, additional counting capacity is provided by the internal counter of the microprocessor.

#### a) Counter input control

The data input from the ADC is the varying duty-cycle pulses that represent the charge-discharge cycle of the integrator capacitor. In the counter the result of the first measuring period is obtained; i.e. the number of clock-pulses passed during the charge parts of the cycles. At the end of this period the  $\mu P$  timer carry signal AZ changes the state of the control logic and also reverses the input voltages to the ADC to compensate for any zero drift. A second measuring period follows and the resultant measurement is the mean of the two periods.

The data input from the comparator consists of logic pulses representing the frequency measurement. These are gated to the counter when a logic 1 is sent from the  $\mu P$  on the CT/ADC line. In this measuring function, the data input path from the ADC is inhibited.

#### b) Counter output control

Whatever input is selected, the counter reads in the pulses after it is reset and enabled by the  $\mu P$  control. The 8-bit output is connected to output buffers and applied to the databus when the counter output is enabled by the microprocessor.

In the frequency measuring mode the most-significant output bit from the counter is routed to the T1 input of the microprocessor to use the internal counter as extra capacity in the event of overflow.

### 1.3.5.4. Analog control

The analog control section can be divided into two parts:

- The inputs to the microprocessor that indicate the status of the analog section
- The output circuits of the  $\mu P$  that control the analog section according to the settings of the function selector and the inputs from the mode switches and signals to be measured.

#### a) Control inputs

The various inputs to the control section provide the means for the  $\mu P$  to sense the control requirements for a particular measurement situation.

These inputs include:

- The function selector switch position
- The manually selected mode switches
- The counter output (display and status condition, e.g. overload)
- The ROM program, or software control inputs

The mode switches and the function selector are scanned under software control, from the  $\mu P$  and the ROM program, in a multiplexer stage and the output conditions detected are fed serially to the  $\mu P$  as logic control signals.

### b) Control outputs

The microcomputer controls the analog section, in accordance with the input information received, by means of reed relays and FET switches. The output data is clocked into a relay control unit which supplies function and range information to the analog section for switching purposes. Additional outputs are set/reset commands for the timing measurements, trigger level, dB conversion, and ZERO SET command for the relative reference value.

#### 1.3.5.5. ROM's and address/data decoding

The program memory for the microprocessor is stored in two 2k ROM memories.

During an instruction cycle, data is fetched from the ROM's by the  $\mu P$ .

This requires that the ROM locations are first addressed whereupon the ROM responds by sending the instruction or data to the  $\mu P$ .


The addresses for the ROM's are decoded from data sent out on the 8-bit databus lines and the high-order program lines from port 2 of the microprocessor. These additional program lines are used to extend the address capability of the bus.

The decoding is achieved by bistable latches controlled by the ALE (address latch enable) output of the  $\mu P$ .

The data output from the ROM's is controlled by the  $\overline{PSEN}$  (program store enable) signal from the  $\mu P$ , which is gated to give a chip select signal to either ROM depending on the stated of the signal line P23.

#### 1.3.6. Display section

The display section of the PM2521 contains three LCD (Liquid Crystal Display) interface integrated circuits that accept serially clocked output data from the  $\mu P$  to drive the display.

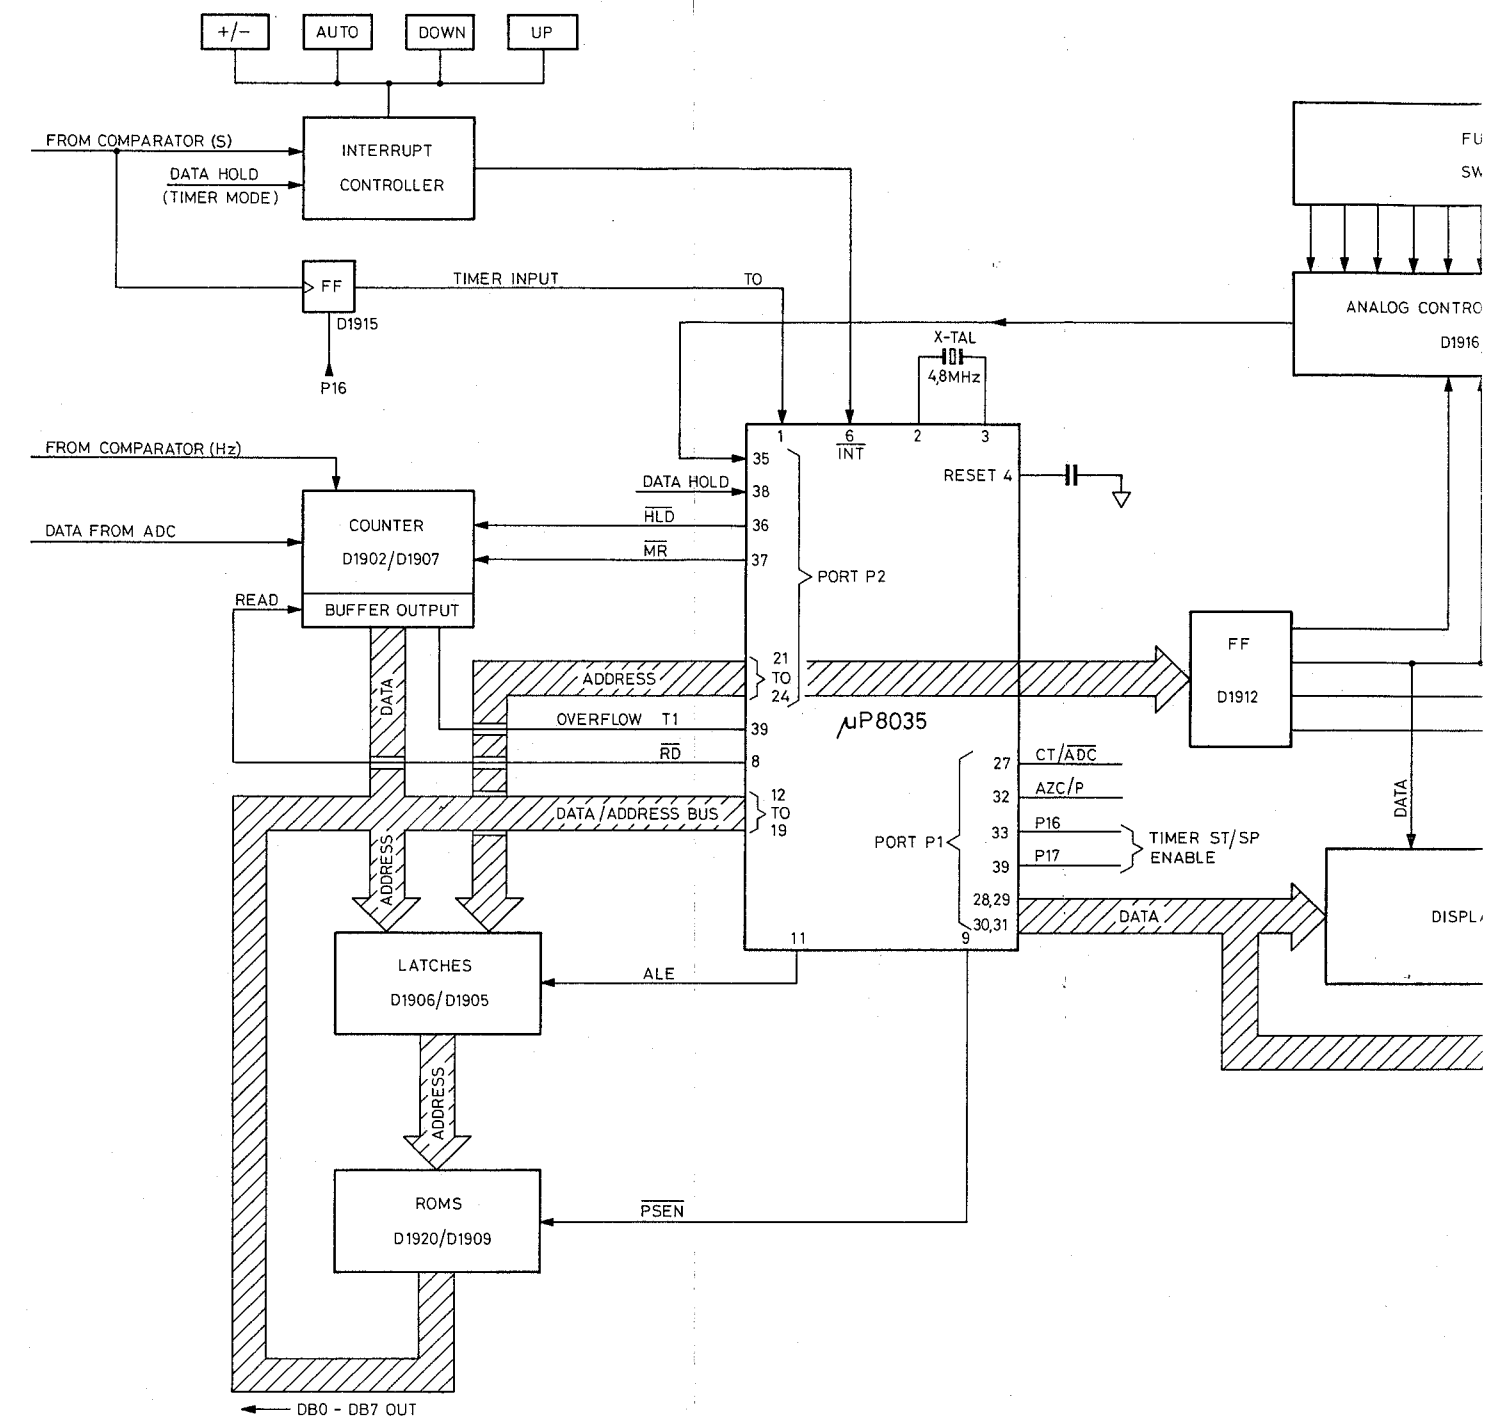

ance with the input information received, by  
s clocked into a relay control unit which supplies  
switching purposes. Additional outputs are  
level, dB conversion, and ZERO SET command


2k ROM memories.  
by the  $\mu$ P.  
reupon the ROM responds by sending the

on the 8-bit databus lines and the high-order  
tional program lines are used to extend the

e ALE (address latch enable) output of the  $\mu$ P.

(program store enable) signal from the  $\mu$ P, which  
on the stated of the signal line P23.

aid Crystal Display) interface integrated circuits  
the display.

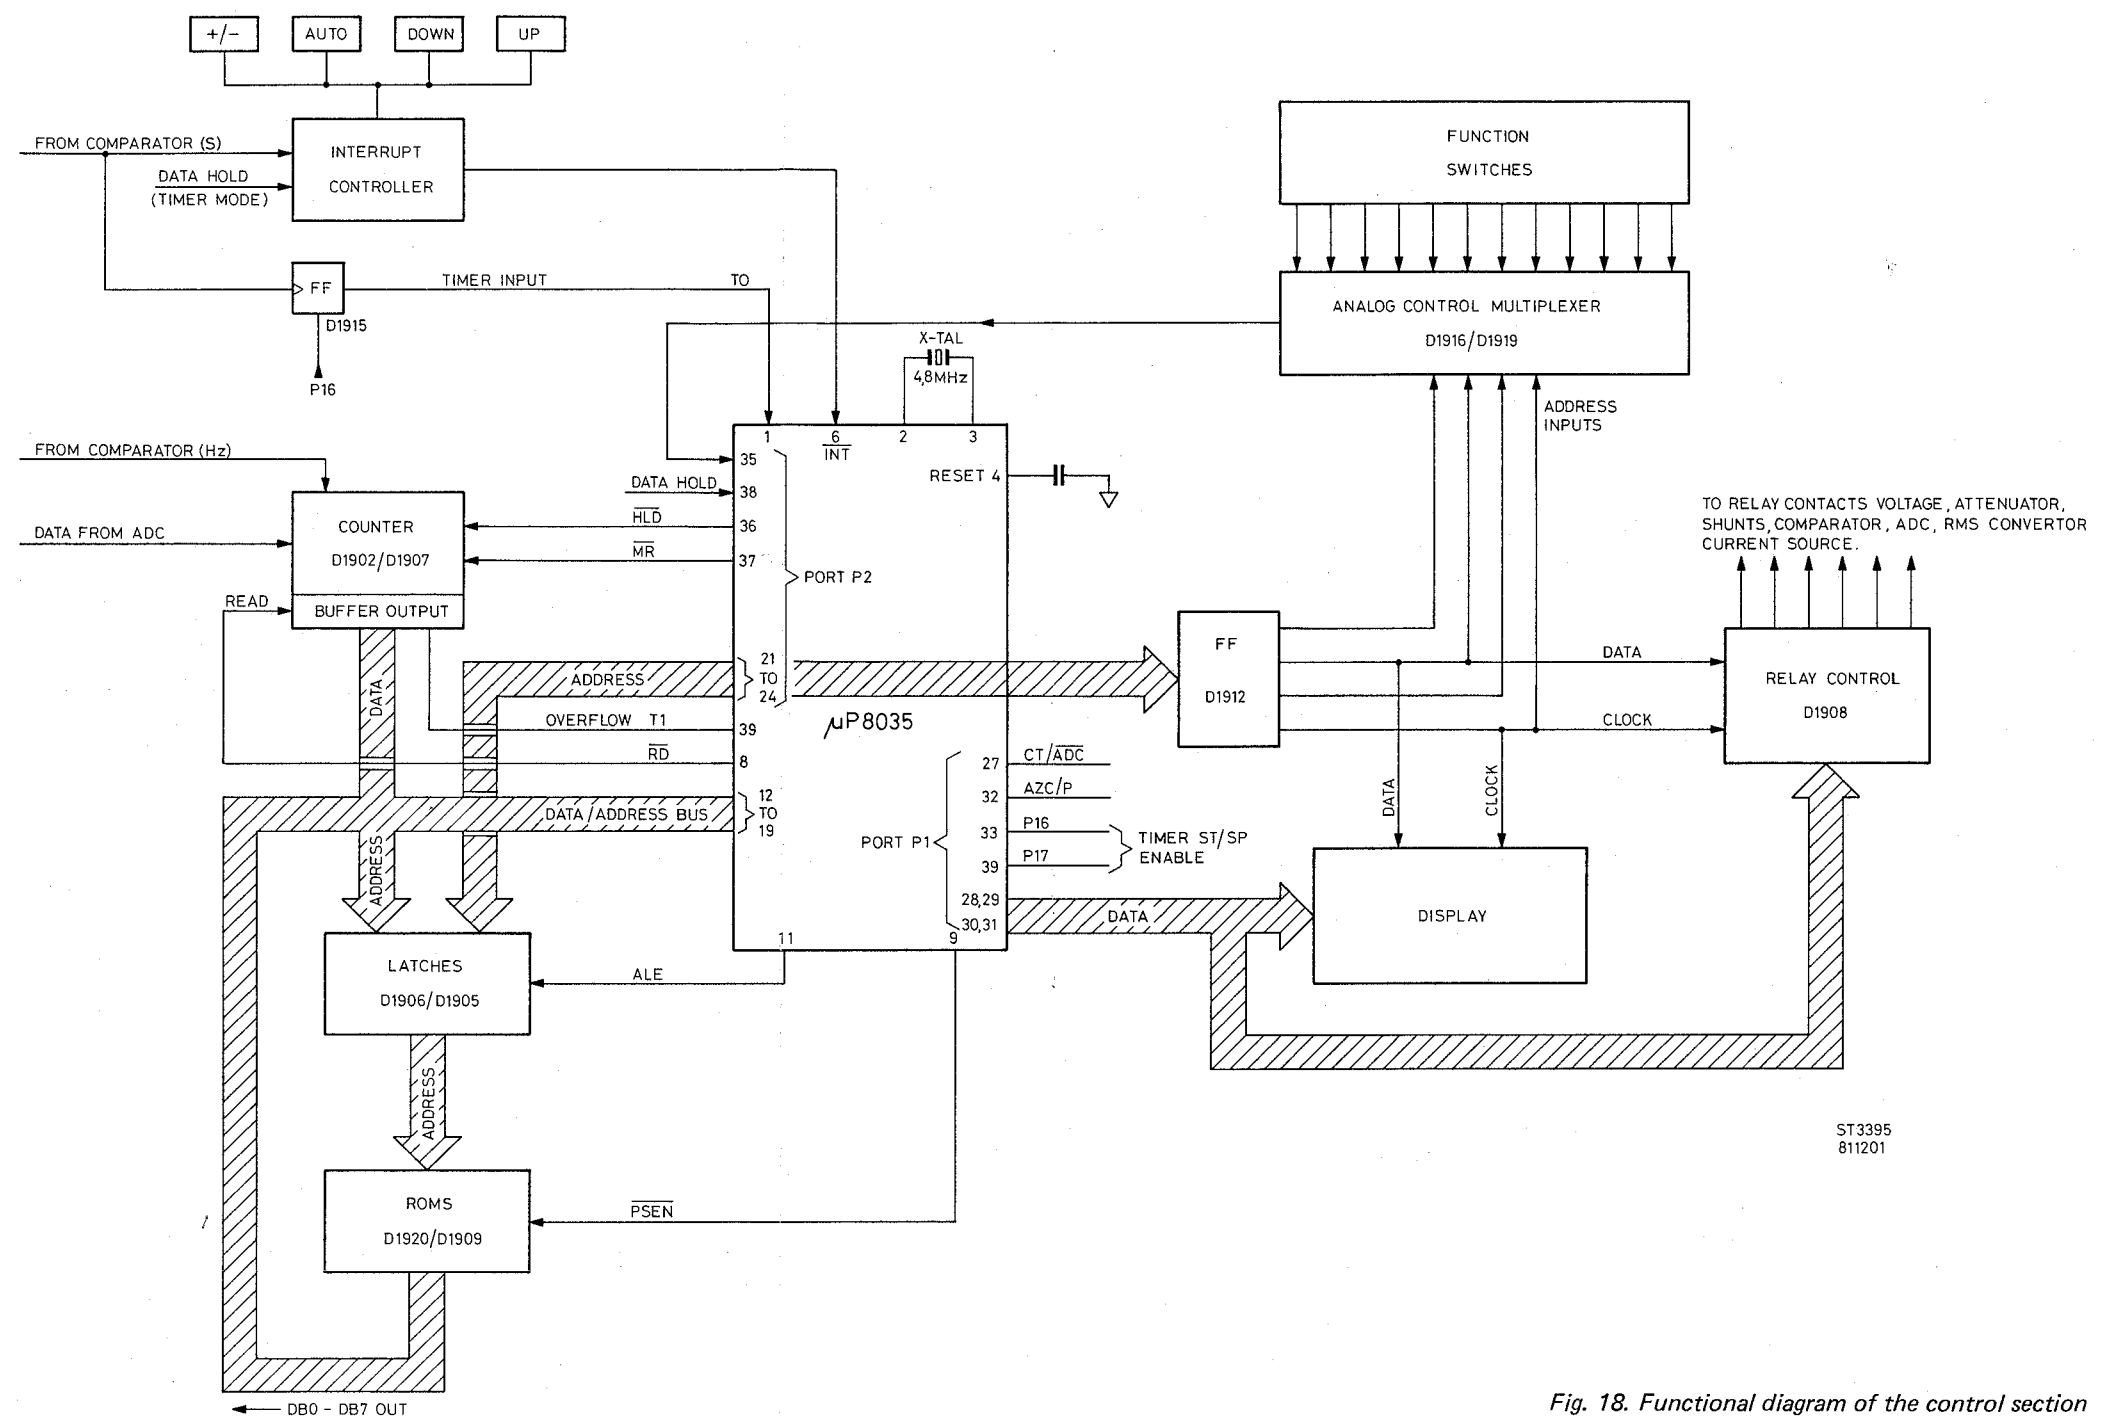

ST3395  
811201

Fig. 18. Functional diagram of the control section

#### 1.4. DETAILED CIRCUIT DESCRIPTION

##### 1.4.1. Measuring sequence

After POWER ON, the PM2521 carries out some routines to measure and evaluate the input signals applied. The software applications are briefly indicated by the following sequence.

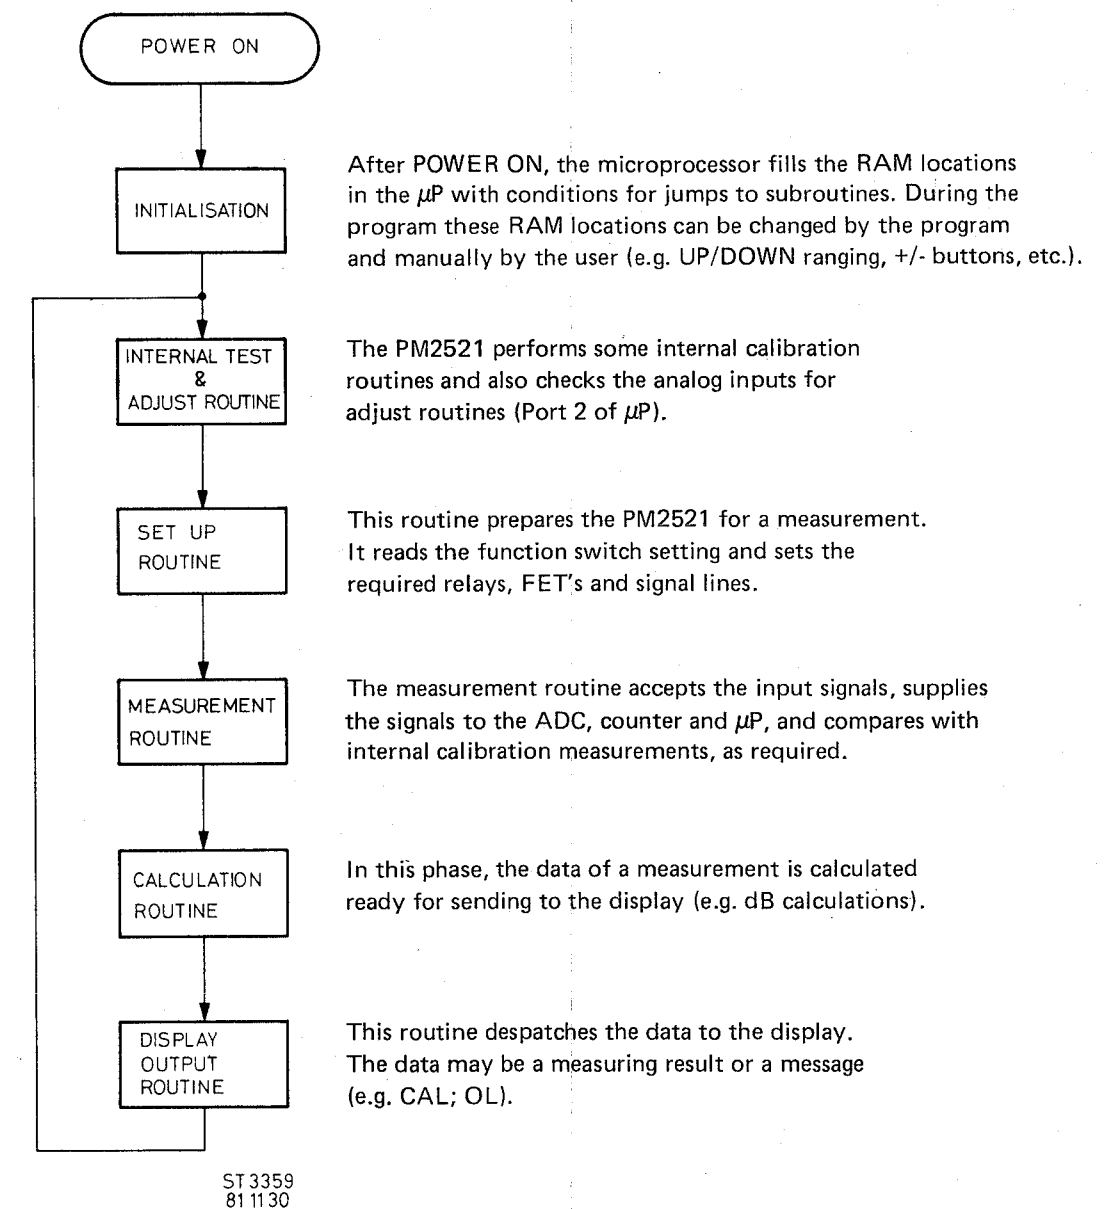


Fig. 19. Measuring sequence

### 1.4.1.1. Initialisation

In this phase the  $\mu$ P fills the internal RAM locations as an instruction reference for the  $\mu$ P. For example, if the AUTO bit is set, then the  $\mu$ P knows that AUTO-RANGING is selected.

The values of a measurement or a calibration measurement are also saved in these registers.

#### PROGRAM MEMORY CONTENTS (for example)

| ADDRESS<br>DECIMAL | BIT POSITION                |      |        |         |          |             |             |                         |      |  |  |  |  |  |
|--------------------|-----------------------------|------|--------|---------|----------|-------------|-------------|-------------------------|------|--|--|--|--|--|
|                    | 7                           | 6    | 5      | 4       | 3        | 2           | 1           | 0                       |      |  |  |  |  |  |
| 20                 | ~                           | °C   | Ω      | IT<br>V | OUT<br>A | CALC<br>s   | MEAS<br>Hz  | SUP<br>Trigger<br>level | ZMON |  |  |  |  |  |
| 21                 |                             |      |        |         |          |             |             |                         | YFU  |  |  |  |  |  |
| 22                 |                             |      |        |         |          |             |             |                         | YRM  |  |  |  |  |  |
| 23                 |                             |      |        |         |          |             |             |                         |      |  |  |  |  |  |
| 24                 | M7                          | M6   | M5     | M4      | M3       | Mauto<br>M2 | Rdown<br>M1 | Rup<br>M0               | YRSC |  |  |  |  |  |
| 25                 |                             |      |        |         |          |             |             |                         | YMN  |  |  |  |  |  |
| 26                 |                             |      |        |         |          |             |             |                         | YDM  |  |  |  |  |  |
| 27                 |                             |      |        |         |          |             |             |                         |      |  |  |  |  |  |
| 28                 | dB                          | gate | Zero S | Lobat   | CAL      | OL          |             |                         |      |  |  |  |  |  |
| 29                 |                             |      |        |         |          |             |             |                         |      |  |  |  |  |  |
| 2A                 | B7*****BINARY RESULT*****B0 |      |        |         |          |             |             |                         |      |  |  |  |  |  |
| 2B                 | B15*****B8                  |      |        |         |          |             |             |                         |      |  |  |  |  |  |
| 2C                 |                             |      |        | POS     |          |             |             | ***B16                  |      |  |  |  |  |  |


ZMON = Monitor (which routine?)

IT = initialisation  
 OUT = display output routine  
 CALC = calculation routine  
 MEAS = measurement routine  
 SUP = set up routine

YFU = Function (which function?)  
 YRM = Range meter (which range ?)  
 YRSC = Range control status (up,down or auto ranging)  
 YMN = Measurement number  
 YDM = Display mode (which symbol to the display?)

### 1.4.1.2. Internal Test and Adjust Routine

After initialisation, the PM2521 performs two series of measurements as shown in the following flow-chart.

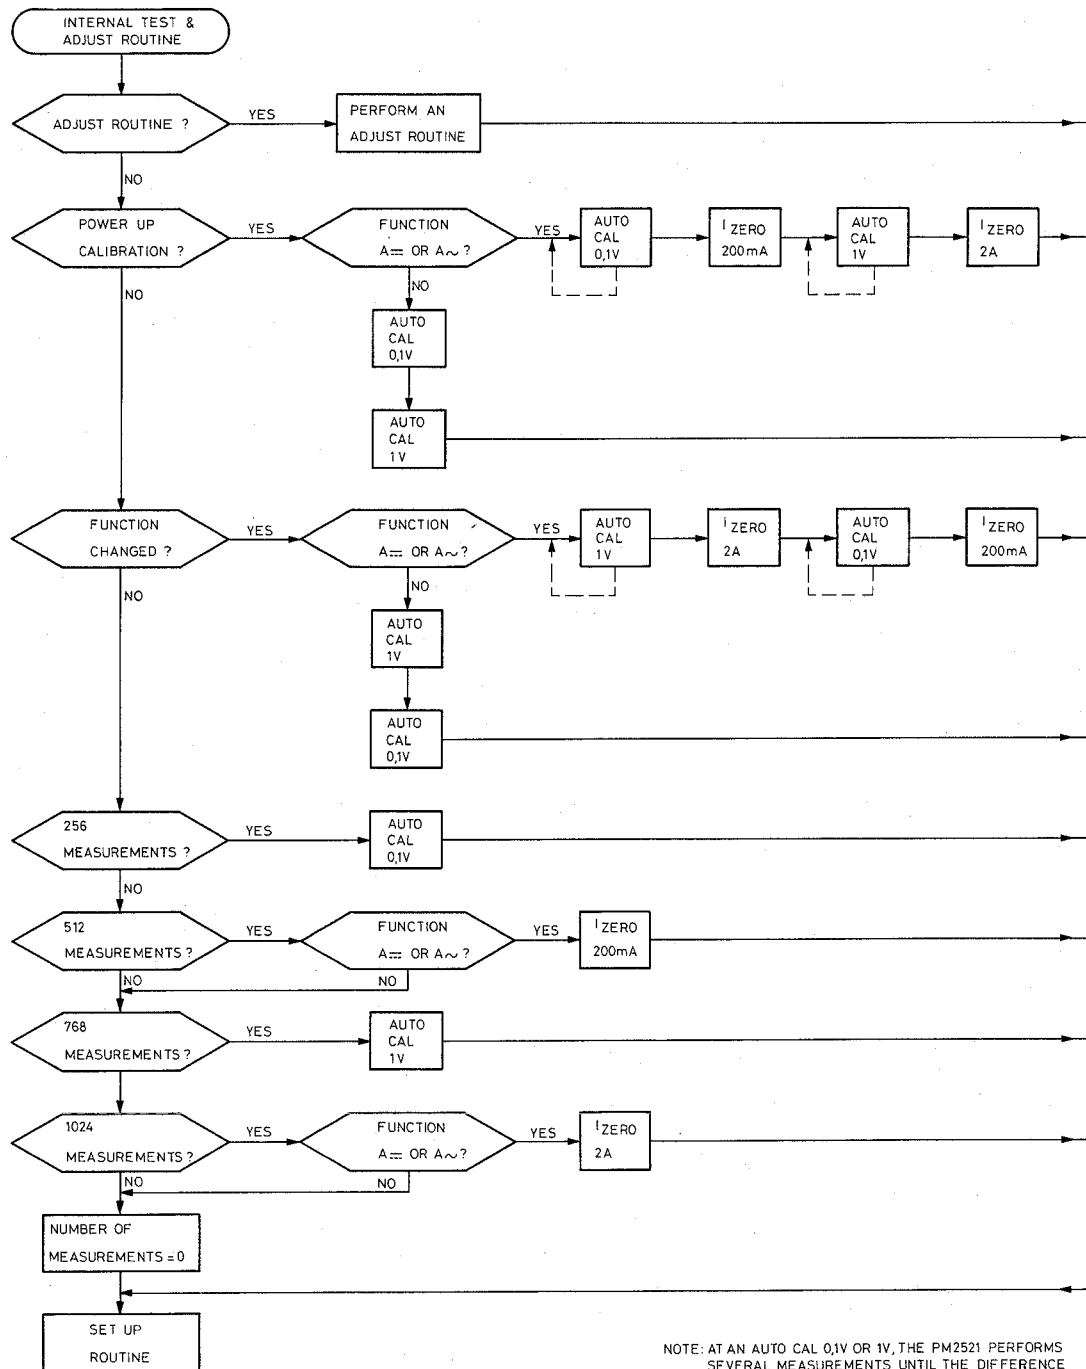

NOTE: AT AN AUTO CAL 0,1V OR 1V, THE PM2521 PERFORMS SEVERAL MEASUREMENTS UNTIL THE DIFFERENCE BETWEEN TWO MEASUREMENTS IS  $\leq 1$  DIGIT.

Fig. 21. Flow-chart internal test and adjust routine

ST3372  
811130

- a) An AUTO CAL 0,1V measurement
- b) An AUTO CAL 1V measurement

When making the AUTO CAL 0,1V measurement the  $\mu P$  programs the OQ0063 so that a current of  $100\mu A$  flows through R606, which causes a voltage drop of  $100mV$  across it ( $100\mu A \times 1k\Omega$ ). This voltage is supplied to the ADC and is counted by the  $\mu P$ , stored in a RAM location and used as reference for a normal measurement.



When making the AUTO CAL 1V measurement, the  $\mu P$  programs the OQ0063 to give a current of 1mA through R606. The resulting 1V across R606 is also counted and stored in a RAM as a reference for further measurements. In this case, a different sensitivity of the ADC is chosen (i.e. 1V).

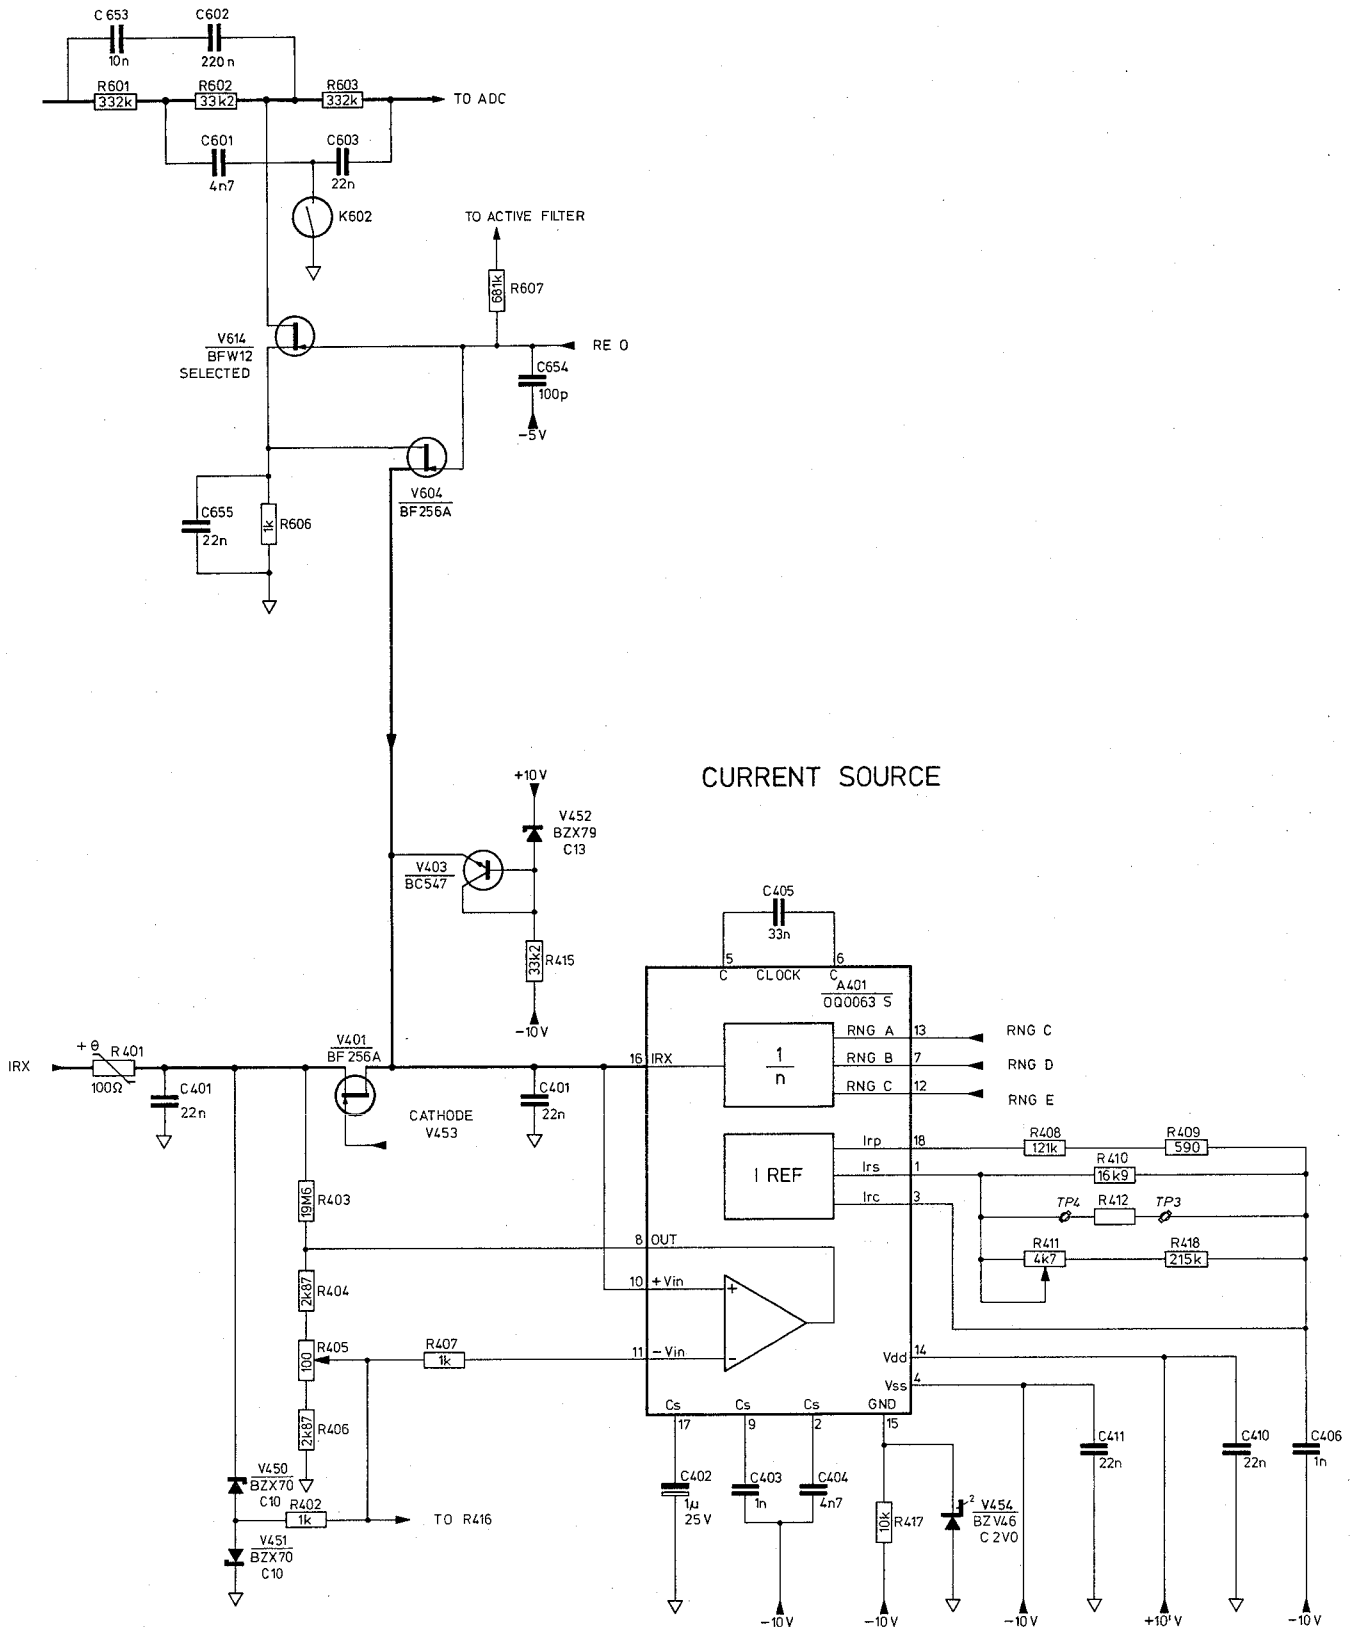


Fig. 20. Calibration routine

In the function selector positions A  $\rightarrow$  or A  $\sim$  two offset measurements are performed.

- a) A 200mA I zero measurement (offset)
- b) A 2 A I zero measurement (offset)

The PM2521 measures the offset in the I to V convertor and this is subtracted from the result of a normal measurement in these two ranges.

All the above measurements are completely controlled by the microprocessor software. The following sub-routines are used for internal test and adjust routines:

- Comparison routine
- Fetch adjustment number routine
- Fetch calibration value routine

Also used as subroutines:

- The set-up routine
- The measuring routine
- The calculation routine
- The display output routine

#### **Comparison routine:**

Here the contents of a calibration measurement are compared with a normal measurement. If the contents of both are equal then an internal bit is set.

#### **Fetch adjustment number routine:**

The  $\mu$ P scans port P11 and reads the number of the adjust mode.

k = adjust mode 1      \* blinks  
 Z = adjust mode 2  
 S = adjust mode 3

#### **Fetch calibration value routine:**

Fetches the calibration value (i.e. the measuring time) from the low calibration value register and the high calibration value register and transfers it to the binary result register.

#### 1.4.1.3. Set up routine

The set up routine uses the following subroutines:

##### **Start-up routine:**

This routine checks if the POWER ON bit is set and if so, it sets the relays for the internal calibration.

##### **Refresh routine:**

This routine reads the function switch until a function is located and then updates the function register. Then it reads the A-bus switch, the automatic bit, the LO BAT input and the DATA HOLD input. It also checks if the function switch has been changed and if so, it makes the necessary calibration measurements.

##### **Range routine:**

When an UP or DOWN ranging button is depressed a bit is set in the range control status register. This routine checks this bit and performs the required ranging.

##### **Set up execution routine:**

This routine shifts the data for the relay settings in the D1908 (SAA1060) and also controls the timing for shifting.

##### **Check routine:**

The check routine examines the Rdown and Rup bits in the range control status register. If the range  $>$  range max. then the instrument must range up. If the range  $<$  range min. then the instrument must range down. It also ensures that in the TRIGGER LEVEL function only manual ranging is allowed.

#### 1.4.1.4. Measurement routine

The measurement routine uses the following subroutines:

##### **ADC measuring time routine:**

This routine is responsible for the whole timing of the ADC (see QQ0060 and QQ0064).

##### **Counter measurement routine:**

The frequency measurements are performed without the ADC. This routine controls the circuits that in turn control the frequency functions.

##### **Timer routine:**

For timing measurements in position s, this routine controls the timing functions. It checks for the SET/RESET pulse and the STOP bit.

##### **BCD conversion routine:**

The value counted is converted to BCD information by this routine.

#### 1.4.1.5. Calculation routine

The calculation routine uses the following subroutines:

##### Fast measurement calculation routine:

After a fast measurement, the PM2521 performs a fast calculation for the purpose of ranging.

##### Slow measurement calculation routine:

This routine converts a slow measurement result into display data and calibration data.

The calibration data is made to compare two results. The display data is made to shift the data into the SAA1060.

#### 1.4.1.6. Display output routine

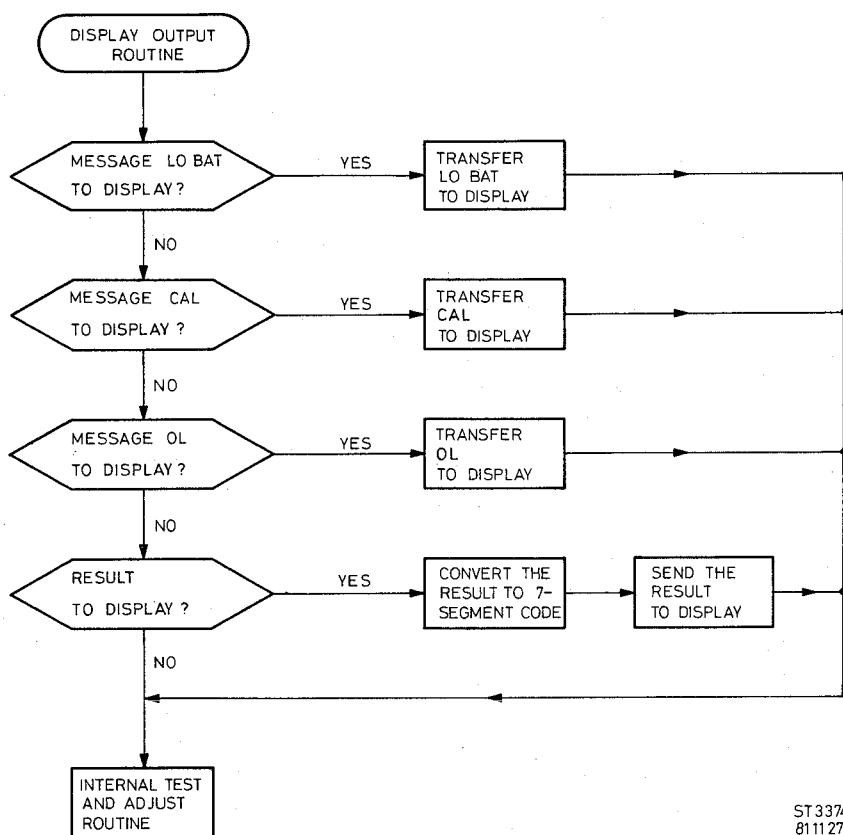


Fig. 22. Flow-chart display output routine

## 1.4.2. Analog section

### 1.4.2.1. Direct voltage measurements (V...)

The input circuit for the d.c. voltage measurements is shown in Fig. 23.


The various ranges are selected by reed relay switches, which connect resistors in parallel with the basic attenuator. The table indicates for each range the attenuation factor, the ADC input sensitivity and the range relays.

The basic  $\times 2$  attenuation is given by the network comprising the series R101 section, and the shunt path R101, R103, R106.

Adjustment of the basic  $\times 2$  attenuation is made by the preset potentiometer R103.

Preset R108 across the +10V and -10V supply provides d.c. balance.

The 200mV sensitivity is achieved by using the 100mV range of the ADC, which is activated by the RNGB input from the relay control D1908.

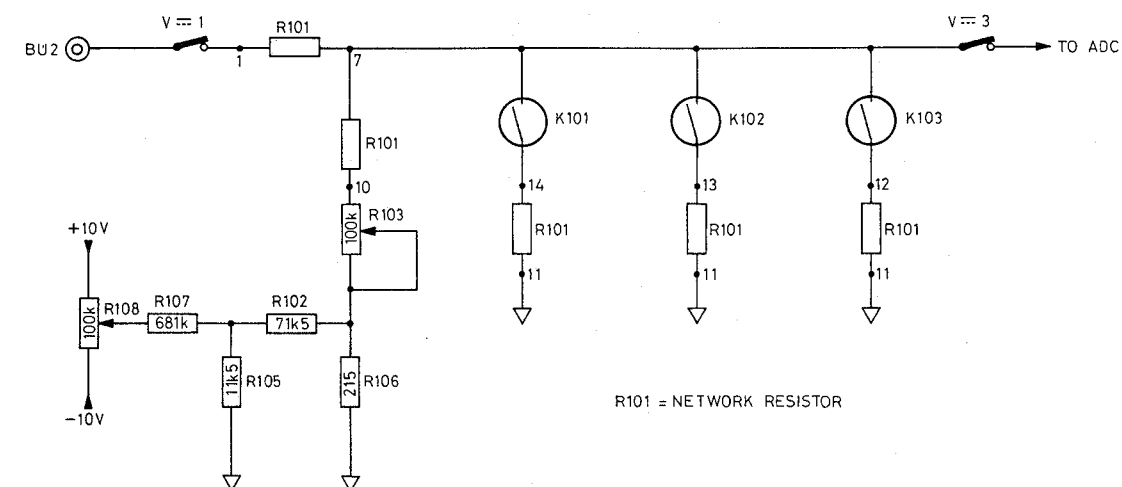

ST3375  
811130

Fig. 23. D.C. attenuator detailed

| RANGE  | ATTENUATION | ADC in. RANGE | RELAY    |
|--------|-------------|---------------|----------|
| 200mV  | 2 (RNGB)    | 100mV         |          |
| 2 V    | 2           | 1 V           |          |
| 20 V   | 20          | 1 V           | K101 ReA |
| 200 V  | 200         | 1 V           | K102 ReB |
| 2000 V | 2000        | 1 V           | K103 ReC |

1.4.2.2. Alternating voltage measurements (V~ )

a) Input a.c. attenuator

The input circuit for the a.c. voltage measurements is shown in Fig. 24.  
The table indicates the attenuation factor ADC sensitivity, and range relays and components.  
The basic x 2 attenuation is given by the voltage division of the series components R101//C101, C102 and the shunt components R101, R103, R106//C103, C104, C105. Any d.c. component at the input is blocked by C100.  
— x 20 attenuation is provided by R101//C106, C107, C108 switched by relay K101;  
— x 200 attenuation by R101//C109, C110, C111, C112, C113, switched by relay K102;  
— x 2000 attenuation by R101//C115, C116, switched by K103.  
The preset capacity trimmers allow calibration of the different ranges.

| RANGE   | ATTENUATION | AC INPUT RANGE | RELAY    |
|---------|-------------|----------------|----------|
| 200mV   | 2           | 100mV (RNGA)   |          |
| 2 V     | 2           | 1 V            |          |
| 20 V    | 20          | 1 V            | K101 ReA |
| 200 V   | 200         | 1 V            | K102 ReB |
| 2000 V* | 2000        | 1 V            | K103 ReC |

\* max. input = 600V R.M.S.

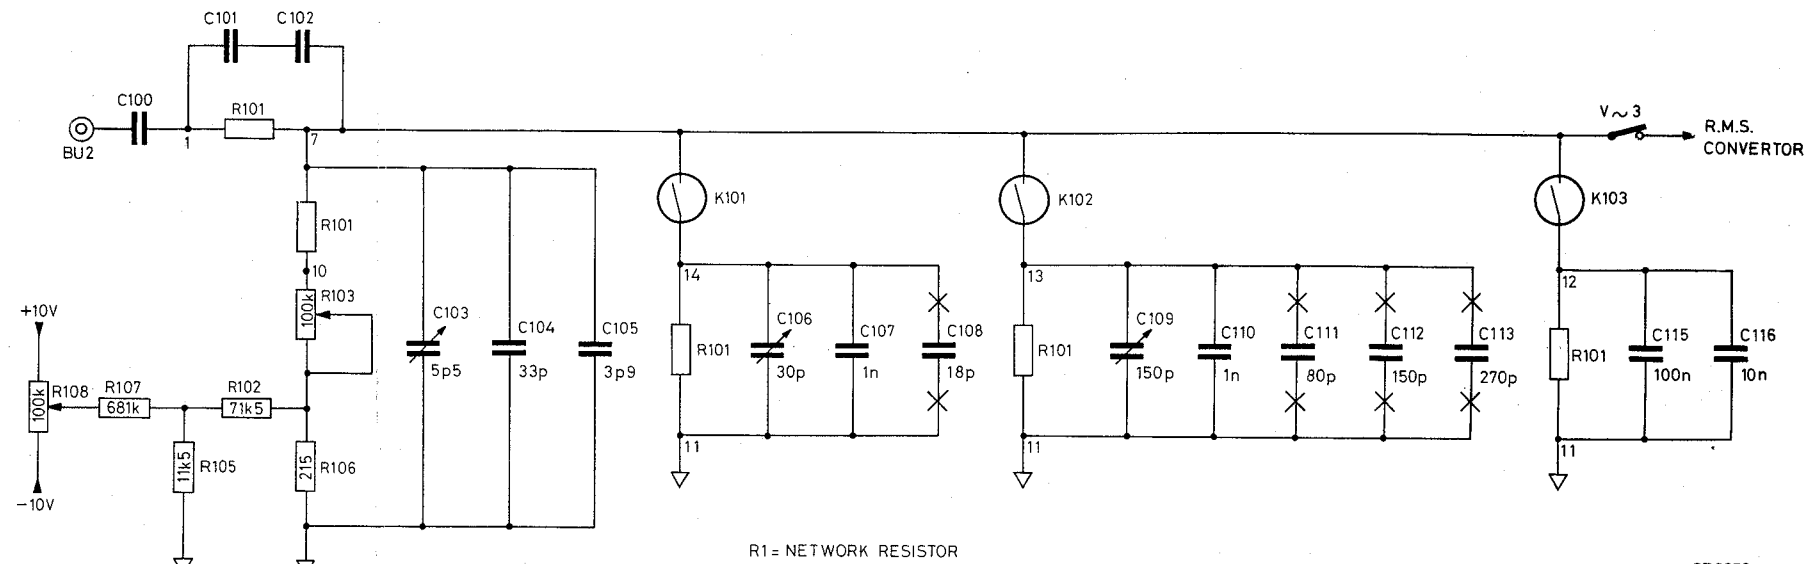


Fig. 24. A.C. attenuator detailed

ST 3376  
8112 10

### 1.4.2.3. Direct current measurements (A $\dots$ )

Currents less than 20mA applied to BU2 are routed via the A  $\dots$  function switch contact direct to the I-V convertor.

Any differences in polarity for zero input in the low current range can be offset by the preset R227.

In the 0.2A to 10A ranges, the unknown current source applied to BU3 is shunted by R1 and routed via FET switch V201 and the resistors R203, R204//R205 to the input of the I-V convertor amplifier A201.

The initial offset routine for the high current ranges is performed by software, controlling the RNG C input.

During this routine the input current on BU3 is isolated by a logic 1 in RNG C which switches off V205 and consequently FET switch V201. The logic 1 is also applied to the gate of FET V202 to earth the input to the I-V convertor for the zero offset routine.

The high current input is protected against overloads by the diodes V259, V260.

The BU3 input connector, when inserted, links the input socket with the base of transistor V206, which sends a logic 0 to the A-bus of the switch decoding multiplexer, to signal that the high current ranges have been selected.

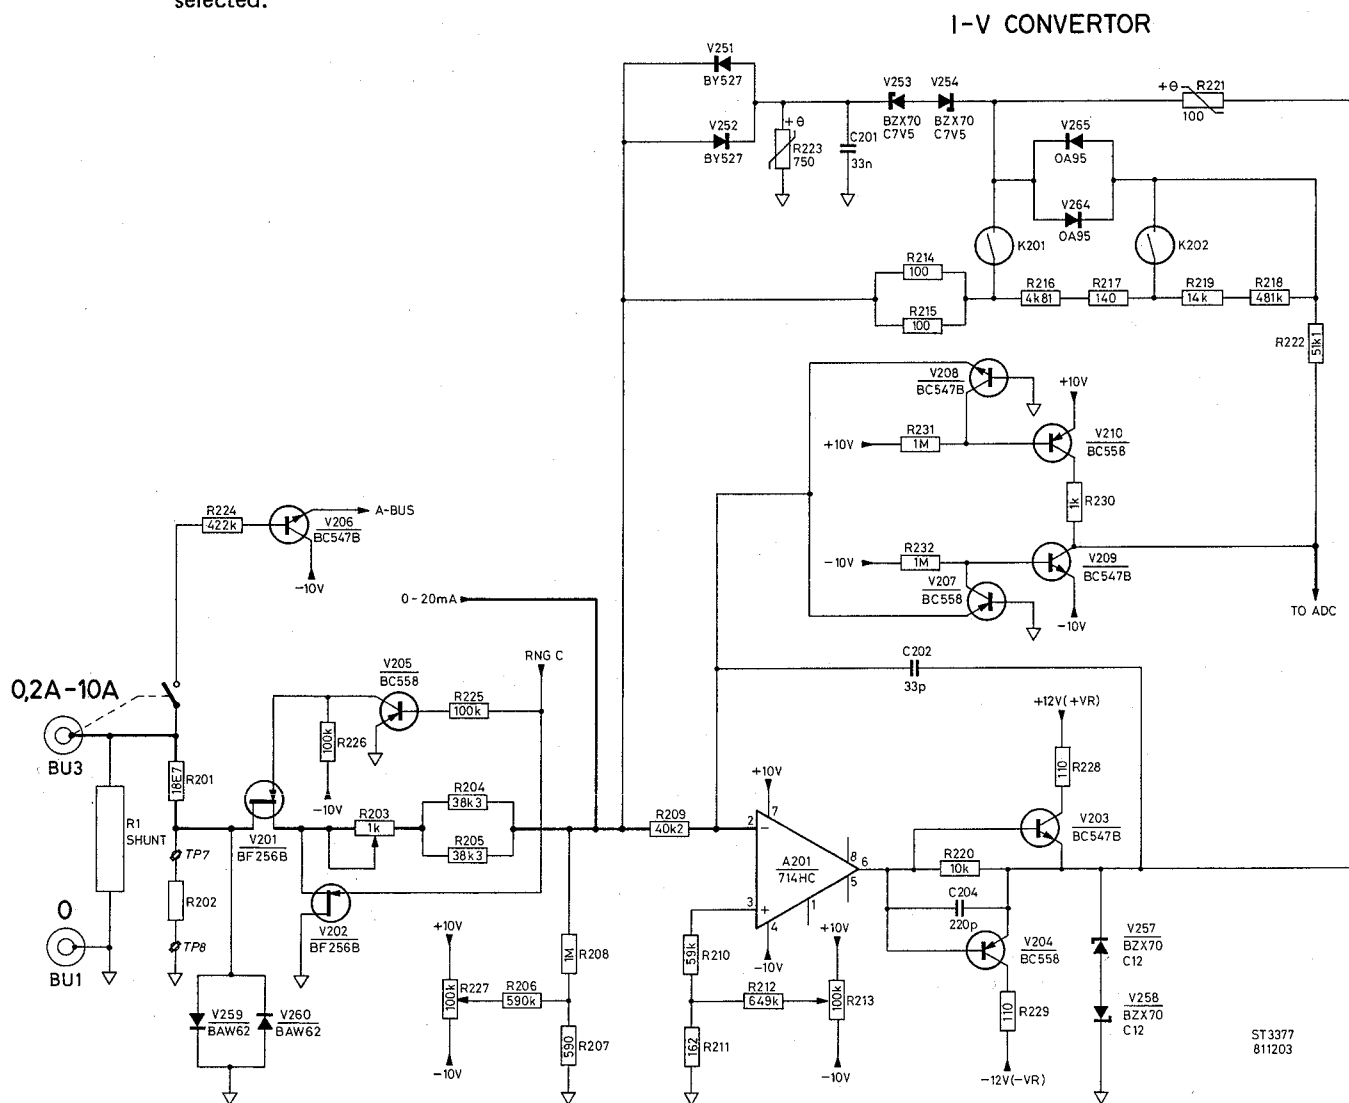


Fig. 25. I-V convertor

The principle of the I-V convertor is explained in the functional description.

The operational amplifier A201 is a shunt feedback amplifier that converts the input currents into output voltages between 0 to 0,1V and 0 to 1V.

| RANGES      | ADC SENSITIVITY | RELAYS                                     | MODE SIGNAL |
|-------------|-----------------|--|-------------|
| 2 $\mu$ A   | 1V              | K202<br>K202<br>K201 + K202<br>K201 + K202 |             |
| 20 $\mu$ A  | 0,1V            |  |             |
| 200 $\mu$ A | 1V              |  |             |
| 2mA         | 0,1V            |  |             |
| 20mA        | 1V              |  |             |
| 200mA       | 0,1V            |  | A BUS       |
| 2 A         | 1V              |  |             |
| 20 A        | 0,1V            |  |             |

The feedback resistors are selected according to the table by reed relay switches K201 and K202.

The two transistors V203, V204 take over the extra current from the operational amplifier A201, when the voltage across R220 exceeds 600mV.

The protection circuits for the I-V convertor are:

- Transistors V209, V210, which provide overload protection.  
Normally the input of A201 is at virtual earth, but excessive negative inputs are prevented by V208, and excessive positive inputs are prevented by V207.
- Zener diodes V257, V258 which provide current protection.
- Protection diodes V253, V254 for the shunt feedback path in series with V251, V252, which are included to block the leakage current of the protection diodes.

The output from the I-V convertor is passed via the A  $\sim$  2 function selector switch to the active filter and the ADC.

#### 1.4.2.4. Alternating current measurements (A $\sim$ )

For alternating current measurements, the voltage output of I-V convertor is applied via the function selector switch A $\sim$  2 to the impedance convertor and the R.M.S convertor before being passed by reed relay switch contact to the active filter and ADC.



#### 1.4.2.5. Resistance measurements ( $\Omega$ )

The unknown resistance connected to the BU2 input is fed via the  $\Omega$  1 function selector switch contact to the voltage attenuator and is supplied with a constant current  $I_{RX}$ , via contact  $\Omega$  2, from the constant current source A401 (OQ0063).

#### CURRENT SOURCE

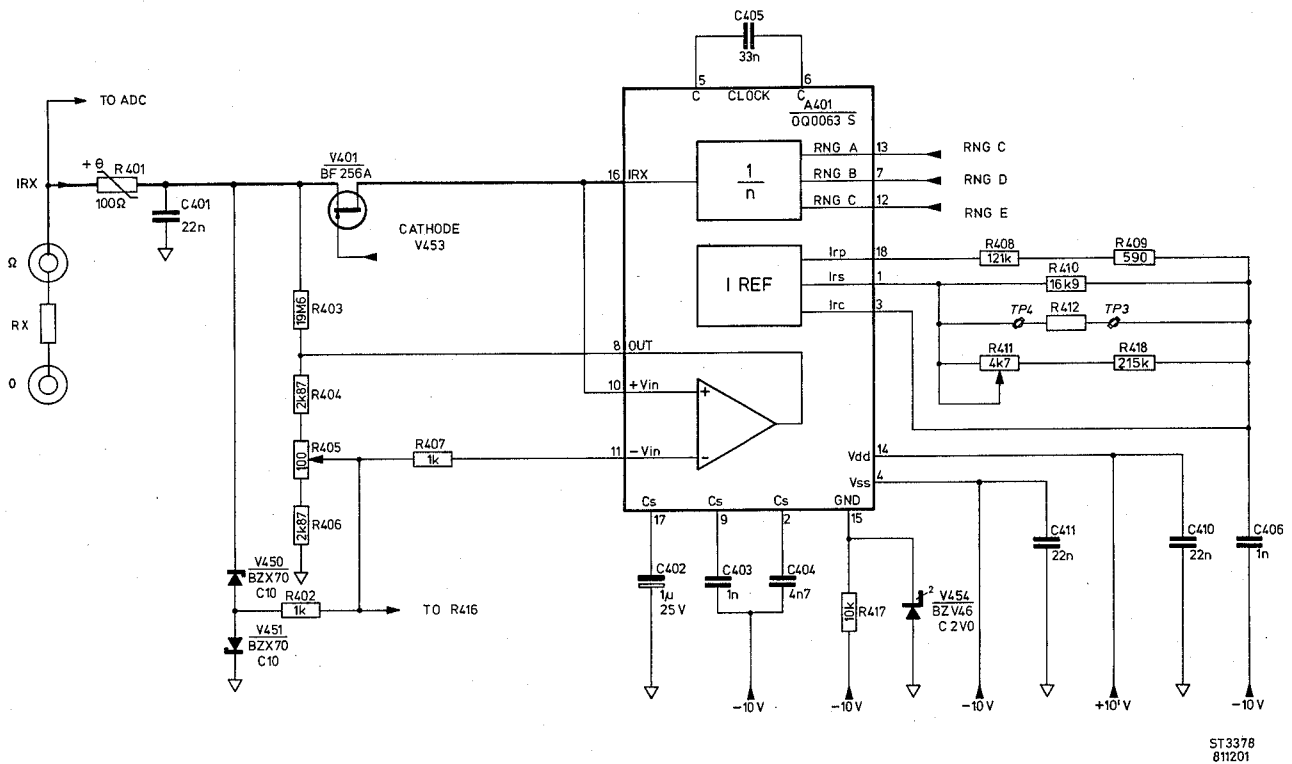


Fig. 26.  $\Omega$  measurement details

The measuring currents in the OQ0063 are derived from a reference current source  $I_{REF}$  adjusted by  $R_{418}$  in series with potentiometer  $R_{411}$ . The output current  $I_{RC}$  of the reference current source feeds the current multipliers  $\frac{1}{n}$  to give the currents  $I_{RX}$  shown in the table, depending on the selected signals RNGC, RNGD or RNGE.

As stated, the voltage  $V_x$  developed across  $R_x$  is applied to the ADC for measurement. However, the ADC input resistance is finite ( $10M\Omega$ ) and the small input current drawn by the ADC has to be compensated to avoid incorrect readings.

This is achieved as follows:

The voltage  $V_x$  across  $R_x$  is amplified by a factor of 2 in the compensation amplifier (+Vin), the gain being determined by the equal resistors  $R_{404}$ ,  $R_{406}$ .

The output voltage of  $2V_x$  appears at one end of  $R_{403}$  and  $V_x$  is present at the other end. The voltage across  $R_{403}$  is therefore:

$2V_x - V_x = V_x$  As  $R_{403}$  = the input resistance of the ADC ( $10M\Omega$ ) the input current of the ADC is compensated.

In this way, the load imposed by the ADC is compensated as  $I_{comp} = I_{adc}$

$$I_{RX}' = I_{RX} + I_{adc} - I_{comp}$$

so  $I_{RX}' = I_{RX}$ .

Protection for the current source is afforded by the PTC resistor R401 and zener diodes V450, V451, V452 and diode-connected transistor V403.

In the event of a high voltage/current on the input terminals R401 goes high resistance. To prevent part of  $I_{Rx}$  leaking through the protection diodes, the emitter of V403 and the cathode of zener diode V450 are connected to  $V_x$  and the electrodes are routed back to the -Vin input of the compensation amplifier.

The leakage current through the diodes is therefore balanced out in the same way as compensation is achieved for the ADC input current.

#### 1.4.2.6. Diode measurements

Diode measurements, and measurement of semiconductor junctions are performed in the same way as for resistance measurements in the  $2k\Omega$  range. The value displayed is the voltage in forward or reverse direction across the diode in the 2V range.

In the diode measuring range, the constant current derived from the OQ0063 is 1mA (see previous section).

#### 1.4.2.7. Temperature measurements ( $^{\circ}C$ )

When the  $^{\circ}C$  function is selected, the constant current  $I_{Rx}$  is routed from pin 2 of the probe connector BU4, which is connected via the probe lead to one end of the PT100 resistance thermometer.

The output of the Thomson bridge is applied to the ADC via function switch contact  $^{\circ}C2$ .

The earth return to the ADC is routed to the common sources of V607 and V607'. This point is now raised above earth by the potential drop across the bridge caused by the measuring current source; i.e. 100mV for  $0^{\circ}C$ .

The Data Hold switch output is derived from pin 5 of BU4.

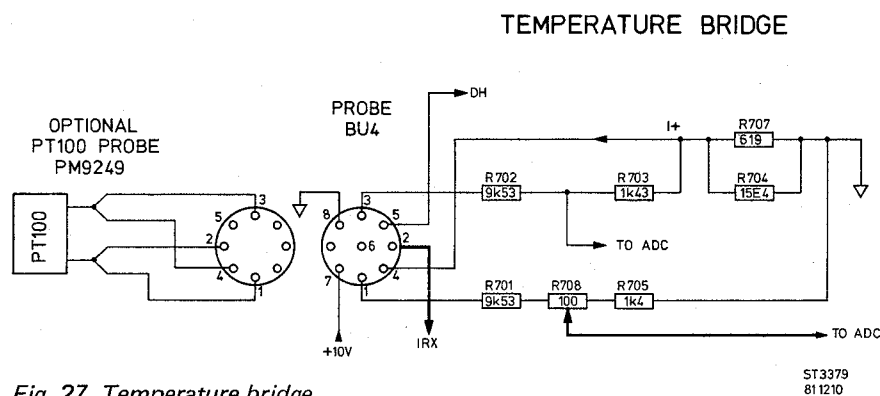


Fig. 27. Temperature bridge

*Fig. 28. Frequency measurements*

#### **1.4.3.2. Time measurements (s)**

When the time function is selected, the S1 contact connects the source to the voltage attenuator. After attenuation, it is connected to the + input of the comparator. In the same way, as for frequency measurements the comparator produces output pulses when the signal peaks cross the trigger level selected. These are passed direct to the microprocessor and also to the selection gates of the interrupt controller.

#### **1.4.3.3. Trigger level measurements**

When trigger level is selected, TL1 function switch contact routes the input signal to the voltage attenuator as for voltage measurements. Contact TL3 connects the attenuated output via the impedance convertor to the + input of the comparator as for frequency measurements. Switch K301 is open in the trigger level function.

#### 1.4.4. Analog section (multifunction measurements)

##### 1.4.4.1. R.M.S. convertor

In the R.M.S. convertor the difference in voltage between the Vin2 and Vin1 is converted into current in a dual V-I convertor.


The current is determined by  $\frac{V_{in}}{R}$  and the state of the RNGA signal, (where R is either R305 or R306 + R307). This relay signal from D1908 selects the input sensitivity of the R.M.S. convertor.

The current in the a.c. to d.c. convertor is rectified and then converted into a current again by the R.M.S. section. This current is proportional to the r.m.s. value of the input signal V.

Capacitor C302 is the integrating capacitor for the R.M.S. section. Capacitors C303 and C304 provide the automatic zero (AZ) compensation for the R.M.S. convertor.

The output of the R.M.S. convertor is converted into a voltage by resistor network R309-R312. The output voltage can be adjusted by R310 and is filtered by R314/C306. It is supplied via relay contact K301 to the active filter.

### RMS CONVERTOR

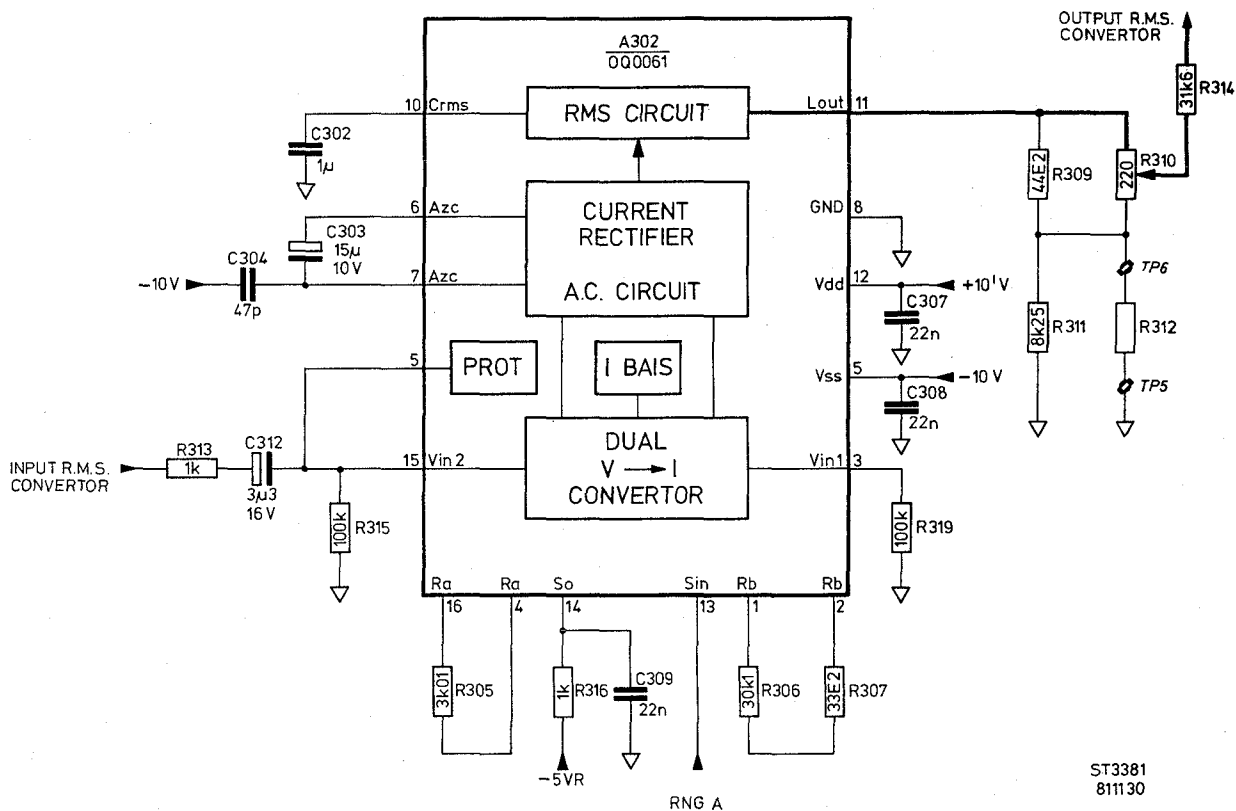

#### 1.4.4.2. Impedance convertor

The output signal from the a.c. attenuator is passed via switch contact V~ 3 to an impedance convertor which converts the high input impedance signal to a low impedance to match the input of the R.M.S. convertor A302, which would otherwise draw current from the signal.

The gate of FET V302 gives the high impedance input to the stage, which is fed from a current source supplied by V306.


In other measuring functions than a.c., control signal RE P switches on FET switch V301, which short-circuits the a.c. path to earth.

The impedance convertor input is protected against excessive input voltages by:

- Diode-connected V350 which acts as a zener diode for negative voltages
- R304 and the gate-drain junction of V302 for positive voltages.

For the input range from  $-1\text{V}$  to  $+1\text{V}$  on the gate of V302, the output at V305 collector lies between  $0\text{V}$  and  $2\text{V}$ ; i.e. it is always positive.

IMPEDANCE CONVERTOR  
(TRIGGER LEVEL RMS/CONV.)

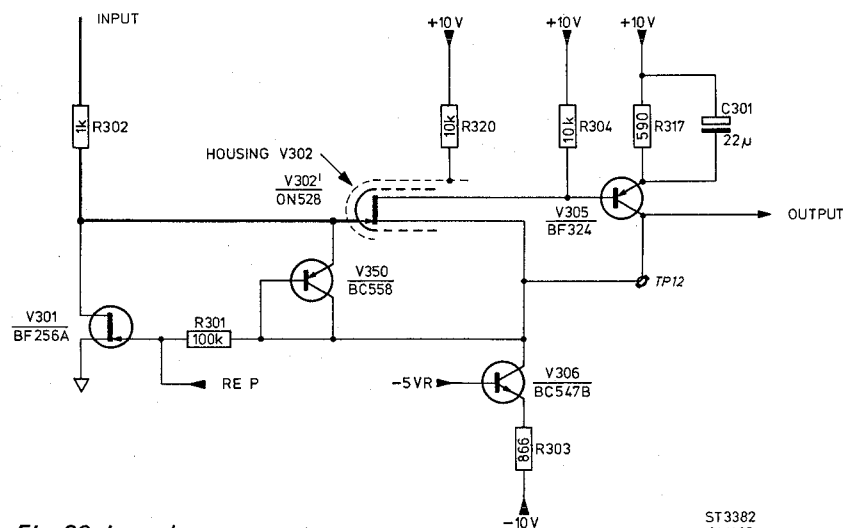

*Fig. 30. Impedance convertor*

ST 3382  
81 11 30



#### 1.4.4.4. Analog-to-digital convertor

The A602 integrated circuit converts the unknown input voltage to a constant current value depending on the magnitude of the input voltage.

Two sensitivities can be selected by the relay control input RNGB, to give either 1V or 0,1V (used in the 200mV measuring range).

The voltage converted to a constant current is the difference between the two inputs of the OQ0064.

The auto zero circuit is designed to compensate for any internal offset which could influence the measuring result of the ADC. This is done by logic signals AZ and  $\overline{AZ}$ .

During the first period of a measurement the unknown voltage is supplied via V606' and V608 to the + input (pins 3 and 5) of the OQ0064 while the - input (pins 12 and 10) is connected to zero via V610 and V607, controlled by the  $\overline{AZ}$  logic to the gate of V608'.


At the same time, the  $\overline{AZ}$  signal via V610 switches the signal path via V606' to V608 and the + input.

In the second period of a measurement the situation is reversed. The AZ logic pulse switches the input signal to the - input, and the + input is now connected to zero via the gate of FET V608 and FET V607'. The source of V607' is normally at 0V except in the temperature measuring function.

In the  $\mu p$  these two signals are subtracted, so any internal offset is compensated.

AZ = 1 for the first measuring period

$\overline{AZ}$  = 1 for the second measuring period.

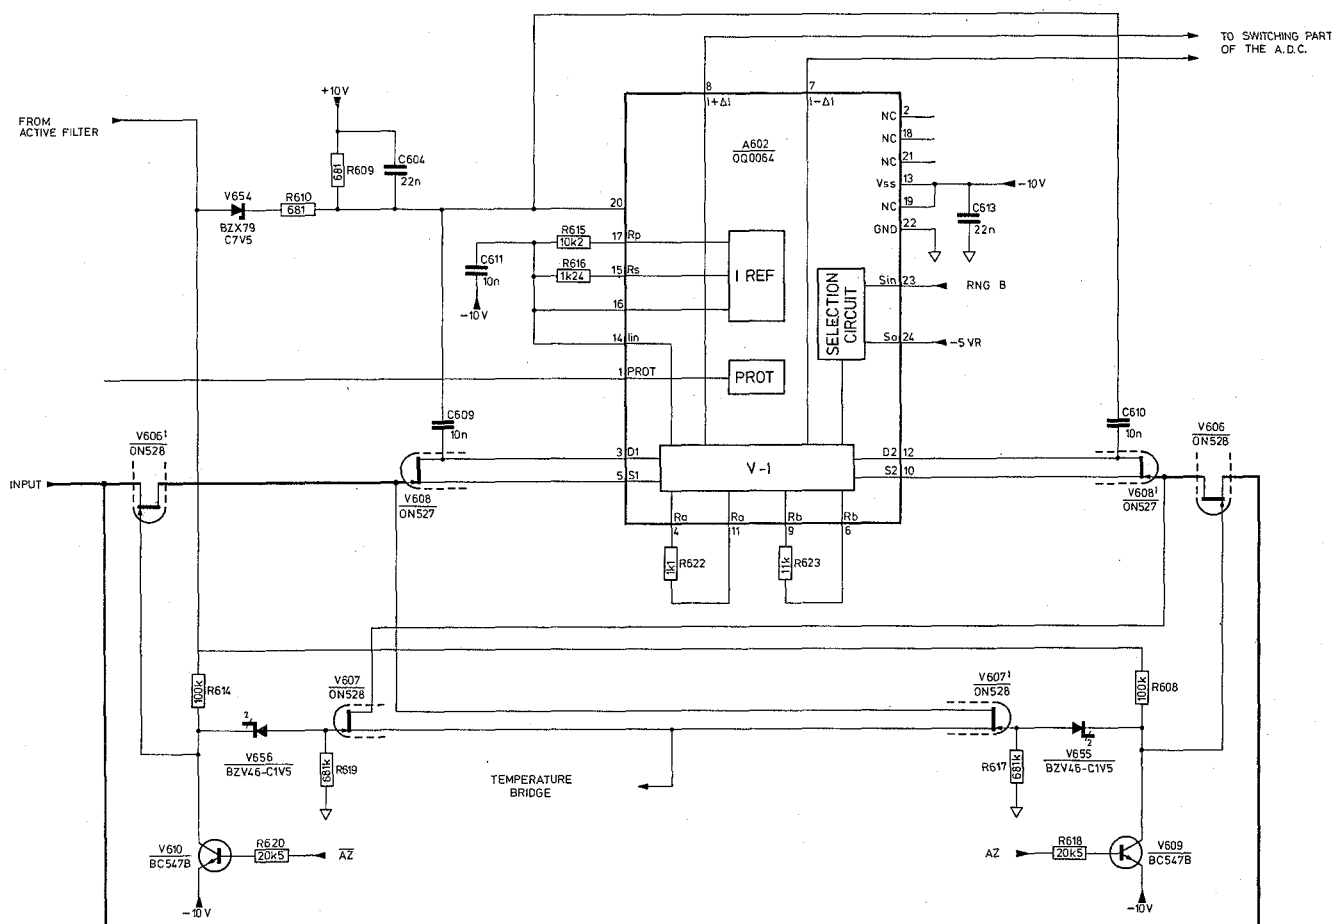

ST3384  
81130

Fig. 32. V-I convertor



#### 1.4.5. Control section

#### 1.4.5.1. Interrupt controller

## Mode switch interrupts

The four mode switches SK1, SK2, SK3, SK4, when selected, each give a logic 0 pulse via C1919 to input 11 of the 3-input NAND-gate D1918.

Input 12 is held at logic 1 by the pull-up resistor from input 6 ( $\overline{\text{INT}}$ ) of the  $\mu\text{P}$ .

When there is no input from the trigger level circuit, input 13 is also at logic 1.


Consequently, a logic 0 pulse from one of the mode switches results in a 0 pulse on the interrupt input  $\overline{\text{INT}}$ .

During a timing measurement, the S' contact when switched gives a logic 1 to the pin 1 of Schmitt trigger D1917, which gives a logic 0 pulse via C1912 to reset the time measurements.

### Trigger level interrupts

Interrupts are also generated by the trigger level circuit in the timer mode, for starting and stopping the  $\mu P$  internal counter during measuring.

The functional circuit is shown in Fig. 33.

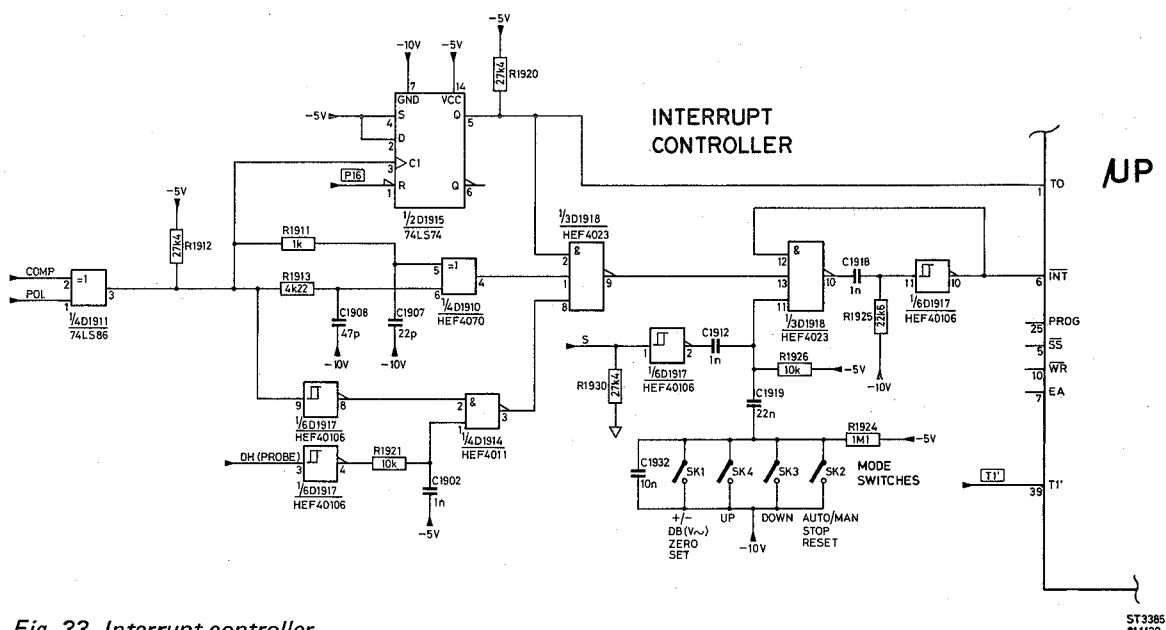

*Fig. 33. Interrupt controller*

**Permanent non-interrupt condition:**

Without the timer selected there is no output from the comparator even if Hz is selected because P16 inhibits the flip-flop and gives a '0' on NAND input 2.

### Interrupt conditions:

There are two modes of trigger level interrupt:

- The normal trigger-mode, where the signal is triggered on successive positive crossings (or successive negative crossings) of the trigger level.
- The special trigger mode, using the data hold input, where the signal is triggered on successive positive and negative (or negative and positive) crossings of the trigger level.

Considering first, the normal trigger mode; i.e. with the data hold switch open.

As explained, the condition for interrupt is a logic '0' on the  $\overline{\text{INT}}$  pin; i.e. all the three inputs of NAND-gate D1918 at logic 1 simultaneously.

Path 1 takes the comparator output waveform to the NAND-gate input 2 of D1911 via a two-input exclusive-OR gate.

A logic '1' is passed only when a '1' input appears on either one or the other of the inputs.

Two small RC delays are applied to the inputs so that the inputs arrive at slightly different times after the start of the comparator output waveform. This means that for a short period, i.e. the difference in the delay times, one of the inputs, the one with the shorter delay is at logic '1'. Consequently, a logic '1' appears at the output of the gate for this short period until the other input is at logic '1'; i.e. the condition for '0' output.

At the end of the comparator pulse, the input with the shorter delay returns to logic '0' after its delay time. However, the other input remains at logic '0' for its delay period and gives a corresponding logic '1' pulse to the gate output as shown.

Path 2 inverts the comparator output waveform and applies it via a NAND-gate to input 8 of D1918 in its original form.

Path 3 applies the comparator output via the clock input of the flip-flop to the output, which is applied to the third input 2 of the NAND-gate.

All three inputs of NAND-gate D1918 are at logic '1' during the positive-going crossings of the trigger-level.

As path 2 changes polarity at the end of the positive-going comparator pulse, no intermediate interrupt pulse occurs in the normal trigger mode.

Considering the special trigger mode the circuit functions are identical, except that the data hold input puts a logic '0' on to the input of the NAND-gate in path 2. This means that the output, and consequently input 8 of NAND-gate D1918, are permanently at logic '1'.

The intermediate pulse from the exclusive-OR gate now forces the output of NAND-gate D1918 to logic '0' for its duration.

The outcome is that the  $\mu\text{P}$  counter is stopped at the negative crossing of the trigger level in the special trigger mode. The foregoing explanation has assumed that positive trigger has been selected. When negative trigger is selected, the start point is a negative-crossing of the trigger level and the stop point, a positive crossing of the trigger level.

### 1.4.5.2. Counter and input control

#### Counter input control

The counter accepts the data pulses from the ADC output and, in the frequency mode (Hz) from the comparator output.

The CT/ADC input (P10) from the  $\mu P$  enables either the ADC input (CT/ADC = 0) or the comparator input (CT/ADC = 1).

Data from the ADC is routed to exclusive-OR gate D1910 pin 1 where the varying duty-cycle is compared with a '0' (applied from the AZ output of flip-flop D1903) for the first measuring period and with a '1' for the second measuring period. This inverts the data for the second measuring period. The output on pin 3 is applied to NAND-gate input D1914-9. The clock ADC pulses are applied to the other input (8), which produce a number of output pulses during the first period corresponding with the pos. time of the duty cycles.

The output on D1914-10 is applied to another exclusive-OR gate, D1909-9, one input of which is tied to logic '1'. The resultant output for the complete measurement is equal to the mean value of the two measuring periods. The output on D1910-10 is presented to two NAND-gates, which in the ADC selected mode act as inverters only because of a permanent logic '1' on the other inputs (D1914-5 and D1913-2,3). The output feeds the counters D1902 and D1907 in cascade.

In the frequency mode, the CT/ADC input is at logic '1'.

The NAND-gate D1914 (12, 13, 11) wired as an inverter gives an output '0' to NAND-gate D1914-5 feeding the ADC input of the counter. This applies a permanent '1' to final NAND-gate D1913 input 1.

This means that the pulses from the comparator output are fed, via two NAND-gates acting as inverters, into the counter.

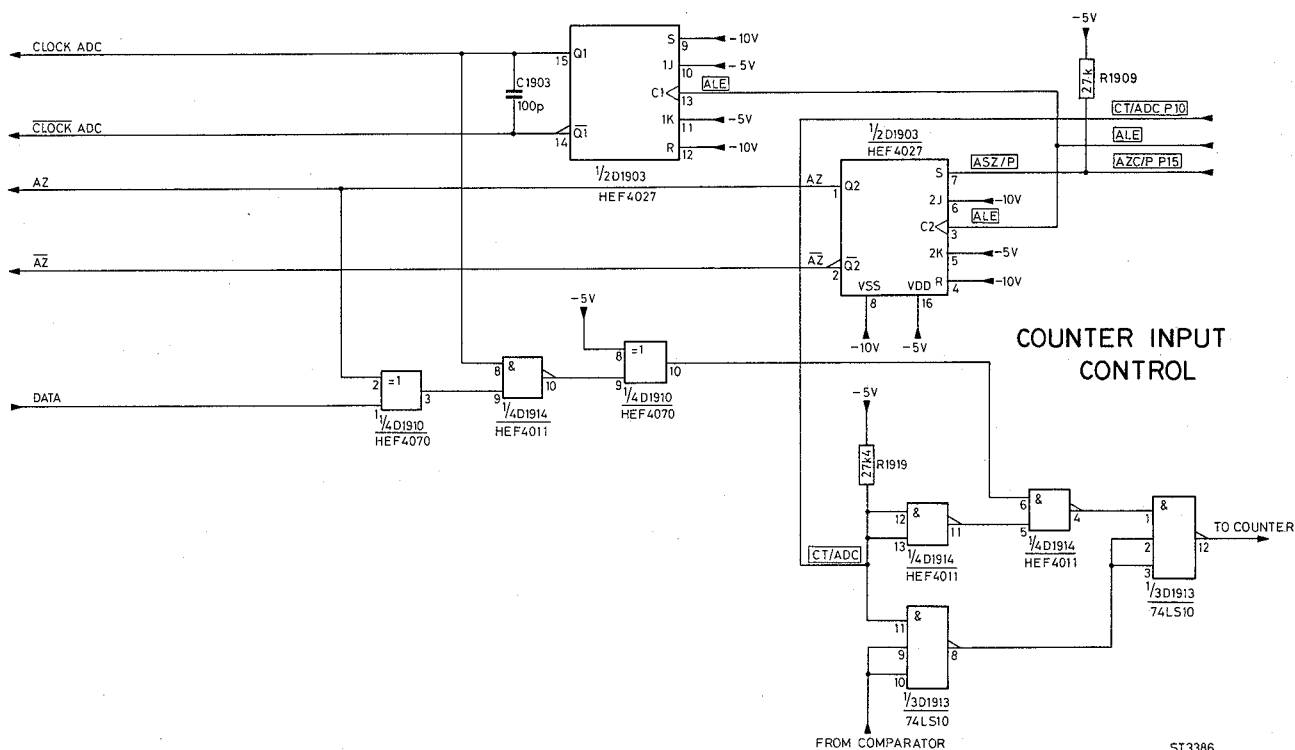


Fig. 34. Counter input control

ST3386  
811130

### Counter output control

The counter consists of two high-speed 4-bit binary counters in cascade giving an 8-bit output via buffers to the databus. Low to high transitions of the input (2) result in synchronous changes of the outputs to the buffers.

The master reset input  $\overline{MR}$  when at logic '0' resets all outputs regardless of inputs.

The hold  $\overline{HLD}$  pulse is a logic '0' from the  $\mu P$ ; logic '1' enables counting operations.

The 8-bit output is routed to an integrated circuit D1901 containing eight 3-state buffers.

The outputs from the counter are directly routed to the databus by logic '0' on the  $\overline{ECO}$  ( $\overline{OE}$ ) input. This condition requires a  $\overline{RD}$  pulse ('0') and a P17 and A7 signal applied together.

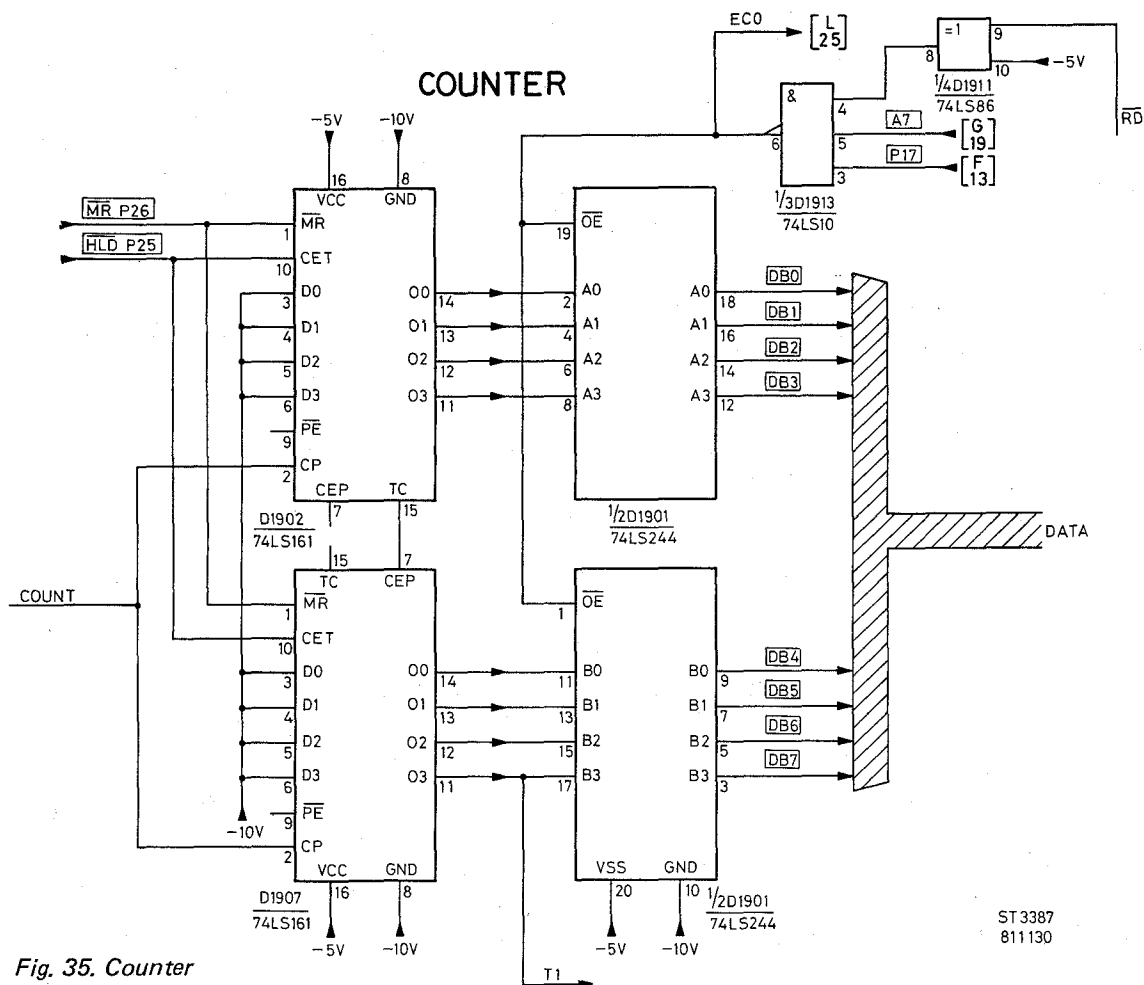


Fig. 35. Counter

### 1.4.5.3. Analog control

#### Control inputs

The ten function switches when selected, provide a  $-10V$  supply to one of ten independent inputs of D1916, D1918. These integrated circuits are two 8-channel analog multiplexers, scanned by three address inputs P20', P21', P22' and a chip select pulse P23'.

Internally, the analog switches have one side connected to a common output line (pin 3) that is connected via a diode V901 to P24 of the  $\mu P$  (logic '0' output).

The mode switches are also connected to four of the independent inputs of D1919.

The multiplexers act as switch decoders. At the start of a measuring program, the address lines scan the two 1-of-8 decoders under software control and detect the function and any mode conditions.

The control address signals are derived from the  $\mu P$  part 2 outputs P20, P21, P22, P23, clocked via the bistable flip-flop circuit D1912.

When trigger level is selected, the  $-10V$  on pin 4 of D1916 is applied to the NAND-gate D1918, input 3 to give a logic '1' at the data input (12) of the GATE control flip-flop D1915.

## SWITCH DECODING

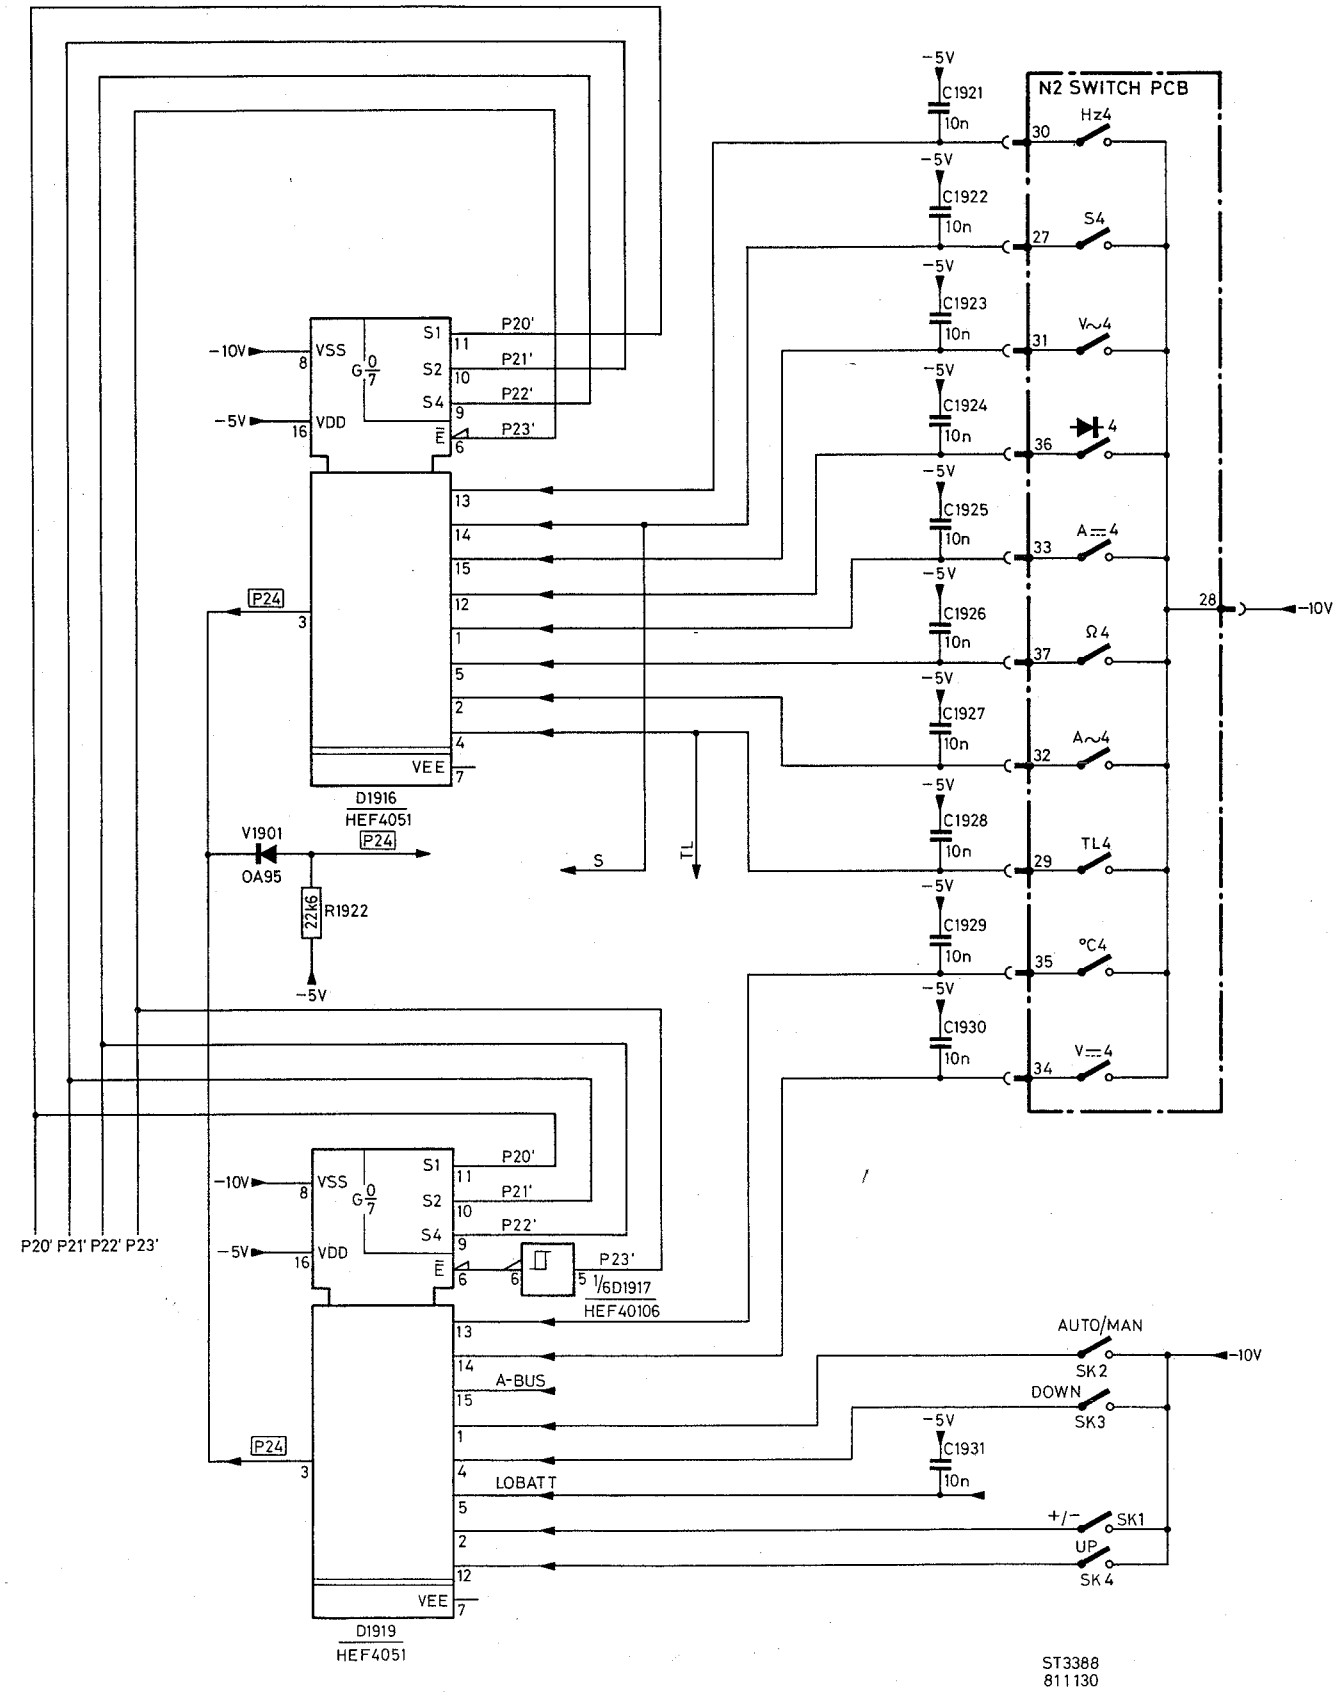


Fig. 36. Switch decoding

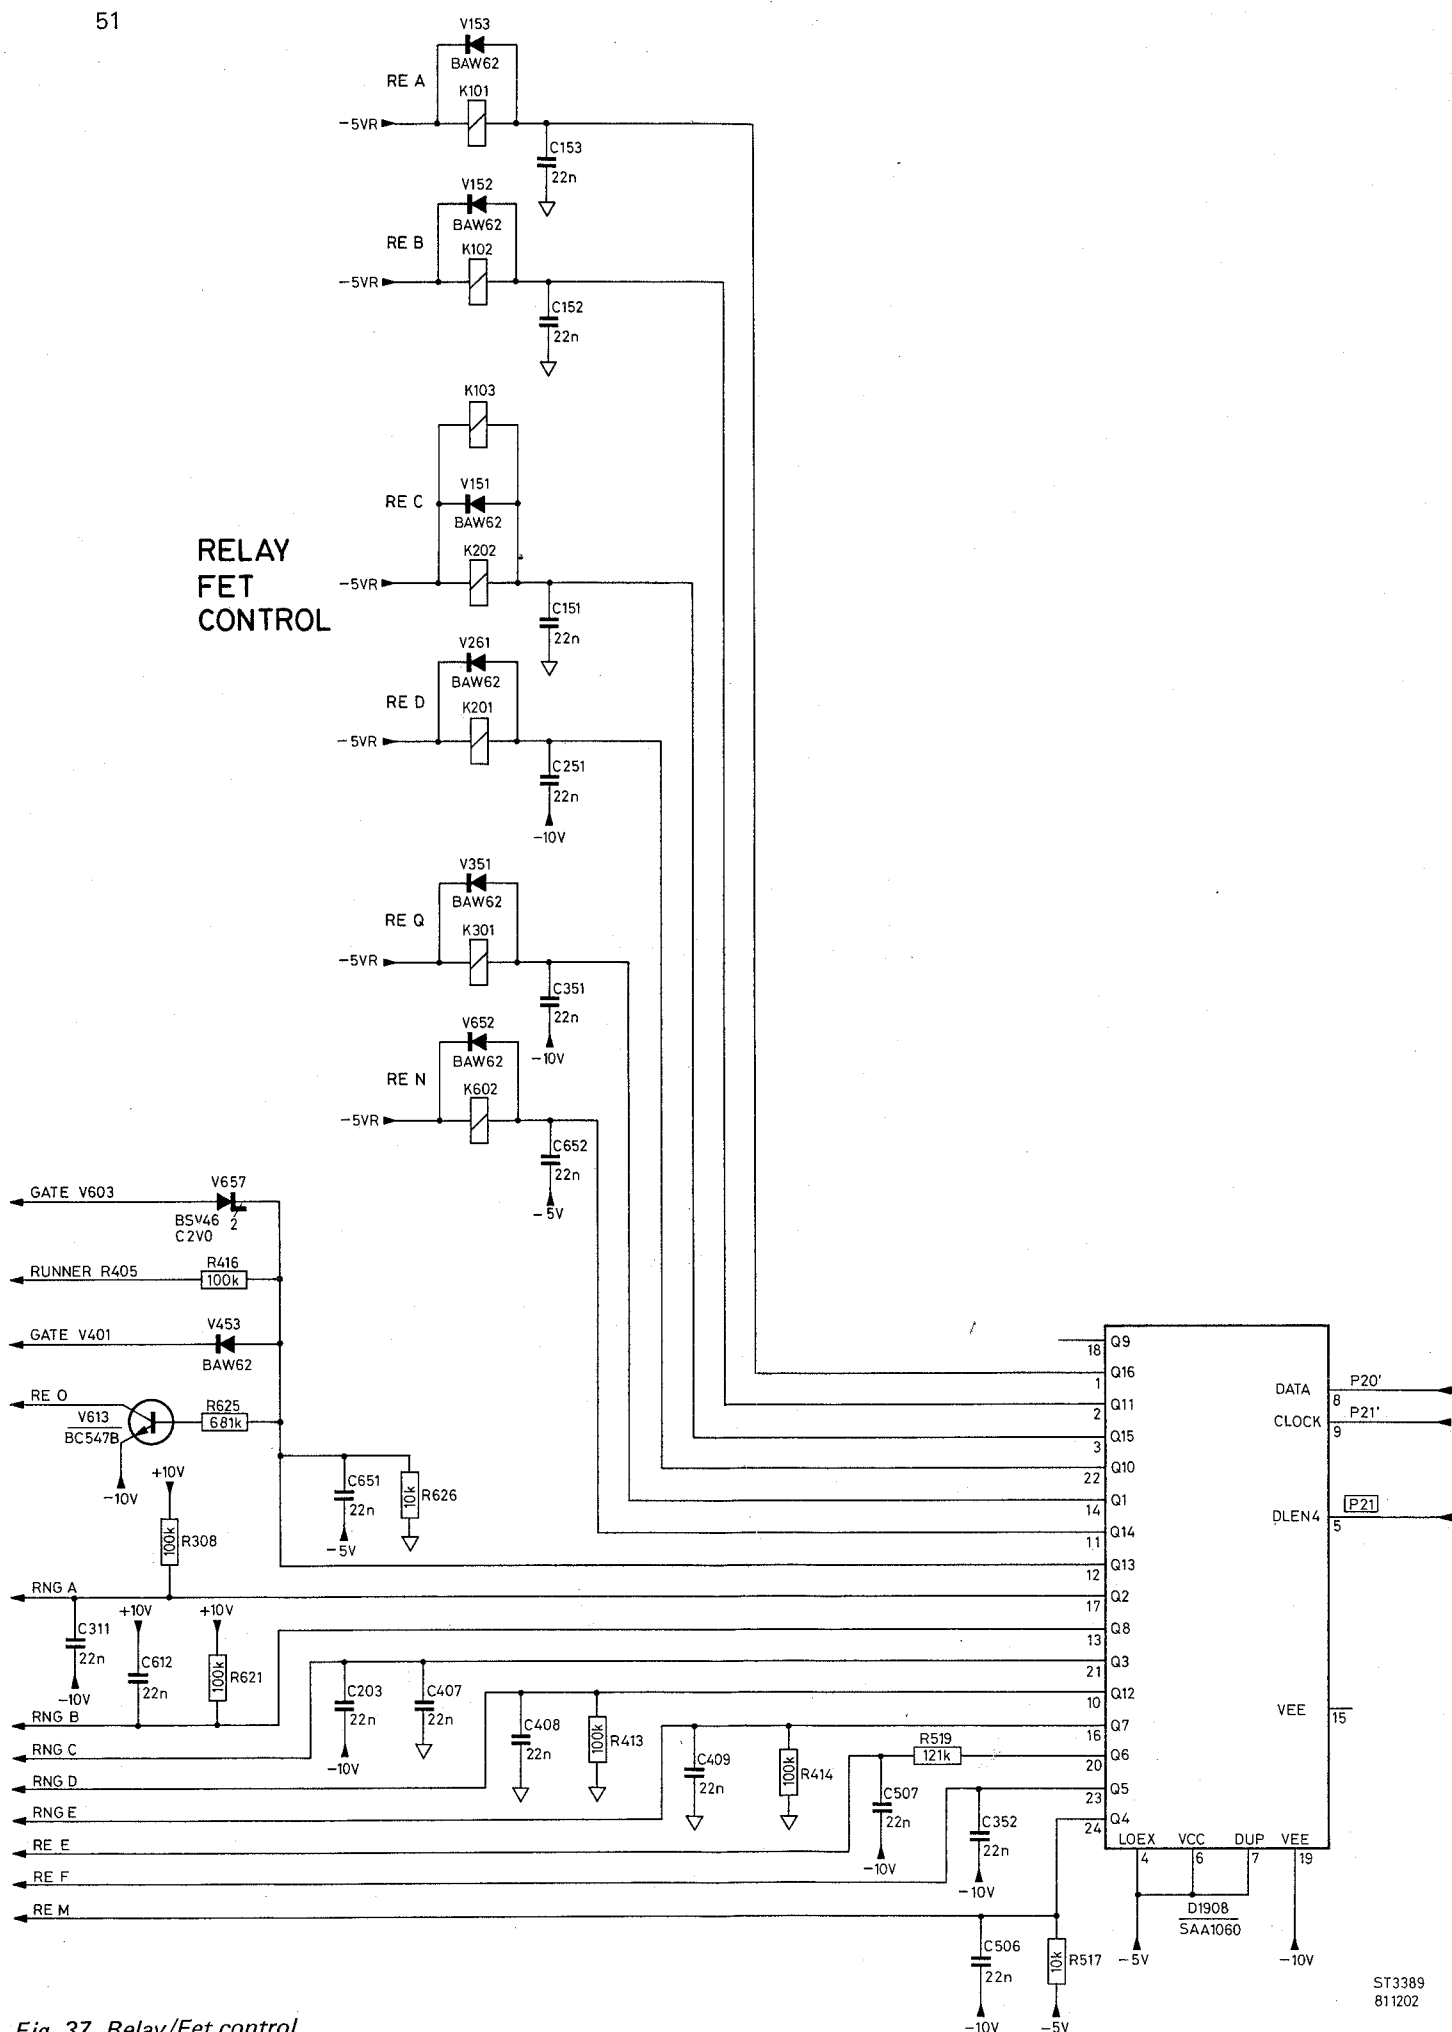


Fig. 37. Relay/Fet control


## Control outputs



Control of the reed relays used for range changing, function switching, etc. is achieved by the RELAY FET CONTROL interface circuit D1908 (SAA1060). The circuit is software controlled from the  $\mu P$  by the DATA signal P20', the CLOCK input P21' and the enable signal P11 (DLEN4).

In the bus control circuit of D1908, the data is checked for word length (17 bits + leading zero) to establish whether it is valid data and not interference. The serial data is fed to a 17-bit shift register where it is loaded into a 16-bit latch B (there are two latches, A is not used in this application). From here it is switched directly in parallel form to the appropriate outputs for relay control. See Fig. 37.

## OUTPUTS SAA1060

| BIT NO       | B7  | B6  | B5  | B4  | B3   | B2  | B1  | B0 | B7   | B6   | B5  | B4  | B3  | B2   | B1   | B0  |
|--------------|-----|-----|-----|-----|------|-----|-----|----|------|------|-----|-----|-----|------|------|-----|
| PIN NO       | 1   | 3   | 11  | 12  | 10   | 2   | 22  | 18 | 13   | 16   | 20  | 23  | 24  | 21   | 17   | 14  |
| SIGNALS      | REA | REC | REN | RED | RNGD | REB | RED |    | RNGB | RNGE | REE | REP | REM | RNGC | RNGA | REQ |
| <b>RANGE</b> |     |     |     |     |      |     |     |    |      |      |     |     |     |      |      |     |
| 200mV ∴      | 1   | 1   | 0   | 1   | 0    | 1   | 0   | 1  | 0    | 0    | 0   | 1   | 0   | 0    | 1    | 1   |
| 2 V ∴        | 1   | 1   | 0   | 1   | 0    | 1   | 0   | 1  | 1    | 0    | 0   | 1   | 0   | 0    | 1    | 1   |
| 20 V ∴       | 0   | 1   | 0   | 1   | 0    | 1   | 0   | 1  | 1    | 0    | 0   | 1   | 0   | 0    | 1    | 1   |
| 200 V ∴      | 1   | 1   | 0   | 1   | 0    | 0   | 0   | 1  | 1    | 0    | 0   | 1   | 0   | 0    | 1    | 1   |
| 2000 V ∴     | 1   | 0   | 0   | 1   | 0    | 1   | 1   | 1  | 1    | 0    | 0   | 1   | 0   | 0    | 1    | 1   |
| 200mV ∼      | 1   | 1   | 0   | 1   | 0    | 1   | 0   | 1  | 1    | 0    | 0   | 0   | 0   | 0    | 0    | 0   |
| 2 V ∼        | 1   | 1   | 0   | 1   | 0    | 1   | 0   | 1  | 1    | 0    | 0   | 0   | 0   | 0    | 1    | 0   |
| 20 V ∼       | 0   | 1   | 0   | 1   | 0    | 1   | 0   | 1  | 1    | 0    | 0   | 0   | 0   | 0    | 1    | 0   |
| 200 V ∼      | 1   | 1   | 0   | 1   | 0    | 0   | 0   | 1  | 1    | 0    | 0   | 0   | 0   | 0    | 1    | 0   |
| 2000 V ∼     | 1   | 0   | 0   | 1   | 0    | 1   | 1   | 1  | 1    | 0    | 0   | 0   | 0   | 0    | 1    | 0   |
| 200 Ω        | 1   | 1   | 1   | 1   | 0    | 1   | 0   | 1  | 0    | 1    | 0   | 1   | 0   | 0    | 1    | 1   |
| 2KΩ          | 1   | 1   | 1   | 1   | 0    | 1   | 0   | 1  | 1    | 1    | 0   | 1   | 0   | 0    | 1    | 1   |
| 20KΩ         | 1   | 1   | 1   | 1   | 0    | 1   | 0   | 1  | 1    | 0    | 0   | 1   | 0   | 0    | 1    | 1   |
| 200KΩ        | 1   | 1   | 1   | 1   | 0    | 1   | 0   | 1  | 1    | 0    | 0   | 1   | 0   | 0    | 1    | 1   |
| 2MΩ          | 1   | 1   | 1   | 0   | 1    | 1   | 0   | 1  | 1    | 0    | 0   | 1   | 0   | 0    | 1    | 1   |
| 20MΩ         | 1   | 1   | 1   | 0   | 1    | 1   | 0   | 1  | 1    | 0    | 0   | 1   | 0   | 0    | 1    | 1   |
| 2 μA ∴       | 1   | 1   | 0   | 1   | 0    | 0   | 1   | 0  | 1    | 0    | 0   | 1   | 0   | 0    | 1    | 1   |
| 20 μA ∴      | 1   | 0   | 0   | 1   | 0    | 1   | 1   | 1  | 0    | 0    | 0   | 1   | 0   | 0    | 1    | 1   |
| 200 μA ∴     | 1   | 0   | 0   | 1   | 0    | 1   | 1   | 1  | 1    | 0    | 0   | 1   | 0   | 0    | 1    | 1   |
| 2mA ∴        | 1   | 1   | 0   | 1   | 0    | 0   | 0   | 1  | 0    | 0    | 0   | 1   | 0   | 0    | 1    | 1   |
| 20mA ∴       | 1   | 1   | 0   | 1   | 0    | 0   | 0   | 1  | 1    | 0    | 0   | 1   | 0   | 0    | 1    | 1   |
| 200mA ∼      | 1   | 1   | 0   | 1   | 0    | 0   | 1   | 0  | 0    | 0    | 0   | 1   | 0   | 0    | 1    | 1   |
| 2 A ∼        | 1   | 1   | 0   | 1   | 0    | 0   | 1   | 0  | 1    | 0    | 0   | 1   | 0   | 0    | 1    | 1   |
| 20 A ∼       | 1   | 0   | 0   | 1   | 0    | 1   | 1   | 1  | 1    | 0    | 0   | 0   | 0   | 0    | 0    | 0   |

| BIT NO  | B7  | B6  | B5  | B4  | B3   | B2  | B1  | B0 | B7   | B6   | B5  | B4  | B3  | B2   | B1   | B0  |
|---|-----|-----|-----|-----|------|-----|-----|----|------|------|-----|-----|-----|------|------|-----|
| PIN NO  | 1   | 3   | 11  | 12  | 10   | 2   | 22  | 18 | 13   | 16   | 20  | 23  | 24  | 21   | 17   | 14  |
| SIGNALS   | REA | REC | REN | RED | RNGD | REB | RED |    | RNGB | RNGE | REE | REP | REM | RNGC | RNGA | REQ |
| 2 VTL   | 1   | 1   | 0   | 1   | 0    | 1   | 0   | 1  | 1    | 0    | 1   | 0   | 0   | 0    | 1    | 0   |
| 20 VTL  | 0   | 1   | 0   | 1   | 0    | 1   | 0   | 1  | 1    | 0    | 1   | 0   | 0   | 0    | 1    | 0   |
| 200 VTL   | 1   | 1   | 0   | 1   | 0    | 0   | 0   | 1  | 1    | 0    | 1   | 0   | 0   | 0    | 1    | 0   |
| 2000 VTL  | 1   | 0   | 0   | 1   | 0    | 1   | 1   | 1  | 1    | 0    | 1   | 0   | 0   | 0    | 1    | 0   |
| 2 V s   | 1   | 1   | 0   | 0   | 0    | 1   | 0   | 1  | 1    | 0    | 1   | 0   | 0   | 0    | 1    | 0   |
| 20 V s  | 0   | 1   | 0   | 0   | 0    | 1   | 0   | 1  | 1    | 0    | 1   | 0   | 0   | 0    | 1    | 0   |
| 200 V s   | 1   | 1   | 0   | 0   | 0    | 0   | 0   | 1  | 1    | 0    | 1   | 0   | 0   | 0    | 1    | 0   |
| 2000 V s  | 1   | 0   | 0   | 0   | 0    | 1   | 1   | 1  | 1    | 0    | 1   | 0   | 0   | 0    | 1    | 0   |
| 2 VHz   | 1   | 1   | 0   | 0   | 0    | 1   | 0   | 1  | 1    | 0    | 1   | 0   | 0   | 0    | 1    | 0   |
| 20 VHz  | 0   | 1   | 0   | 0   | 0    | 1   | 0   | 1  | 1    | 0    | 1   | 0   | 0   | 0    | 1    | 0   |
| 200 VHz   | 1   | 1   | 0   | 0   | 0    | 0   | 0   | 1  | 1    | 0    | 1   | 0   | 0   | 0    | 1    | 0   |
| 2000 VHz  | 1   | 0   | 0   | 0   | 0    | 1   | 1   | 1  | 1    | 0    | 1   | 0   | 0   | 0    | 1    | 0   |
| °C  | 1   | 0   | 0   | 1   | 0    | 1   | 0   | 1  | 0    | 1    | 0   | 1   | 0   | 0    | 1    | 1   |
|  | 1   | 1   | 0   | 1   | 0    | 1   | 0   | 1  | 1    | 1    | 0   | 1   | 0   | 0    | 1    | 1   |
| <b>Calibration measurements</b>   |     |     |     |     |      |     |     |    |      |      |     |     |     |      |      |     |
| AUTOCAL<br>0,1V   | —   | —   | 1   | 0   | 0    | —   | —   | —  | 0    | 0    | —   | —   | —   | 0    | —    | —   |
| AUTOCAL<br>1V   | —   | —   | 1   | 0   | 0    | —   | —   | —  | 1    | 1    | —   | —   | —   | 0    | —    | —   |
| I ZERO<br>200mA   | 1   | 1   | 1   | 1   | 0    | 1   | 1   | 0  | 0    | 0    | 1   | —   | —   | 1    | 1    | 1   |
| I ZERO<br>2A  | 1   | 1   | 1   | 1   | 0    | 1   | 1   | 0  | 1    | 0    | 1   | —   | —   | 1    | 1    | 1   |

NOTE: 0 = high imp. relay or FET is in (  )  
 1 = low imp. relay or FET is out (  )  
 — = no change

#### 1.4.5.4. ROM circuits and address/data decoding

The program memory stores for the  $\mu P$  use two 2K 8-bit UV erasable PROM (programmable read-only) memories with fast single address location programming. These are addressed by two 6-bit latches from the  $\mu P$ .

##### Address/data decoding

The instrument addressing is achieved by the 8 lines of the data bus DB0 to DB7 and four high-order program lines from part 2 of the  $\mu P$ ; P20, P21, P22, P23. These lines are presented to two flip-flop latches D1905 and D1906.

These are D-type flip-flops, each with six data inputs, a clock input (CP), a master reset input  $\overline{MR}$  and six buffered outputs.

The ROM/address outputs are transferred on logic '1' pulses of the clock if  $\overline{MR}$  is at logic '1' (permanently held at 1).

When at logic '0',  $\overline{MR}$  resets all the flip-flops independently of the CP state and the data inputs.

The addresses are clocked by the negative-going edge of the ALE pulse from the  $\mu P$ , via an exclusive OR gate D1911.

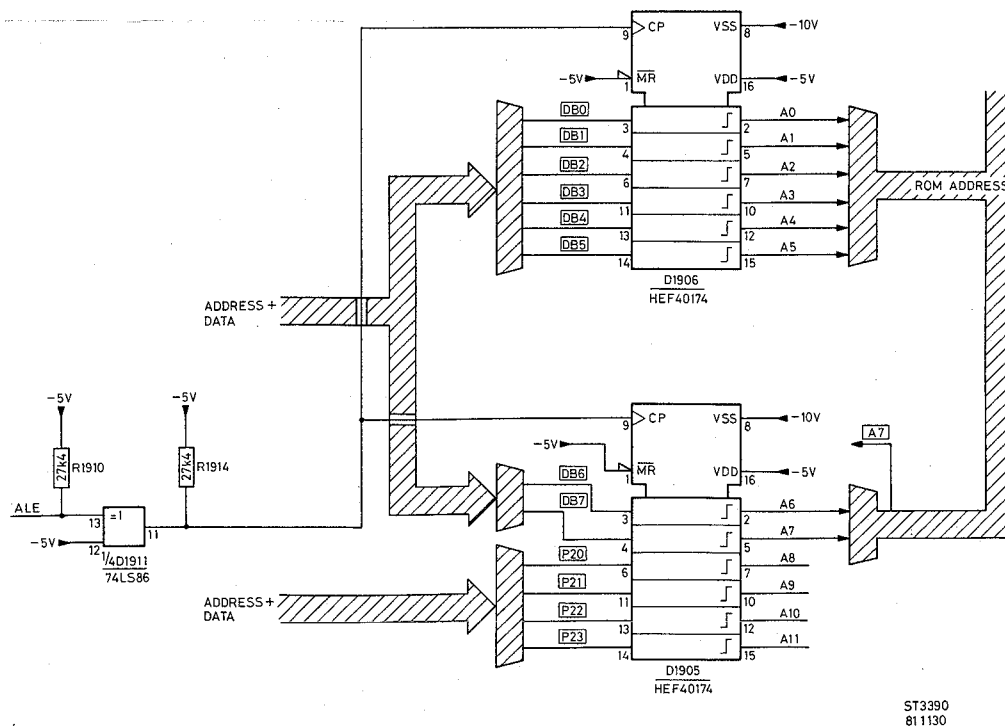


Fig. 38. Address decoding



## ROMs

The two ROMs are each addressed by the eight address lines A0 to A7 and three of the program control lines P20, P21, P22.

When addressed, the ROM responds by sending the instruction or data in the location addressed on the eight lines of the databus.

This data output function is controlled by the  $\overline{\text{PSEN}}$  (program store enable) signal (pin 9) sent by the  $\mu\text{P}$ . This is applied to NAND-gate D1921, wired as an inverter and gives a logic "1" on NAND-gate inputs D1921-12 and D1921-5.

Signal P23 is a chip select input via inverter D1921, which is used to select either D1909 or D1920 via input pin 20.

## MEMORY

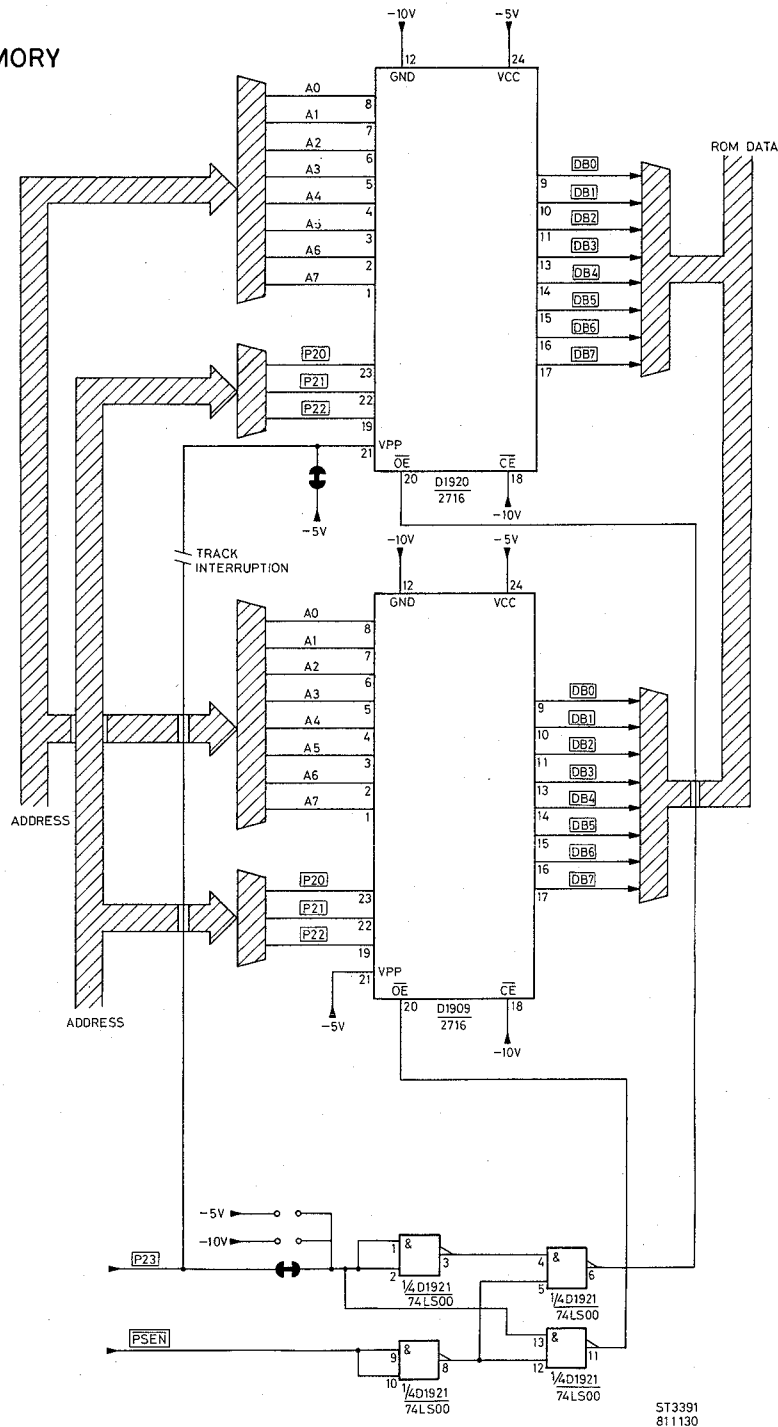


Fig. 39. Memory

#### 1.4.6. Display section

The display section of the PM2521 contains three L.C.D. interface circuits.

Each chip is driven by the common serial data input signal and synchronised clock signal, but is separately enabled.

Internally, a bus control circuit verifies and accepts these inputs, decodes them and sets the data in a shift register. After acceptance, the data is latched and the 20 bits are transferred to the display segment outputs. The 58 segments that comprise the total display capability are distributed between the three interface chips.

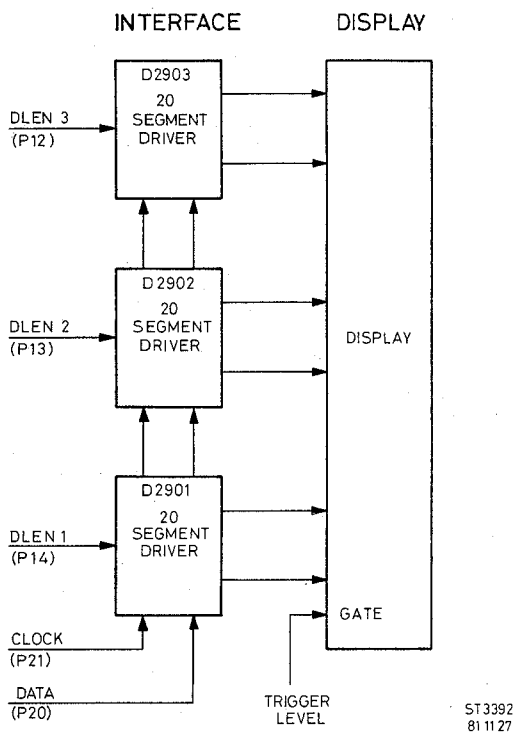


Fig. 40. Display interface

#### 1.4.7. Power supply

The power supply unit consists of a transformer, rectifiers and a stabilizing section for the rectified voltages. The voltages used are:

- |    |        |   |
|----|--------|---|
| 1. | — 5V   | logic 1                                 |
| 2. | — 10V  | logic 0                                 |
| 3. | — 5VR  | special relay voltage                   |
| 4. | + 10V  | } stabilized voltages                   |
| 5. | + 10'V |   |
| 6. | + VR   | } non-stabilized voltages +12V and -12V |
| 7. | — VR   |   |

The +10V, +10'V is made with a +5V regulator A801 and a zener diode V855 in series.

**NOTE:** It is also possible that a +10V regulator may be used and instead of the zener diode V855 is then replaced by a wire link.

By means of an operational amplifier A802 the +10V is converted into -10V.

The -5V is made with the stabilization circuit V801, V802 and V852. Because of the high current which flows to the components a Darlington transistor V803 is used. Unwanted oscillation is prevented by C809 and L801.

## 2. ACCESS

**WARNING:** The opening of covers or removal of parts, except those to which access can be gained by hand is likely to expose live parts, and accessible terminals may also be live.

The instrument shall be disconnected from all voltage sources before any replacement or maintenance and repair during which the instrument will be opened.

If afterwards, any adjustment, maintenance or repair of the opened instrument under voltage conditions is inevitable, it shall be carried out only by a skilled person who is aware of the hazard involved.

Bear in mind that capacitors inside the instrument may still be charged even if the instrument is separated from all voltage sources.

### 2.1. DISMANTLING THE PM2521

#### 2.1.1. Removing the top cover. (fig. 41)

- Place the handle in its bottom position.
- Remove the two fixing screws at the rear which attach the top cover to the bottom cover.
- Lever the top cover and pull it backwards.
- Disconnect the transformer plug which is connected to X802.

#### 2.1.2. Removing the bottom cover. (fig. 42)

- Remove the top cover.
- Remove the handle.
- Remove the two fixing screws which attach the printed-circuit board to the bottom cover. (fig. 42 item 1).
- Bend out the two hooks of the front plate. (fig. 42 item 2).
- Remove the bottom cover.

#### 2.1.3. Removing the front assembly

- Remove top and bottom cover.
- Disconnect the flexible print from the connector X1901. (fig. 42 item 3).
- Bend out the two hooks of the front plate at the bottom of the printed-circuit board. (fig. 43 item 1).
- Disconnect the front from the printed-circuit board.

**NOTE:** The potentiometer R502 is still connected with the printed circuit board.

## 2.2. REPLACING PARTS

### 2.2.1. Liquid crystal display (fig. 44 item 1), display unit N3 (fig. 44 item 2), interconnection rubber (fig. 44 item 3) or function knob (fig. 44 item 4).

- Remove the front assembly.
- Remove the six screws and the screening plate of the front assembly. (fig. 44 item 6).

*NOTE: The potentiometer R502 can now be removed.*

- Remove the function knob by bending out the four hooks of the front plate. (only for replacing the function knob) (fig. 44 item 8).
- Remove the three screws from the display unit cover and the cover itself. (fig. 44 item 5).
- Replace the defective component and mount the L.C.D. unit again as described above.

*NOTE 1: Make sure that the L.C.D., the display unit cover and the interconnection rubber are placed in the most right hand position. (fig. 44 item 7).*

*NOTE 2: Do not touch the contacts of the L.C.D., the interconnection rubber and the display unit N3 with the fingers.*

### 2.2.2. Function switch. (fig. 42)

- Remove the top- and bottom cover. Remove also the front assembly.
- Bend out the two hooks and remove the printed-circuit board. (fig. 42 item 4).
- The function switch consist of:
  - 2 slide bodies
  - 4 springs
  - 4 switch contacts
- Remove the screws and nuts from the slide bodies. The bodies can now be lifted from the printed-circuit board.

*NOTE: The slide body is stocked complete with springs and switch contacts.*

### 2.2.3. Thermal fuse

- Remove the bottom cover.
- Remove the four screws which attach the screening plate of the transformer to the bottom cover. (fig. 45 item 1).
- Unsolder the black wire connecting the transformer with the screening. (fig. 45 item 2).
- Unsolder the connections of the thermal fuse. (fig. 45a. item 1).
- Replace the thermal fuse as shown in fig. 45a.

*NOTE: Do not replace the thermal fuse with a piece of wire as this gives the danger of a fire hazard.*

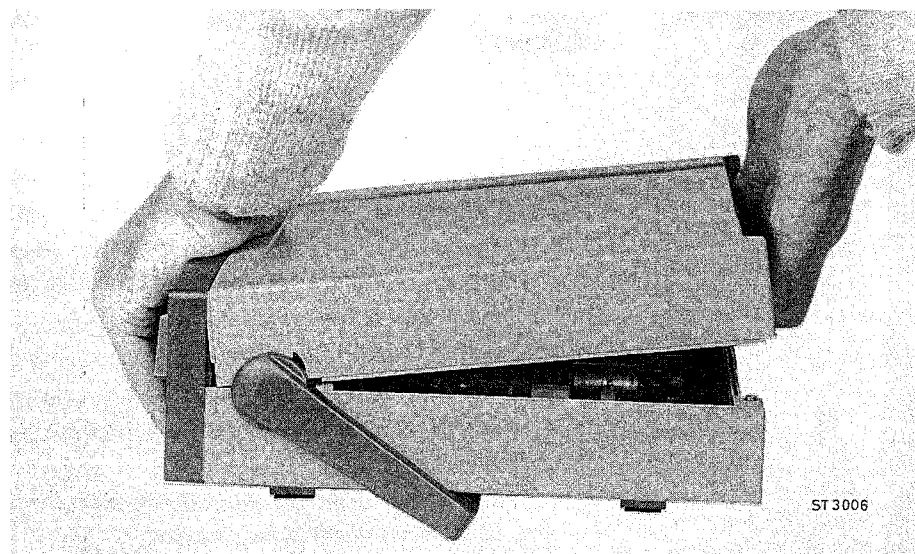


Fig. 41. Removing the top cover

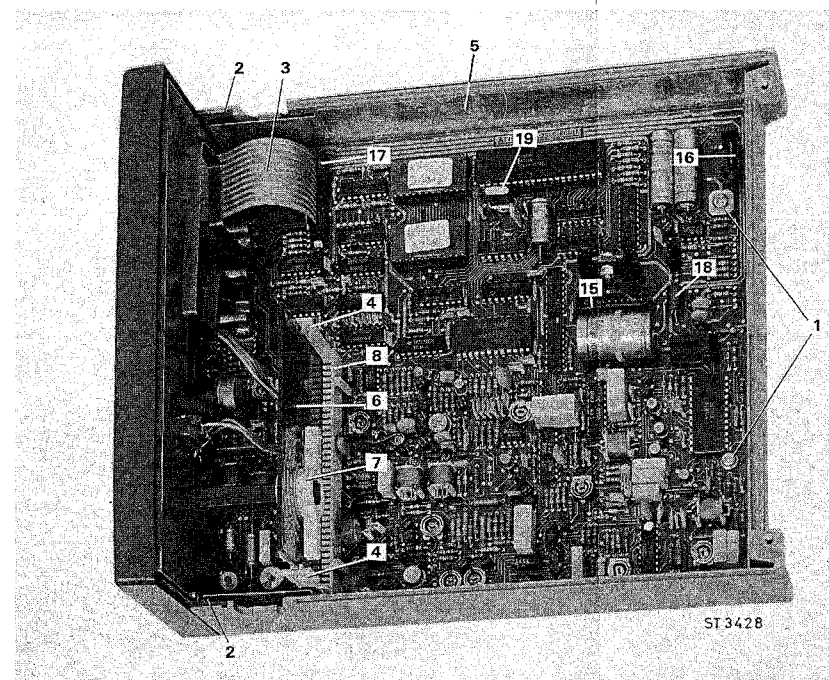


Fig. 42. Removing the bottom cover and front

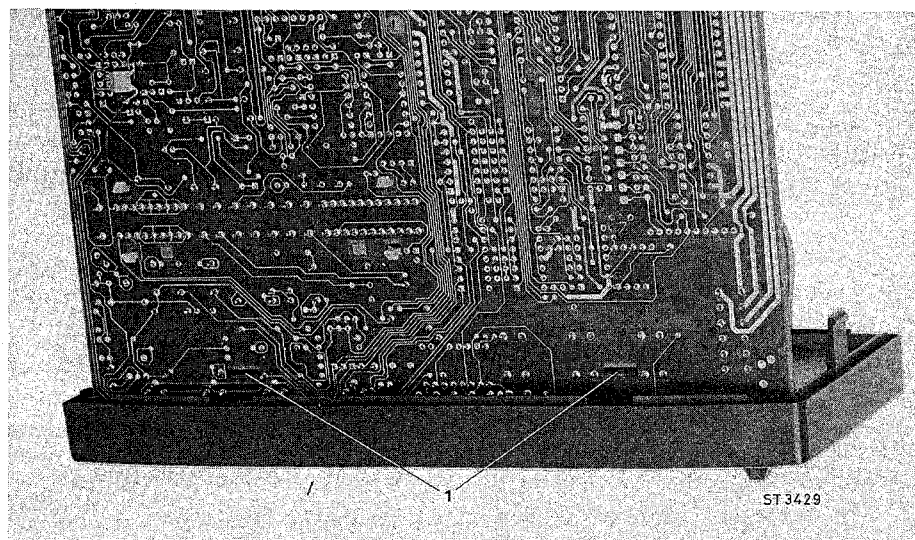


Fig. 43. Removing the front

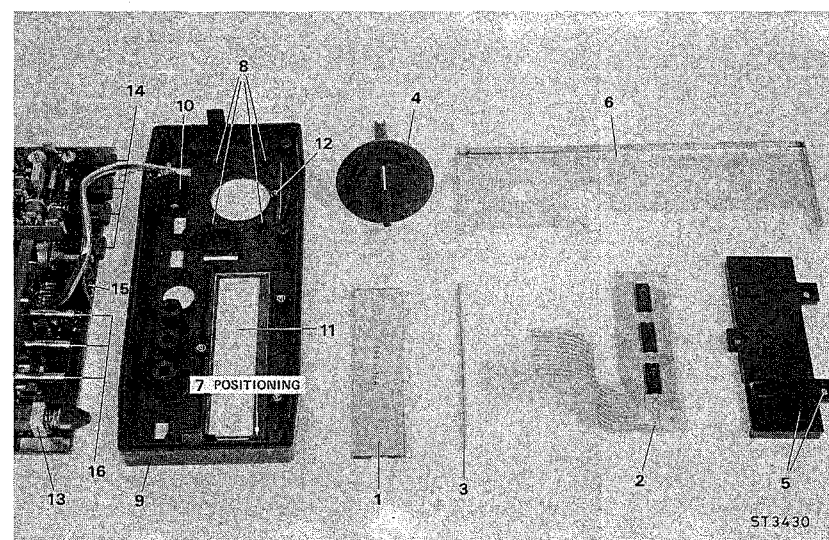


Fig. 44. Front assembly

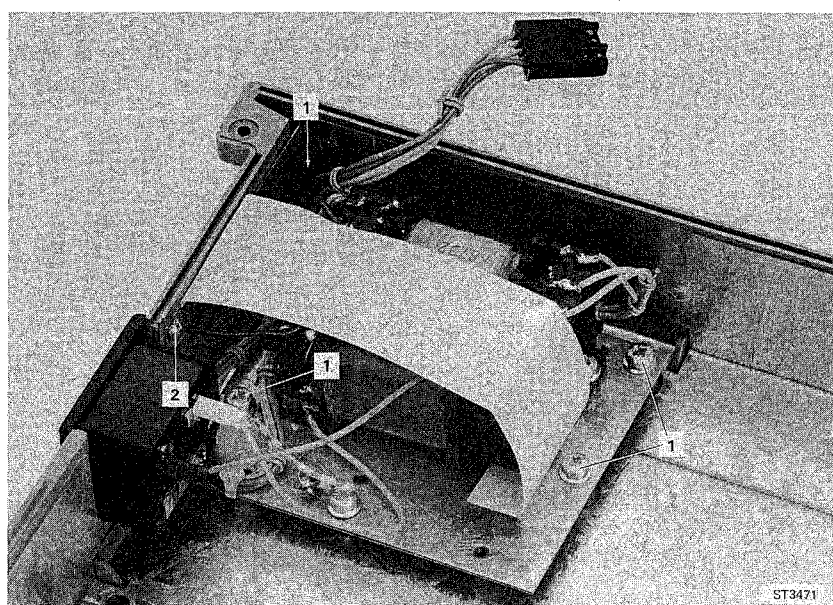


Fig. 45. Removing the thermal fuse

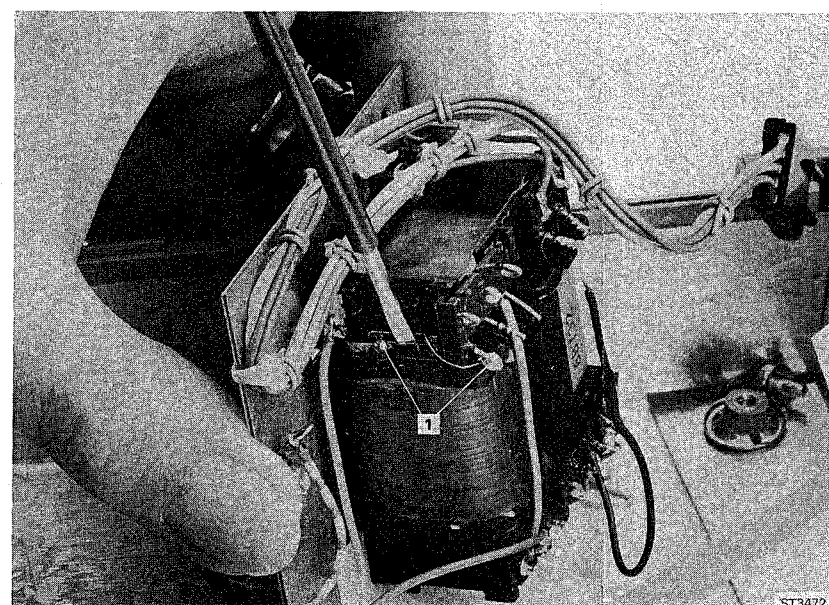


Fig. 45a. Removing the thermal fuse

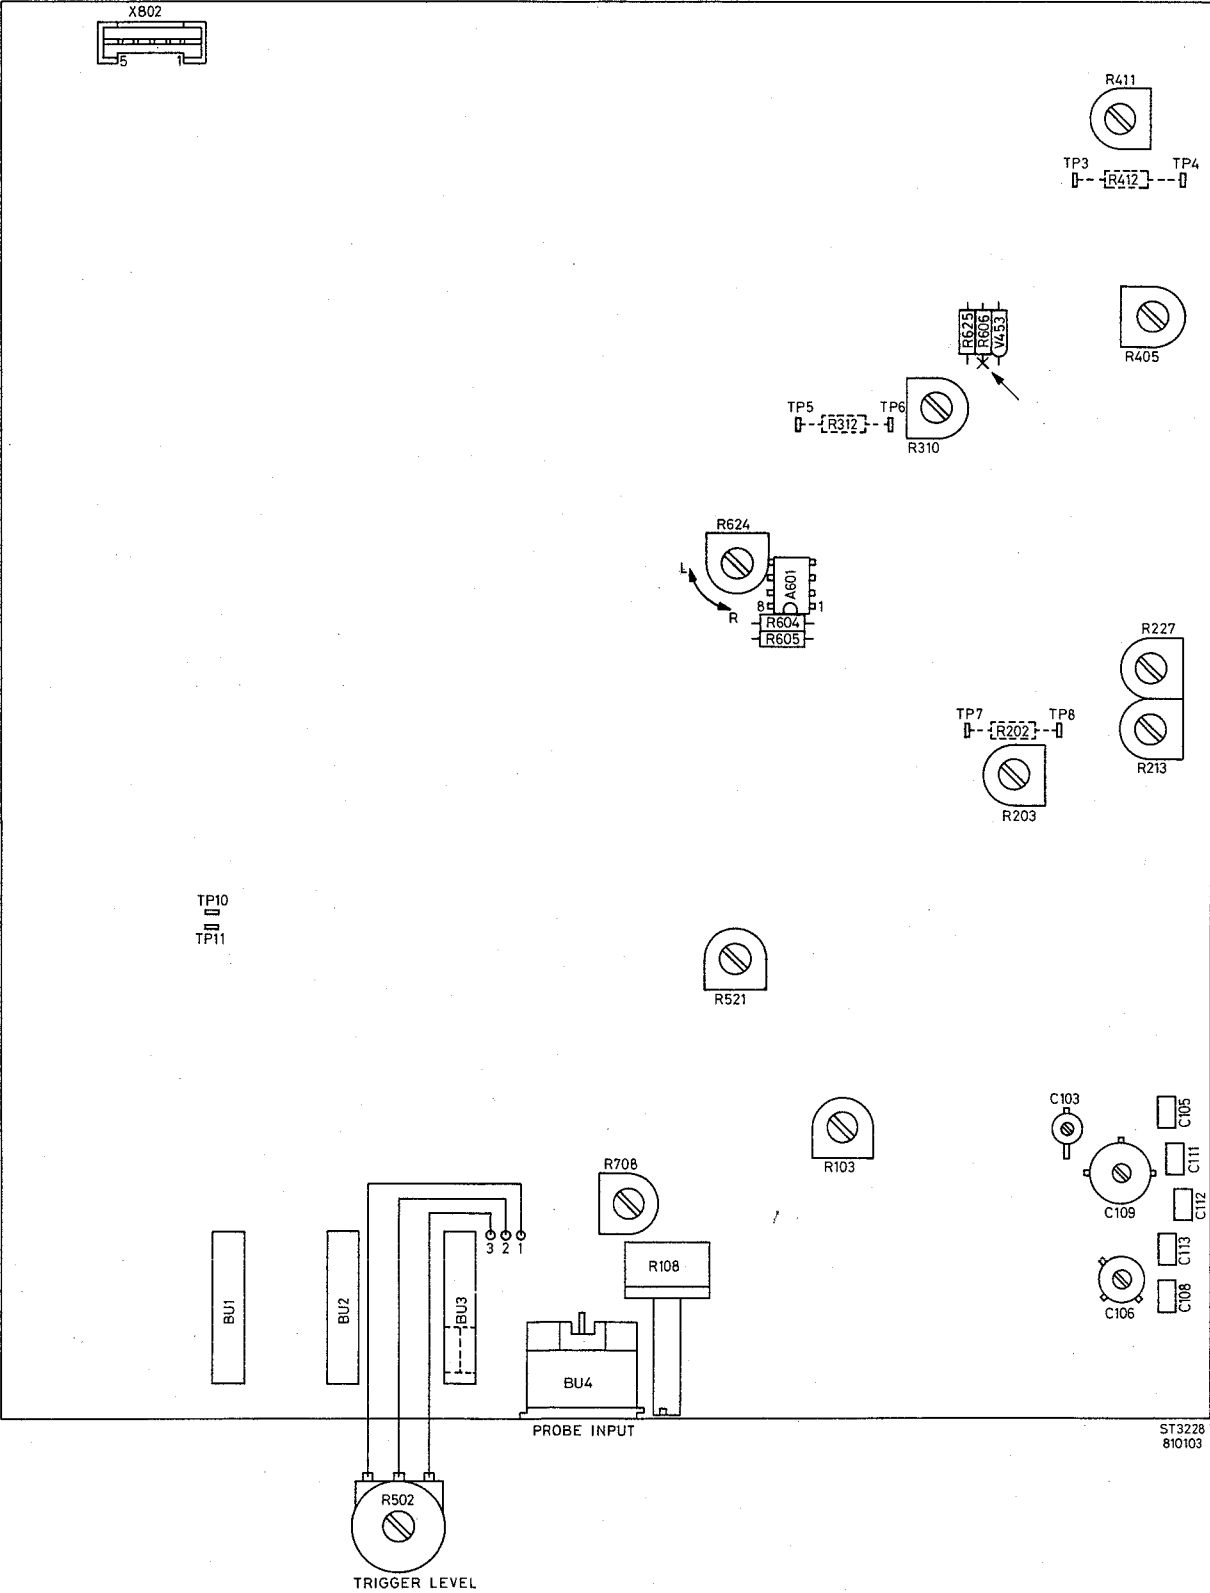


Fig. 46. Adjusting elements

3. CHECKING AND ADJUSTING

**WARNING:** Before switching-on, ensure that the instrument has been installed in accordance with the instructions outlined in Section 5 of the Operating Manual.

The opening of covers or removal of parts, except those to which access can be gained by hand is likely to expose live parts, and accessible terminals may also be live.

The instrument shall be disconnected from all voltage sources before any replacement or maintenance and repair during which the instrument will be opened.

If afterwards, any adjustment, maintenance or repair of the opened instrument under voltage conditions is inevitable, it shall be carried out only by a skilled person who is aware of the hazard involved.

Bear in mind that capacitors inside the instrument may still be charged even if the instrument is separated from all voltage sources.

The tolerances in this chapter correspond to the factory data, which only apply to a completely re-adjusted instrument. These tolerances may deviate from those mentioned in the Technical Data. (Chapter 2. of the Operating Manual).

For a complete re-adjustment of the instrument the sequence in this chapter should be adhered too. When individual components, especially semi-conductors are replaced, the relevant section should be completely re-adjusted.

To calibrate this measuring instrument only reference voltages and measuring equipment with the required accuracy should be applied. If such equipment is not available, comparative measurements can be made with another calibrated PM2521. However, theoretically in extreme cases, the tolerances may leave some room for doubt.

The measuring arrangement should be such that the measurement cannot be affected by external influences. Protect the circuit against temperature variations (fans, sun).

With all the measurement the cables should be kept as short as possible; at higher frequencies co-axial leads should be used.

Non screened measuring cables may act as serials so that the measuring instrument will measure LF voltage values or hum. voltage.

Before checking and adjusting, remove the top-cover. Make sure that the cable from the power supply is connected with X802.

In the software there are two subroutines which are used for adjusting the PM2521. To call these subroutines short circuit TP10 and TP11 for one second (first subroutine) and repeat it for the next subroutine. After using these subroutines the PM2521 should be reset. (Switch the PM2521 off and on).

## 3.1. DC RANGES

| No. | Adjustment                    | Adjusting element                           | Preparations  | Input signals  | Adjusting data  | Measuring points                         |
|-----|-------------------------------|---|---|--|---|--|
| 1.  | DC ranges<br>Active filter    | Potentiometer R624                          | Set instrument in position V ...<br>Select: MAN ranging<br>: 1000V range  | Short circuit the $V \Omega$ mA and the 0 socket                 | $0\text{mV} \pm 1\text{mV}$<br>measured with a DC meter $\pm 0,5\%$         | A601 point 6 and 0 socket                |
| 2.  | Zero setting                  | Potentiometer R108                          | Set instrument in position V ...<br>Select: MAN ranging<br>: 200mV range  | Short circuit the $V \Omega$ mA and the 0 socket                 | $\pm 000.00\text{mV} \pm 1 \text{ dig.}$                                    | Display                                  |
| 3.  | Reference current for the ADC | Resistor R412; coarse (MR25, 1% E96 series) | Set instrument in position V ...<br>Select: first subroutine (Short circuit TP10 and TP11 for one second; k is displayed; * is blinking)  |  | -1V or as close as possible to the -1V measured with a DC meter $\pm 0,5\%$ | R606 (front panel side) and the 0 socket |
| 4.  | CAL mode                      | Potentiometer R411                          | Set instrument in position V ...<br>Select: second subroutine (Short circuit TP10 and TP11 for one second; Z is displayed; * is blinking) | $+20\text{V} \pm 0,005\%$ supplied to $V \Omega$ mA and 0 socket | $+20.000 \pm 1 \text{ dig}$   | Display                                  |
| 5.  | Check                         |   | Switch the instrument off and on<br>Set instrument in position V ...<br>Select: MAN ranging<br>: 20V range                                | $+20\text{V} \pm 0,005\%$ supplied to $V \Omega$ mA and 0 socket | $+20.000\text{V} \pm 2 \text{ dig}$   | Display                                  |

| No.   | Adjustment | Adjusting element  | Preparations   | Input signals  | Adjusting data   | Measuring points |
|---|------------|--------------------|--|--|--|------------------|
| 6.  | 2V range   | Potentiometer R103 | Set instrument in position V ∴<br>Select: MAN ranging<br>: 2V range    | +2V ± 0,005%<br>supplied to V Ω mA<br>and 0 socket   | +2.0000V ± 1 dig   | Display          |
| 7.  | Check      |                    | Set instrument in position V ∴<br>Select: MAN ranging<br>: 20V range   | +20V ± 0,005%<br>supplied to V Ω mA<br>and 0 socket  | +20.000V ± 6 dig   | Display          |
| NOTE: If the tolerance is > 6 dig then repeat adjustment 3, 4, 5 and 6. |            |                    |  |  |  |                  |
| 8.  | Check      |                    | Set instrument in position V ∴<br>Select: MAN ranging<br>: 200mV range | a. +200mV ± 0,005%<br>b. -200mV ± 0,005%<br>c. +100mV ± 0,005%<br>supplied to V Ω mA and<br>0 socket | a. +200.00mV ± 6 dig<br>b. -200.00mV ± 6 dig<br>c. +100.00mV ± 4 dig | Display          |
| 9.  | Check      |                    | Set instrument in position V ∴<br>Select: MAN ranging<br>: 200V range  | a. +200V ± 0,005%<br>b. -200V ± 0,005%<br>c. +100V ± 0,005%<br>supplied to V Ω mA and<br>0 socket    | a. +200.00V ± 6 dig<br>b. -200.00V ± 6 dig<br>c. +100.00V ± 4 dig    | Display          |
| 10.   | Check      |                    | Set instrument in position V ∴<br>Select: MAN ranging<br>: 2000V range | +1000V ± 0,005%<br>supplied to V Ω mA and<br>0 socket  | +1000.0V ± 4 dig   | Display          |



## 3.2. AC RANGES

| No.  | Adjustment               | Adjusting element   | Preparations  | Input signals  | Adjusting data                                      | Measuring points |
|------|--------------------------|---|---|--|---|------------------|
| 11a. | AC ranges<br>20V ~ range | Resistor R312, coarse<br>(MR25,1% E96 signal<br>Potentiometer R310,<br>fine   | Set instrument in<br>position V ~<br>Select: MAN ranging<br>: 20V range   | 20V ~ 60Hz $\pm 0,01\%$<br>supplied to V $\Omega$ mA<br>and 0 socket                                 | ~ 20.000V $\pm 2$ dig                               | Display          |
| 11b. | 2V ~ range               | Trimming capacitor<br>C103<br><br><i>NOTE: If the adjustment cannot be made then cut away capacitor C105 (= 3,9pF) or replace it and repeat adjustment 11.</i>                                      | Set instrument in<br>position V ~<br>Select: MAN ranging<br>: 2V range    | 2V ~ 1kHz $\pm 0,01\%$<br>supplied to V $\Omega$ mA<br>and 0 socket                                  | ~ 2.0000V $\pm 5$ dig                               | Display          |
| 12.  | 20V ~ range              | Trimming capacitor<br>C106<br><br><i>NOTE: If the adjustment cannot be made then cut away capacitor C108 (= 18pF) or replace it and repeat adjustment 12.</i>                                       | Set instrument in<br>position V ~<br>Select: MAN ranging<br>: 20V range   | 20V ~ 1kHz $\pm 0,01\%$<br>supplied to V $\Omega$ mA<br>and 0 socket                                 | ~ 20.000V $\pm 5$ dig                               | Display          |
| 13.  | 200V ~ range             | Trimming capacitor<br>C109<br><br><i>NOTE: If the adjustment cannot be made then cut away capacitor 111 to 113 (C111= 82pF C112 = 150pF C113 = 270pF) or replace them and repeat adjustment 13.</i> | Set instrument in<br>position V ~<br>Select: MAN ranging<br>: 200V range  | 200V ~ 1kHz $\pm 0,01\%$<br>supplied to V $\Omega$ mA<br>and 0 socket                                | ~ 200.00V $\pm 5$ dig                               | Display          |
| 14.  | Check                    |   | Set instrument in<br>position V ~<br>Select: MAN ranging<br>: 200mV range | a. 200mV 60Hz $\pm 0,01\%$<br>b. 20mV 60Hz $\pm 0,01\%$<br>supplied to V $\Omega$ mA<br>and 0 socket | ~ 200.00mV $\pm 150$ dig<br>~ 020.00mV $\pm 20$ dig | Display          |

## 3.3. TRIGGER LEVEL RANGES

| No. | Adjustment                         | Adjusting element  | Preparations  | Input signals                   | Adjusting data   | Measuring points |
|-----|------------------------------------|--------------------|---|---------------------------------|--|------------------|
| 15. | Trigger level ranges<br>Comparator | Potentiometer R502 | Set instrument in<br>position TRIGGER LEVEL<br>Select: +2V range  | $\sim 1,414V\ 10kHz \pm 0,01\%$ | Adjust potentiometer<br>R502 so that the word<br>"gate" lights up<br>Note down the reading<br>of the display without<br>polarity (value 1) | Display          |
| 16. | Comparator                         | Potentiometer R502 | Set instrument in<br>position TRIGGER LEVEL<br>Select: -2V range  | $\sim 1,414V\ 10kHz \pm 0,01\%$ | Adjust potentiometer<br>R502 so that the word<br>"gate" lights up<br>Note down the reading<br>of the display without<br>polarity (value 2) | Display          |
| 17. | Comparator                         | Potentiometer R521 | Set instrument in<br>position TRIGGER LEVEL<br>Select: + 2V range<br>Adjust the display with<br>R502 on:<br>$\frac{\text{value 1} + \text{value 2}}{2} \pm 3 \text{ dig}$ | $\sim 1,414V\ 10kHz \pm 0,01\%$ | Adjust potentiometer<br>R521 so that the word<br>"gate" lights ups   | Display          |


## 3.4. CURRENT RANGES

| No.   | Adjustment     | Adjusting element  | Preparations  | Input signals   | Adjusting data                           | Measuring points |
|---|----------------|--|---|---|--|------------------|
| 18.   | Current ranges | Potentiometer R213   | Set instrument in position A ...<br>Select: MAN ranging<br>: 2 mA range           |   | $\pm 0.000\text{mA} \pm 1 \text{ dig}$   | Display          |
|   |                | Potentiometer R227   | Select: MAN ranging<br>: $2\mu\text{A}$ range                                     |   | $\pm 0.000\mu\text{A} \pm 1 \text{ dig}$ | Display          |
|   | Shunt          | Resistor R202; coarse (MR25, 1%, E96 series)<br>Potentiometer R203, fine | Select: MAN ranging<br>: 2A range   | $+ 2\text{A} \dots \pm 0,1\%$<br>supplied to 0,2-10A and 0 socket | $+ 2.000\text{A} \pm 1 \text{ dig}$      | Display          |
| NOTE: Light on the diodes V251, and V252 can influence the adjustment. Protect the diodes against light.<br>NOTE: The high current ranges (0,2-10A) are selected by connecting the leads between the 0 socket and the 0,2-10A socket and the up/down buttons. |                |  |   |   |  |                  |
| 19.   | Checks current |  | Set instrument in position A ...<br>Select: MAN ranging<br>: $2\mu\text{A}$ range | $+ 2\mu\text{A} \pm 0,1\%$  | $+ 2.000\mu\text{A} \pm 7 \text{ dig}$   | Display          |
|   |                |  | Select: MAN ranging<br>: $20\mu\text{A}$ range                                    | $+ 20\mu\text{A} \pm 0,1\%$                                       | $+ 20.00\mu\text{A} \pm 4 \text{ dig}$   | Display          |
|   |                |  | Select: MAN ranging<br>: $200\mu\text{A}$ range                                   | $+ 200\mu\text{A} \pm 0,1\%$                                      | $+ 200.00\mu\text{A} \pm 4 \text{ dig}$  | Display          |
|   |                |  | Select: MAN ranging<br>: 2mA range  | $+ 2\text{mA} \pm 0,1\%$  | $+ 2.000\text{mA} \pm 4 \text{ dig}$     | Display          |
|   |                |  | Select: MAN ranging<br>: 20mA range   | $+ 20\text{mA} \pm 0,1\%$   | $+ 20.00\text{mA} \pm 4 \text{ dig}$     | Display          |
|   |                |  | Select: MAN ranging<br>: 20mA range   | $- 20\text{mA} \pm 0,1\%$   | $- 20.00\text{mA} \pm 4 \text{ dig}$     | Display          |
|   |                |  | Set instrument in position A ...<br>Select: MAN ranging<br>: 20mA range           | $\sim 20\text{mA } 60\text{Hz} \pm 0,2\%$                         | $\sim 20.00\text{mA} \pm 7 \text{ dig}$  | Display          |
|   |                |  |   | supplied to V $\Omega$ mA and 0 socket                            |  |                  |

## 3.5. RESISTANCE RANGES

| No. | Adjustment                              | Adjusting element  | Preparations  | Input signals   | Adjusting data   | Measuring points  |
|-----|---|--------------------|---|---|--|---|
| 20. | Resistance ranges<br>20M $\Omega$ range | Potentiometer R405 | Set instrument in position $\Omega$<br>Select: MAN ranging<br>: 20M $\Omega$ range  | 20M $\Omega \pm 0,1\%$  | 20.000M $\Omega \pm 10$ dig  | Display   |
| 21. | Checks resistance ranges                |                    | Set instrument in position $\Omega$<br>Select: MAN ranging<br>: 200 $\Omega$ range<br>Select: MAN ranging<br>: 2k $\Omega$ range<br>Select: MAN ranging<br>: 20k $\Omega$ range<br>Select: MAN ranging<br>: 200k $\Omega$ range<br>Select: MAN ranging<br>: 2M $\Omega$ range | 200 $\Omega \pm 0,1\%$<br><br>2k $\Omega \pm 0,1\%$<br><br>20k $\Omega \pm 0,1\%$<br><br>200k $\Omega \pm 0,1\%$<br><br>2M $\Omega \pm 0,1\%$ | 200.00 $\Omega \pm 35$ dig<br><br>2.0000k $\Omega \pm 35$ dig<br><br>20.000k $\Omega \pm 35$ dig<br><br>200.00k $\Omega \pm 35$ dig<br><br>2.0000M $\Omega \pm 80$ dig | Display<br><br>Display<br><br>Display<br><br>Display<br><br>Display |

## 3.6. TEMPERATURE RANGES
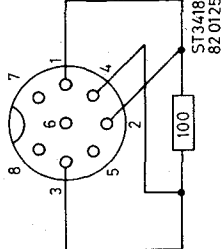
| No. | Adjustment                            | Adjusting element  | Preparations             | Input signals   | Adjusting data                 | Measuring points |
|-----|---------------------------------------|--|--------------------------|---|--------------------------------|------------------|
| 22. | Temperature ranges<br>0°C calibration | Potentiometer R708<br><br><i>NOTE: The resistor should be connected as shown</i> | Set instrument in<br>0°C | $100\Omega \pm 0,1\%$<br>to the PROBE input<br> | $\pm 0000.0 \pm 1 \text{ dig}$ | Display          |

## 3.7. FREQUENCY RANGES

| No. | Adjustment                     | Adjusting element | Preparations   | Input signals            | Adjusting data                       | Measuring points |
|-----|--------------------------------|-------------------|--|--------------------------|--------------------------------------|------------------|
| 23. | Hz ranges<br>Check 10kHz range |                   | Set instrument in<br>position TRIGGER LEVEL<br>Select: + 2V range and<br>adjust it to: $\pm 50\text{mV}$<br>+ 0.000V<br>Set instrument in<br>position Hz<br>Select: MAN ranging<br>: 10kHz range | 100mV, 9kHz $\pm 0,01\%$ | GATE 9.0000kHz $\pm 300 \text{ dig}$ | Display          |



## 4. FAULT-FINDING

### 4.1. GENERAL

#### 4.1.1. Service hints

If servicing is necessary the following points should be taken into account in order to avoid damaging the instrument.

- Take care to avoid short-circuits with measuring clips and hooks if the instrument is switched-on, especially near the input terminals when high-voltages are present.
- Use a miniature soldering iron (35W max.) with a thin cleaner or a vacuum soldering iron.
- Use an acid-free solder.
- When fault-finding, remove top and bottom covers and make sure that the POWER SUPPLY is connected with the main board.
- After repair, the instrument should be recalibrated.

#### 4.1.2. Fault-finding procedure

This chapter gives a fault-finding procedure to locate the faulty section in the instrument. From this procedure the faulty parts can often be found by using the detailed flow charts.

*NOTE: The procedure is only intended as an aid to fault-finding, and obviously that the faulty component will not be found in every case.*

Measuring instruments used:

- Digital multimeter.
- Oscilloscope.
- Counter.

#### 4.1.3. Fault-finding with the signature analyser

When the normal fault-finding does not find the fault, then it is possible to use a test-ROM.

The testrom with several tests for the PM2521 is based on signature analysis. It can trace faults at component level for the controller section, display section and even a part of the analog section.


The signature analysis fault-finding consists of a:

- Testrom with the following tests:
  - Free run tests
  - RAM and I/O test
  - Visual L.C.D. test (no S.A.)
  - Switch decoding test
  - Relay/FET test
  - Static relay/FET test (no S.A.)
  - Counter test
  - Interrupt controller test
- Test service note which includes:
  - Description of how to use the signature analyser
  - Circuit diagrams with signatures

The test-ROM and the service note can be ordered from Concern Service under code nr. 5322 694 54013.

## 4.2. FAULT-FINDING FLOW-CHARTS


### 4.2.1. Basic check


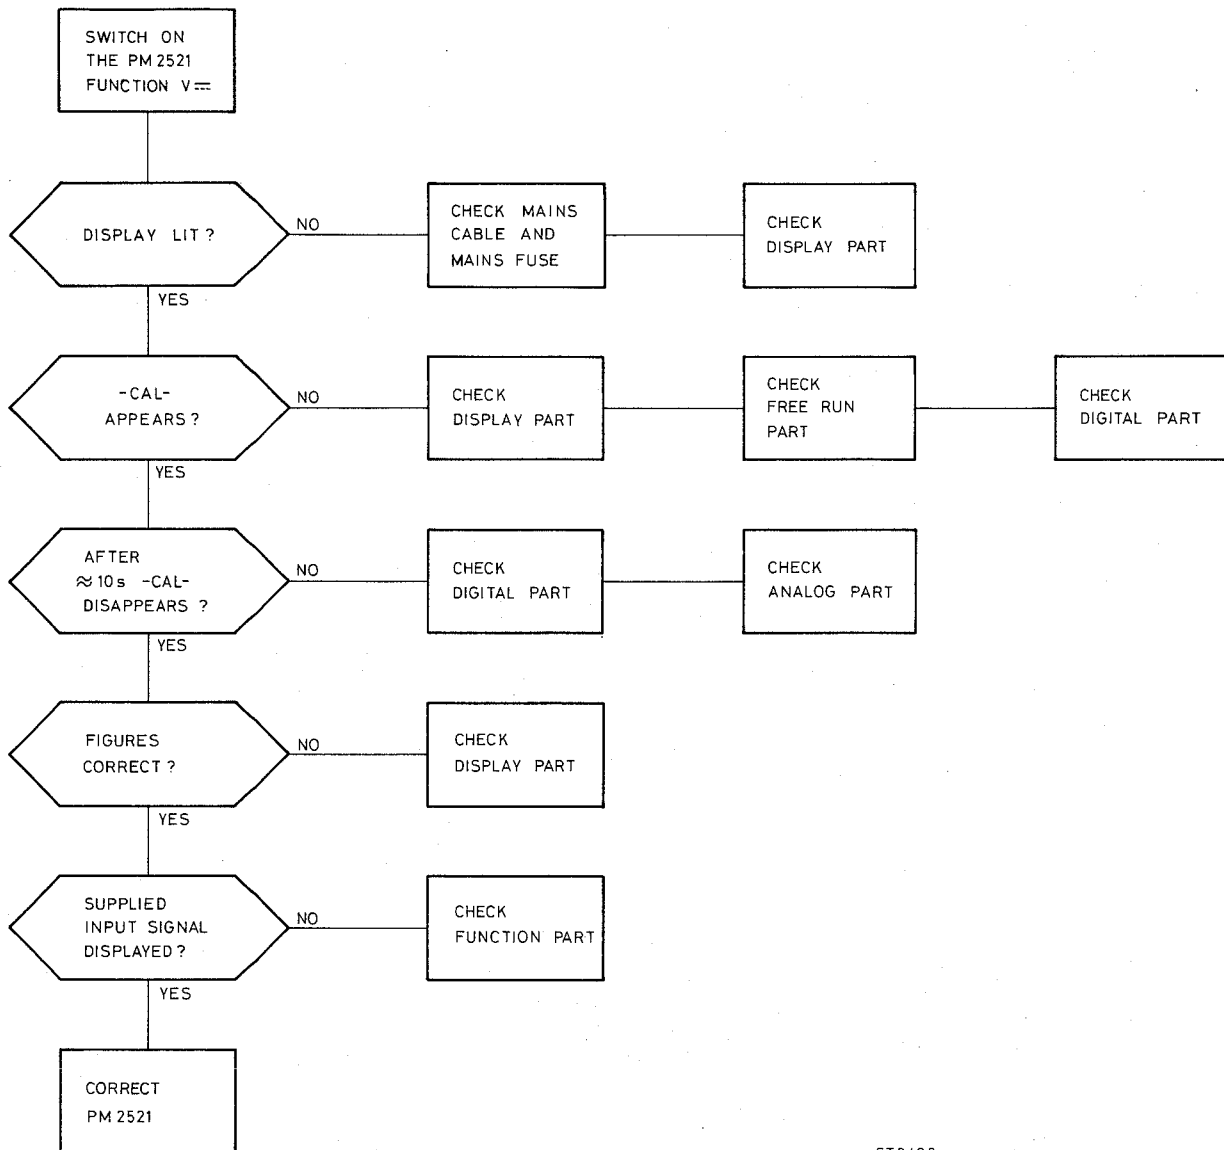



ST3422  
820126



## 4.2.2. Function part

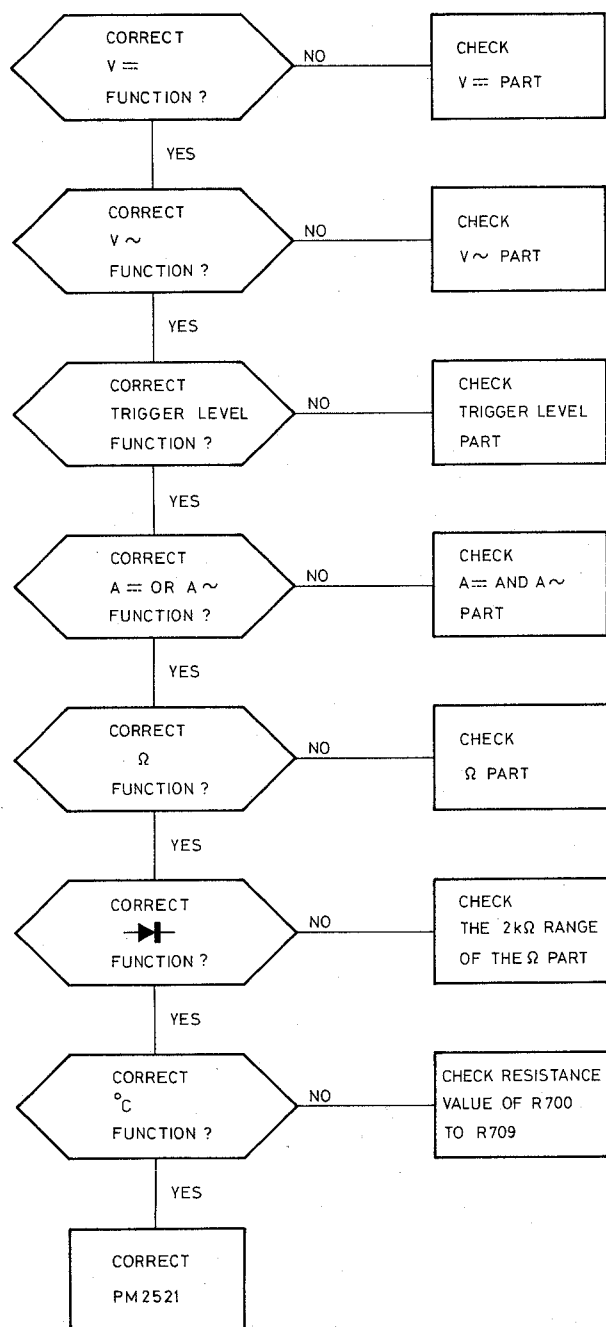
ST3423  
820128

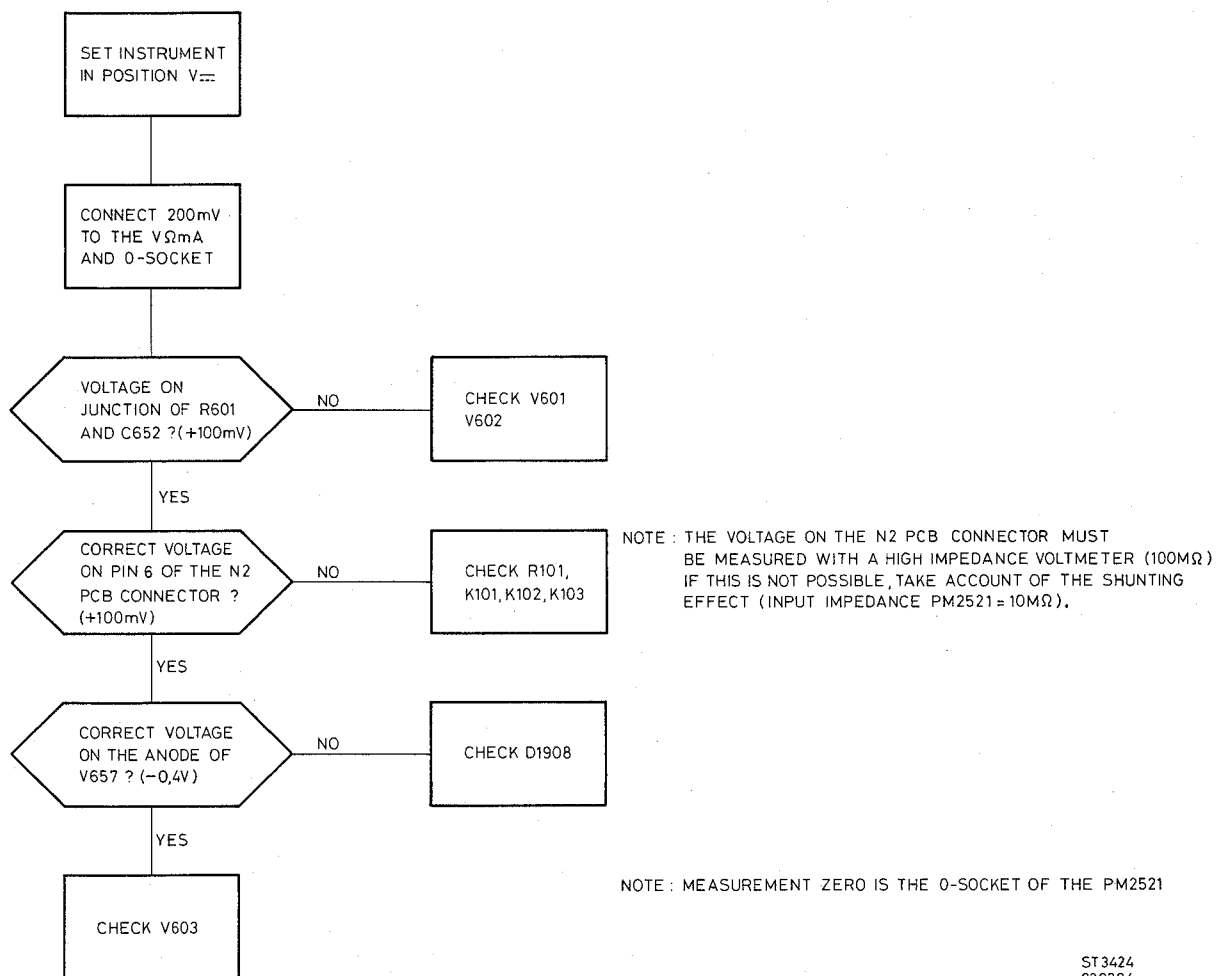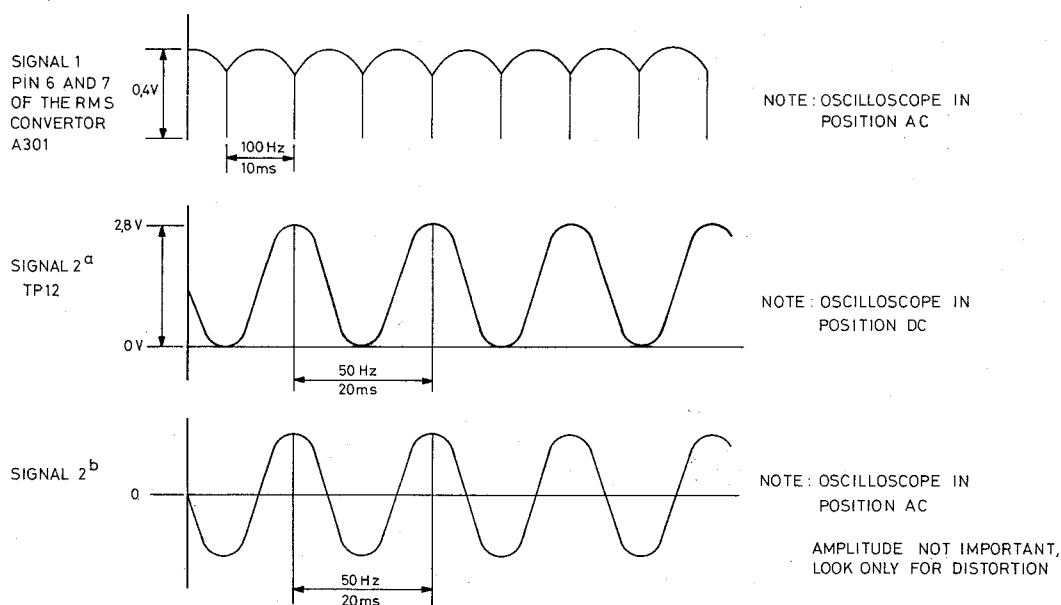
4.2.3.  $V \sim$  partST3424  
8202044.2.4.  $V \sim$  partST3426  
820209Fig. 47. Waveforms  $V \sim$  part

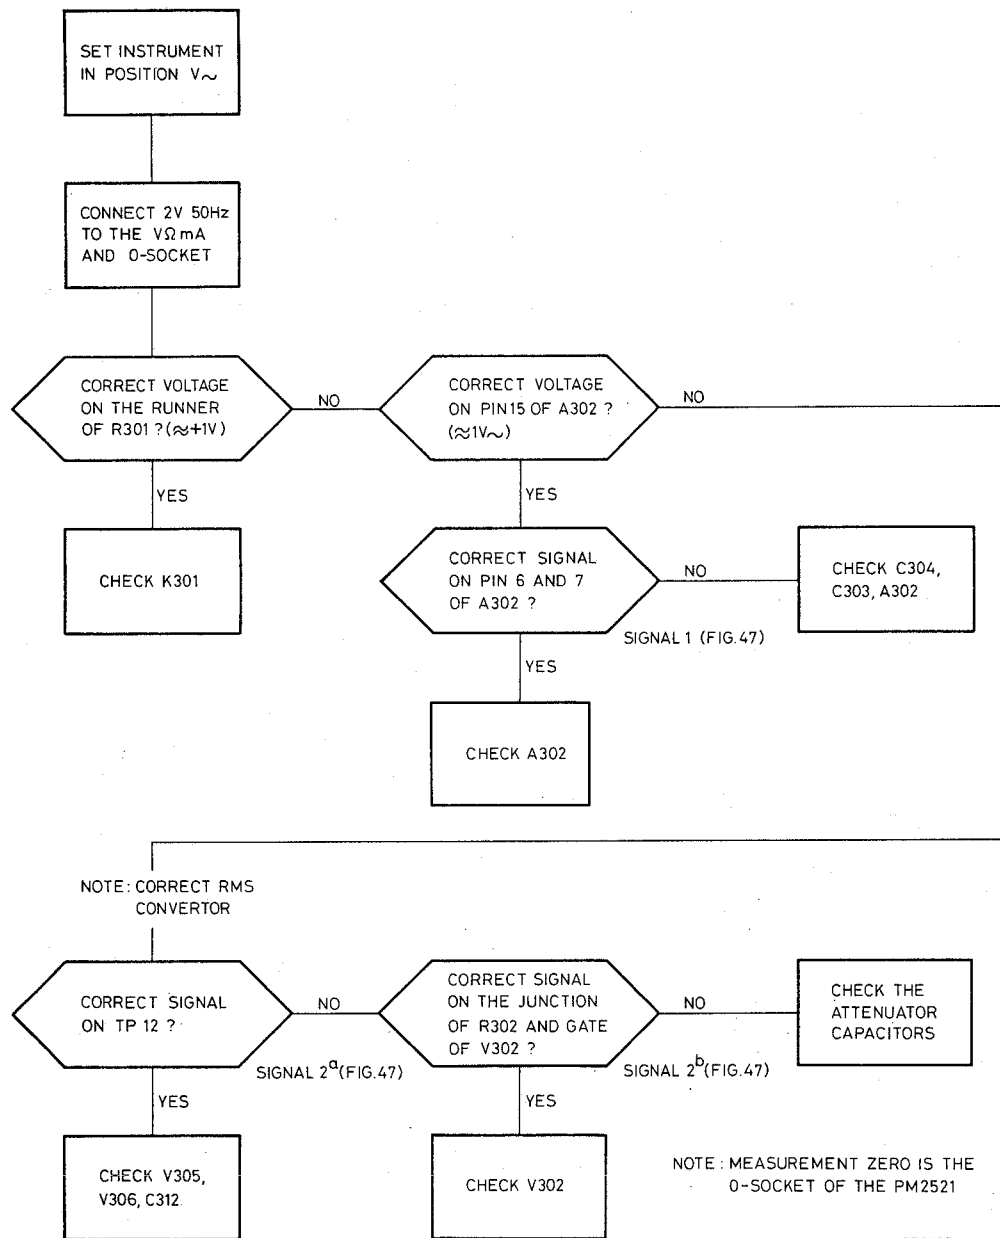


ST3425  
820203


## 4.2.5. Trigger level part

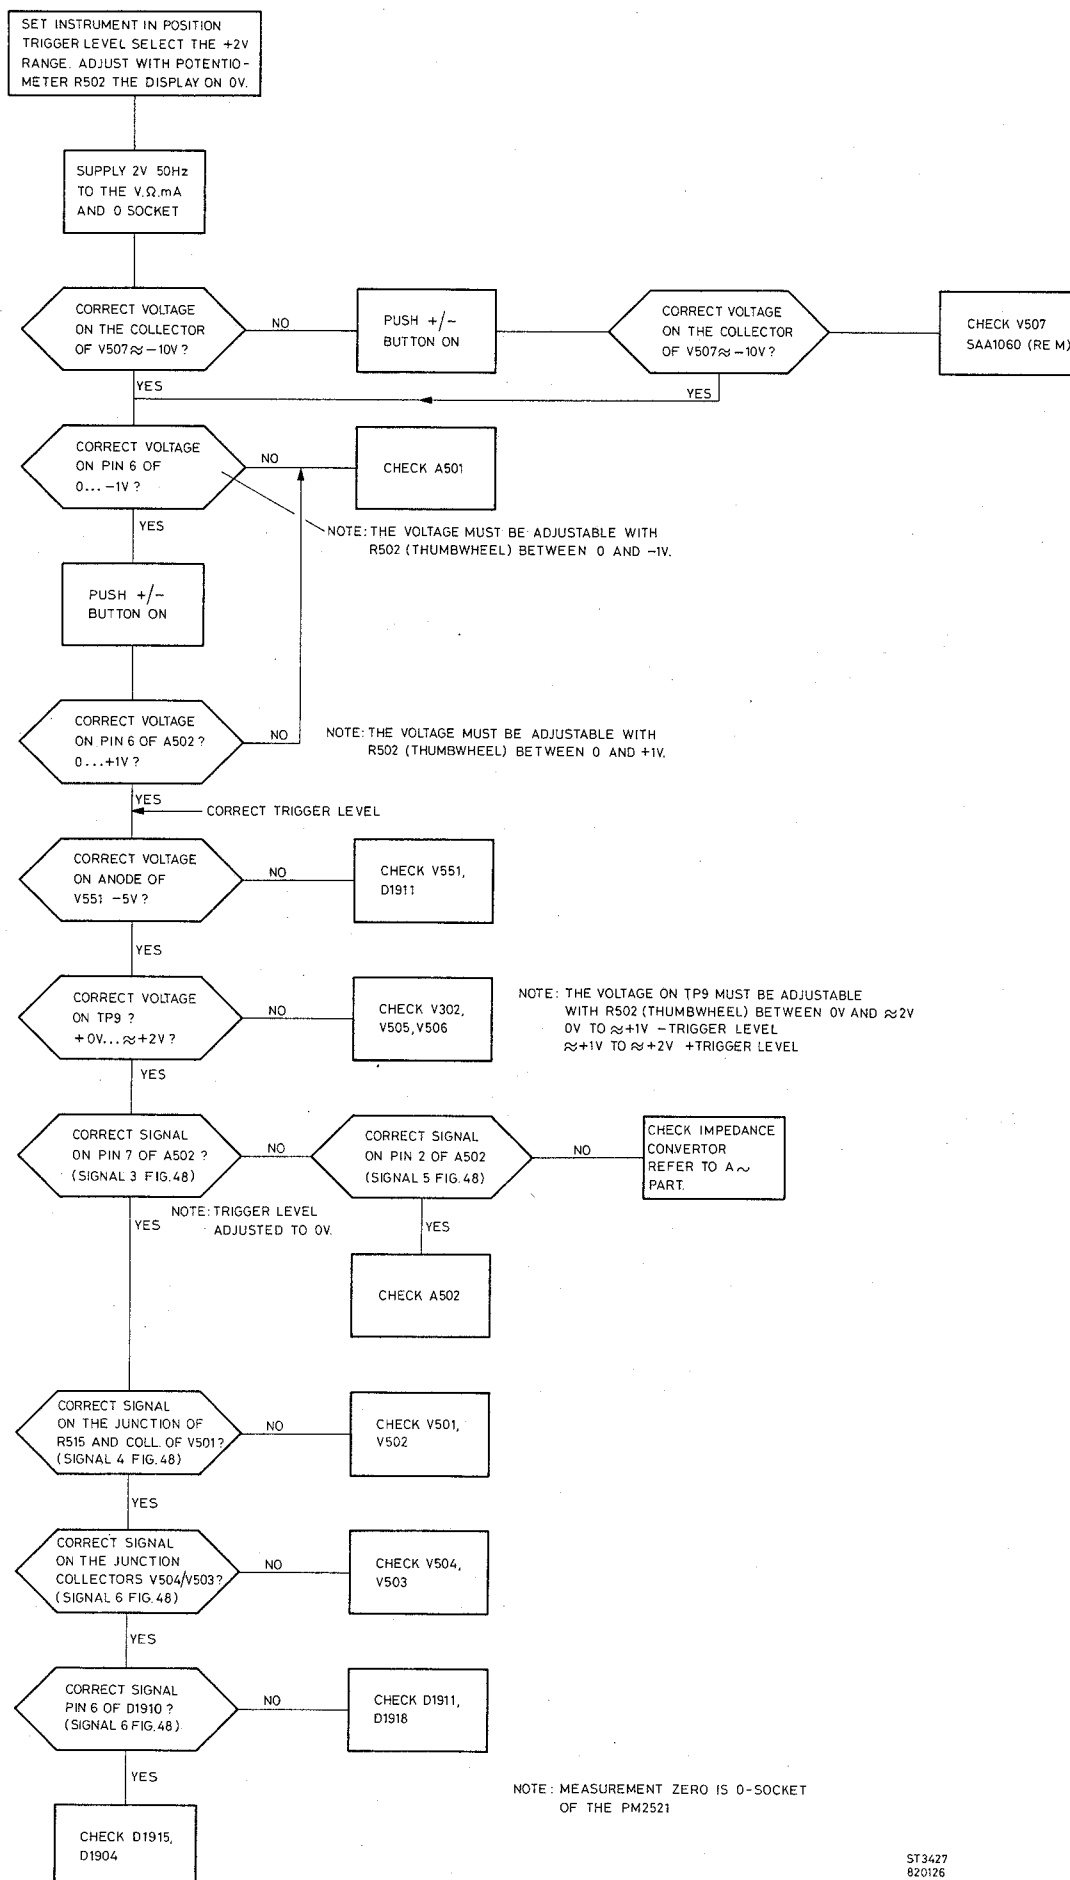

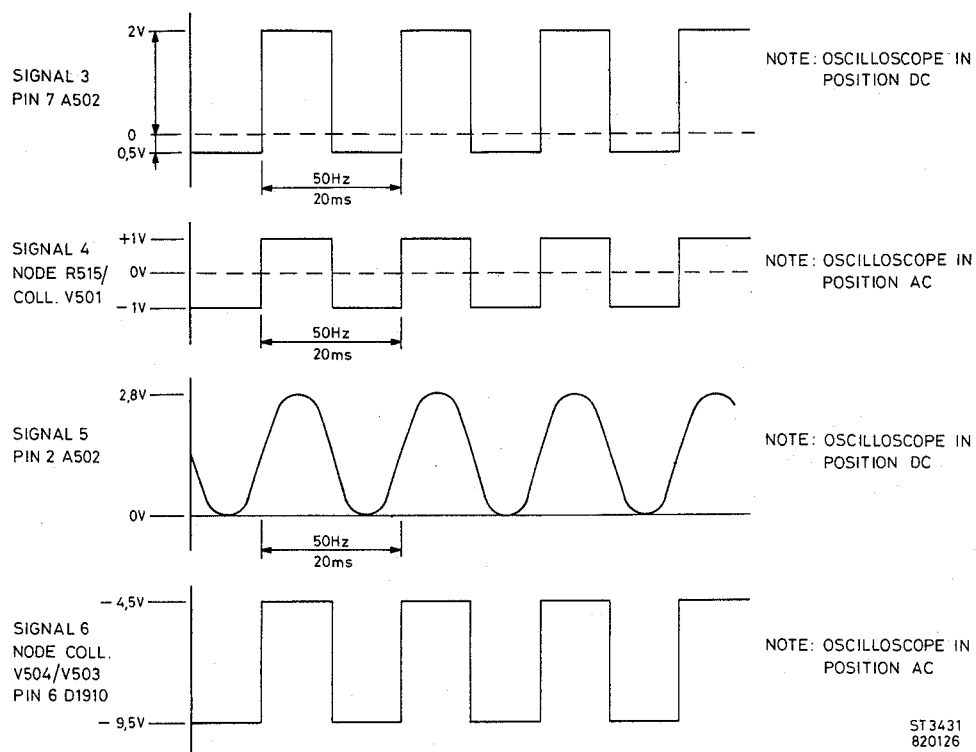

*Fig. 48 Waveforms, trigger level part*

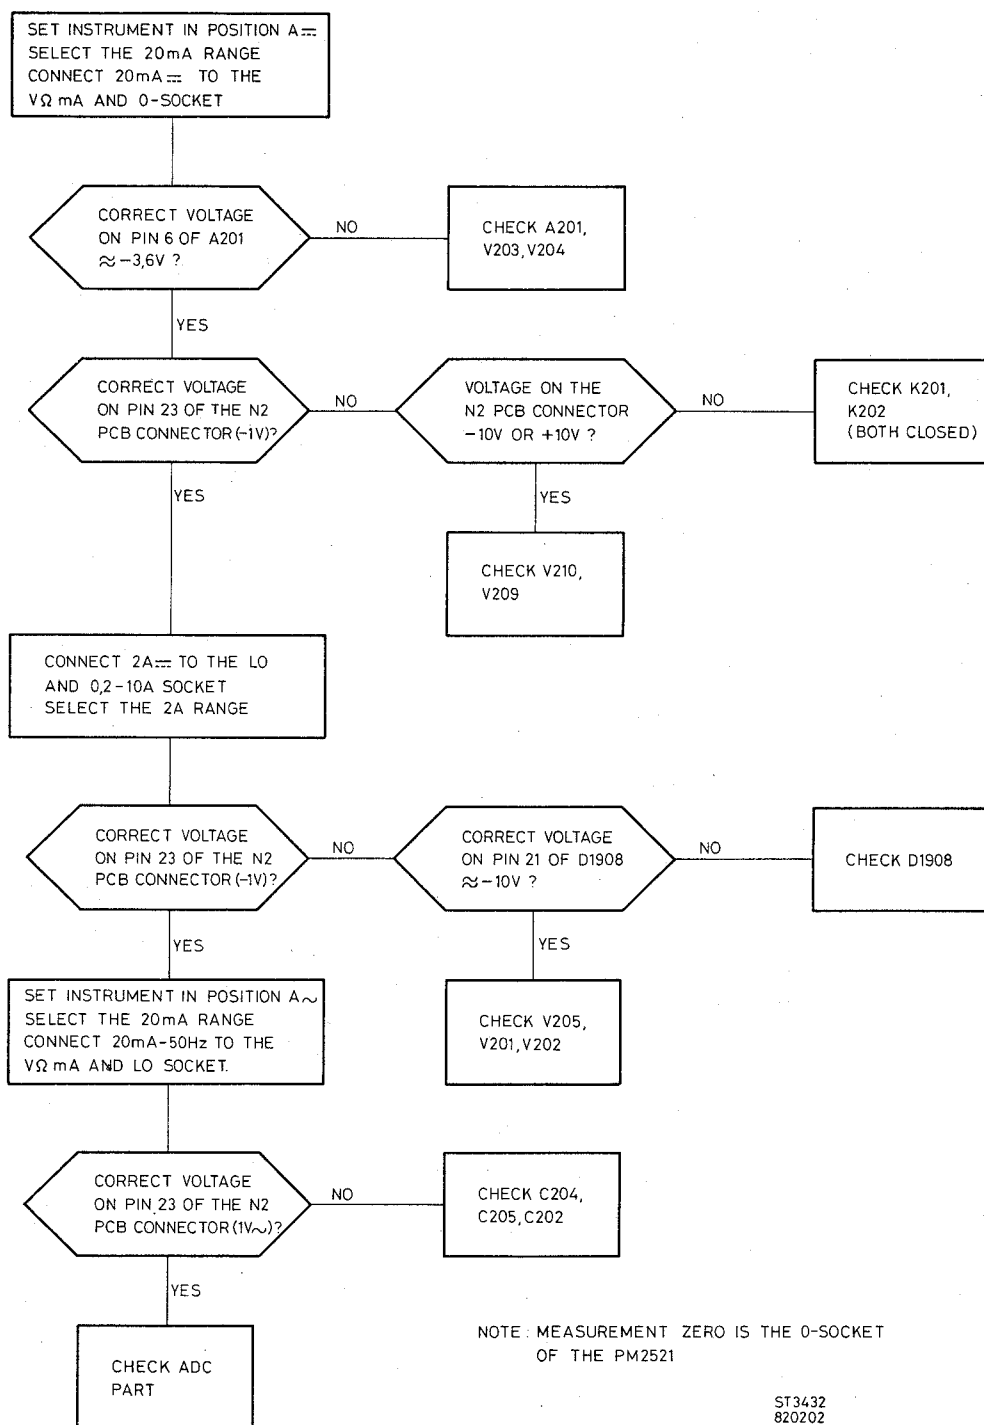4.2.6. A  $\equiv$  and A  $\sim$  part

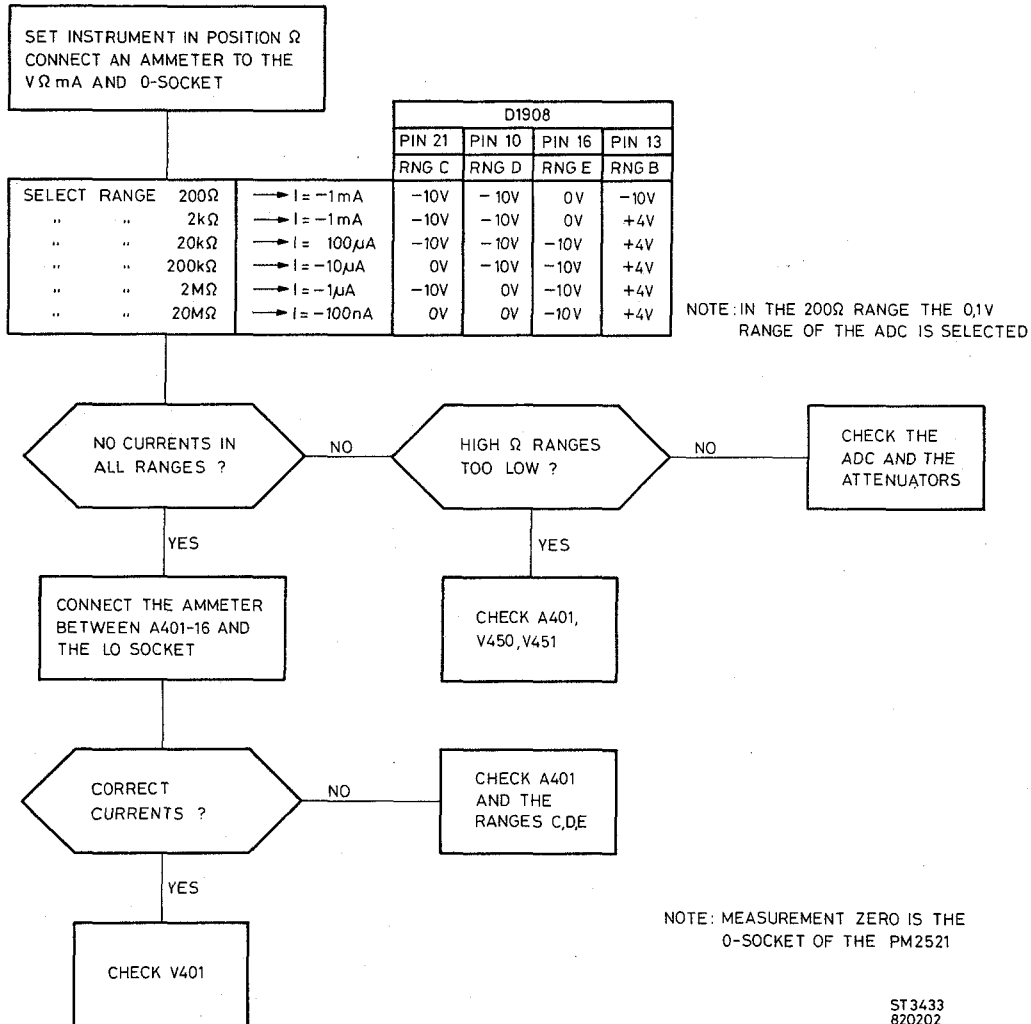4.2.7.  $\Omega$  part

## 4.2.8. Analog part


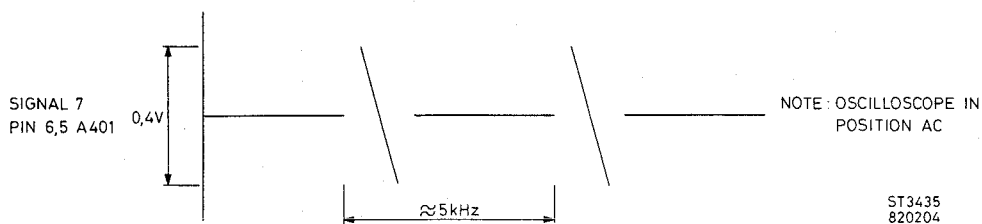


Fig. 49. Waveform, analog part

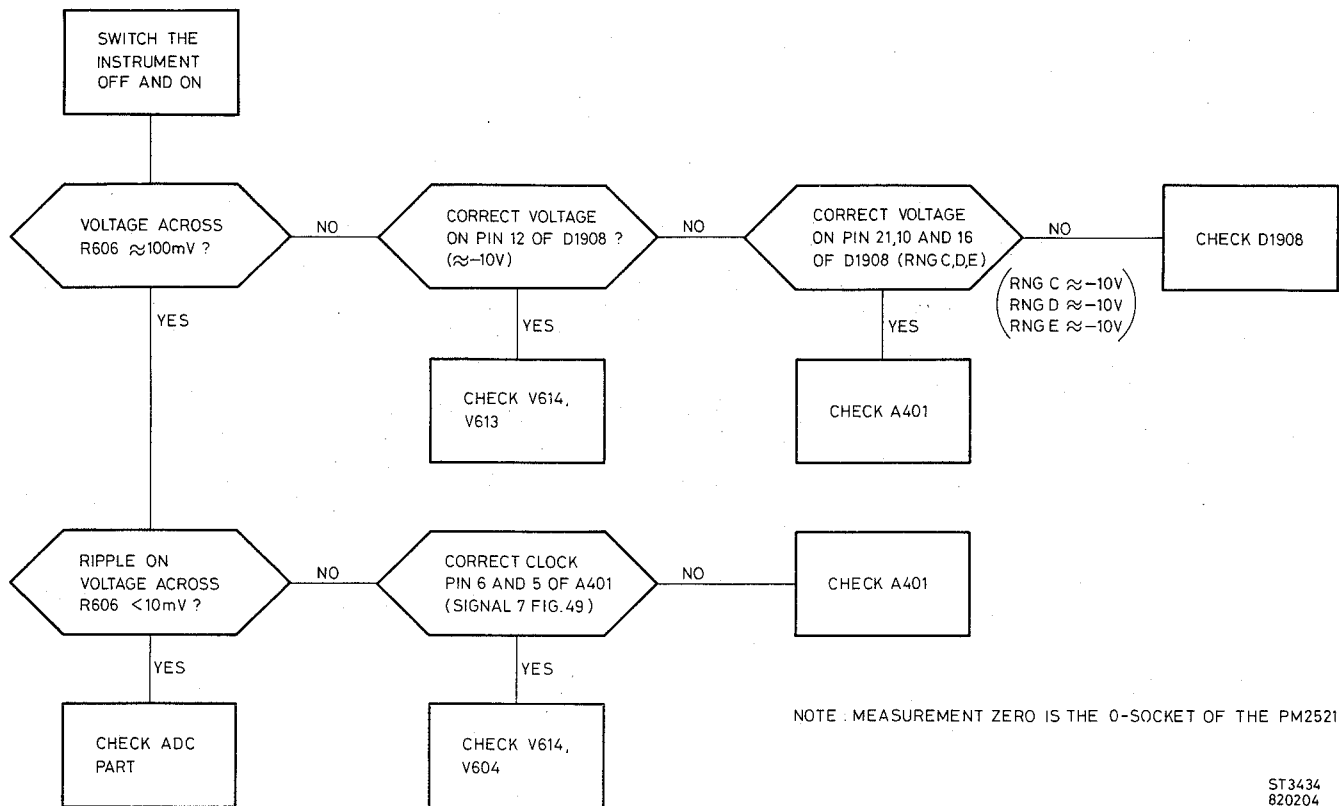

## 4.2.9. ADC part

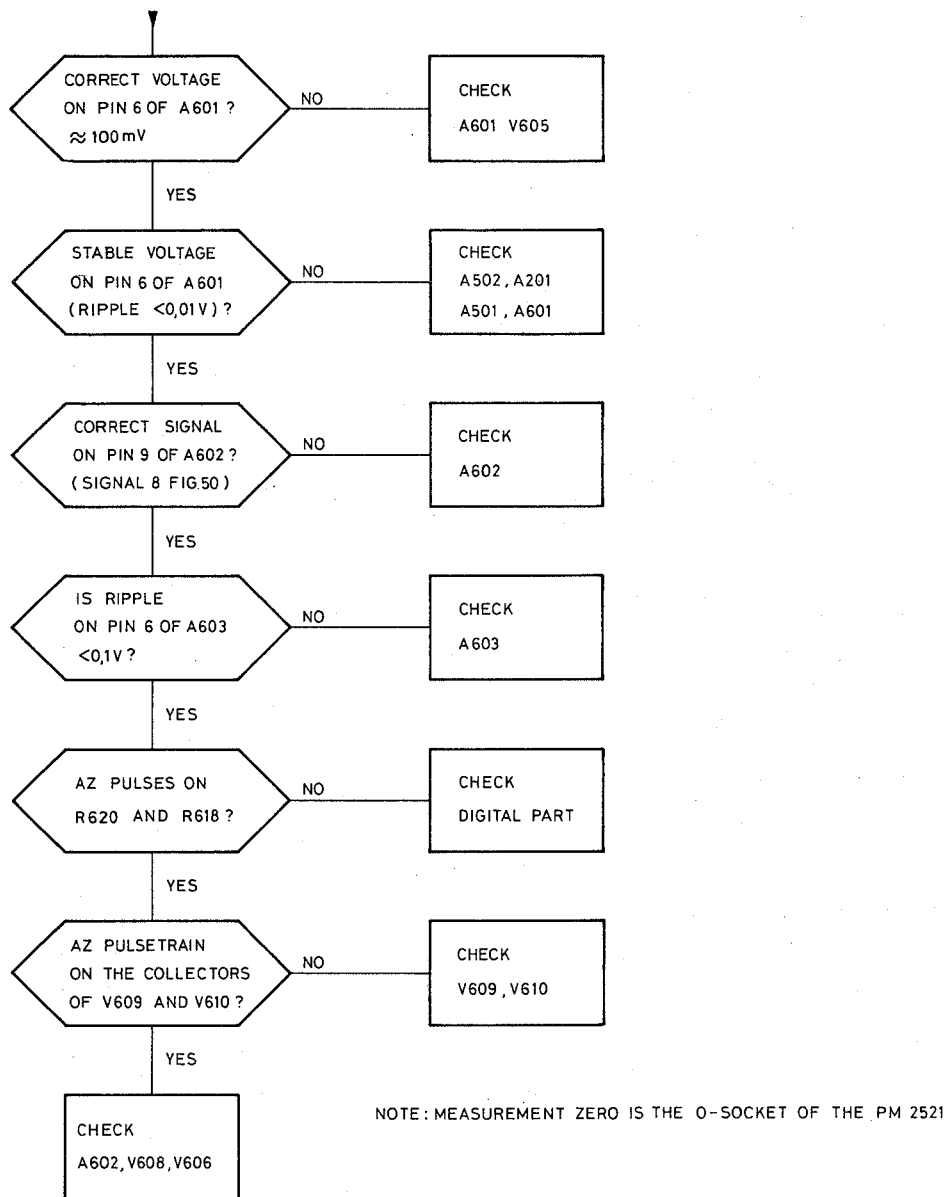
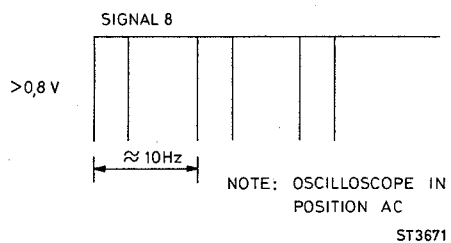
ST 3436  
820128

Fig. 50. Waveform, ADC part

## 4.2.10. Digital part



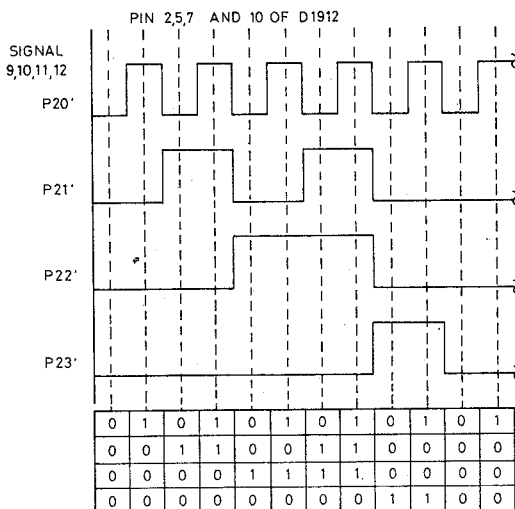
ST3438  
820126

Fig. 51 Waveforms, digital part

## 4.2.11. Free run

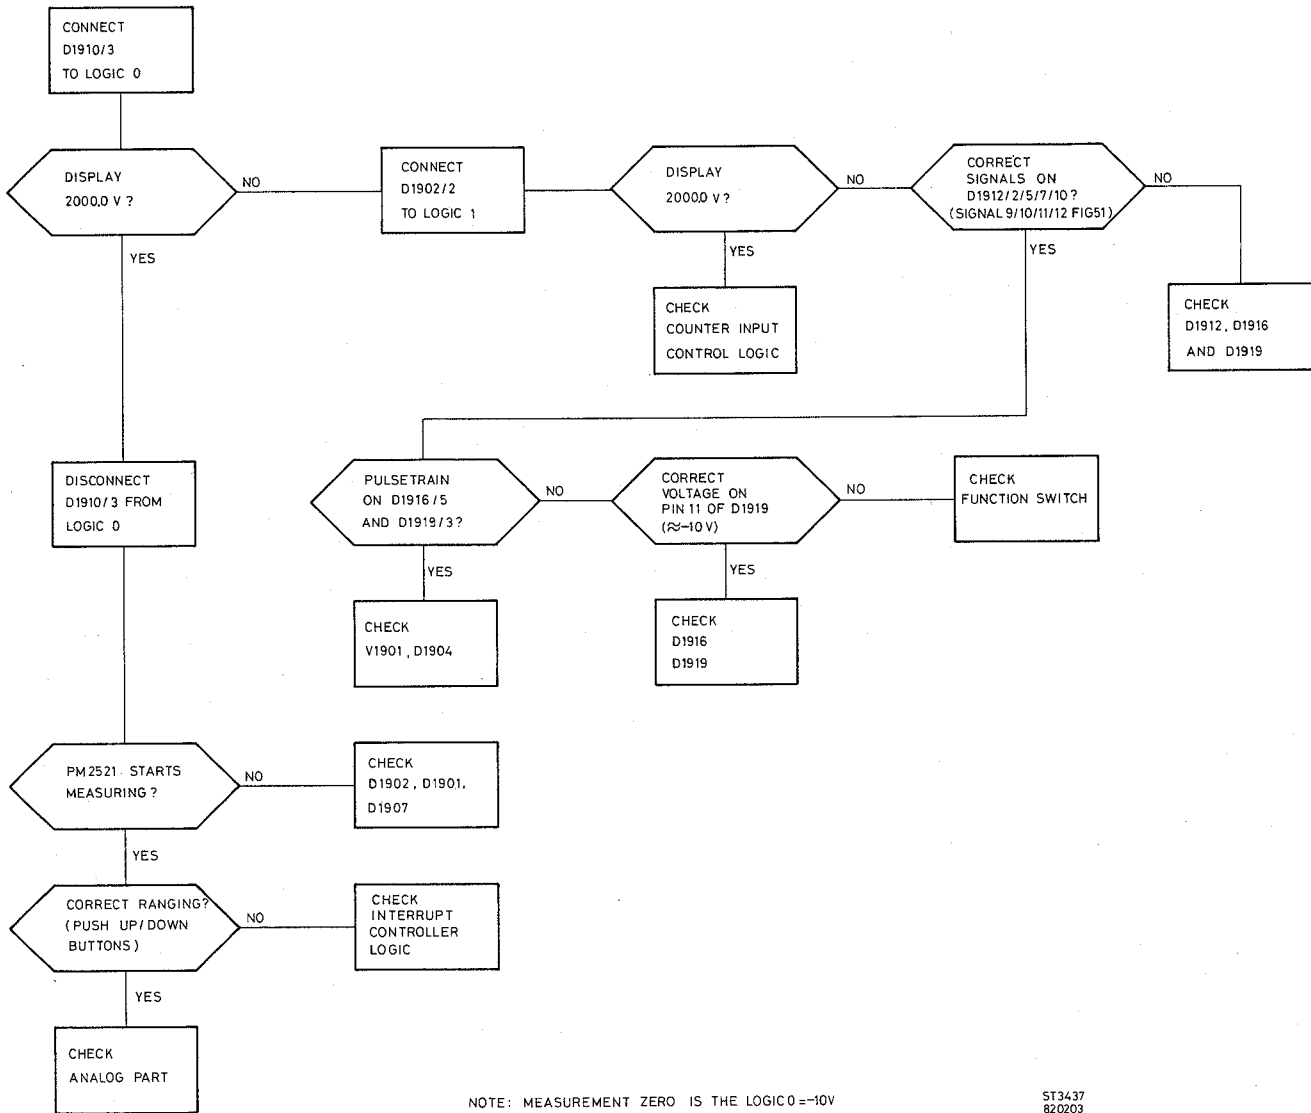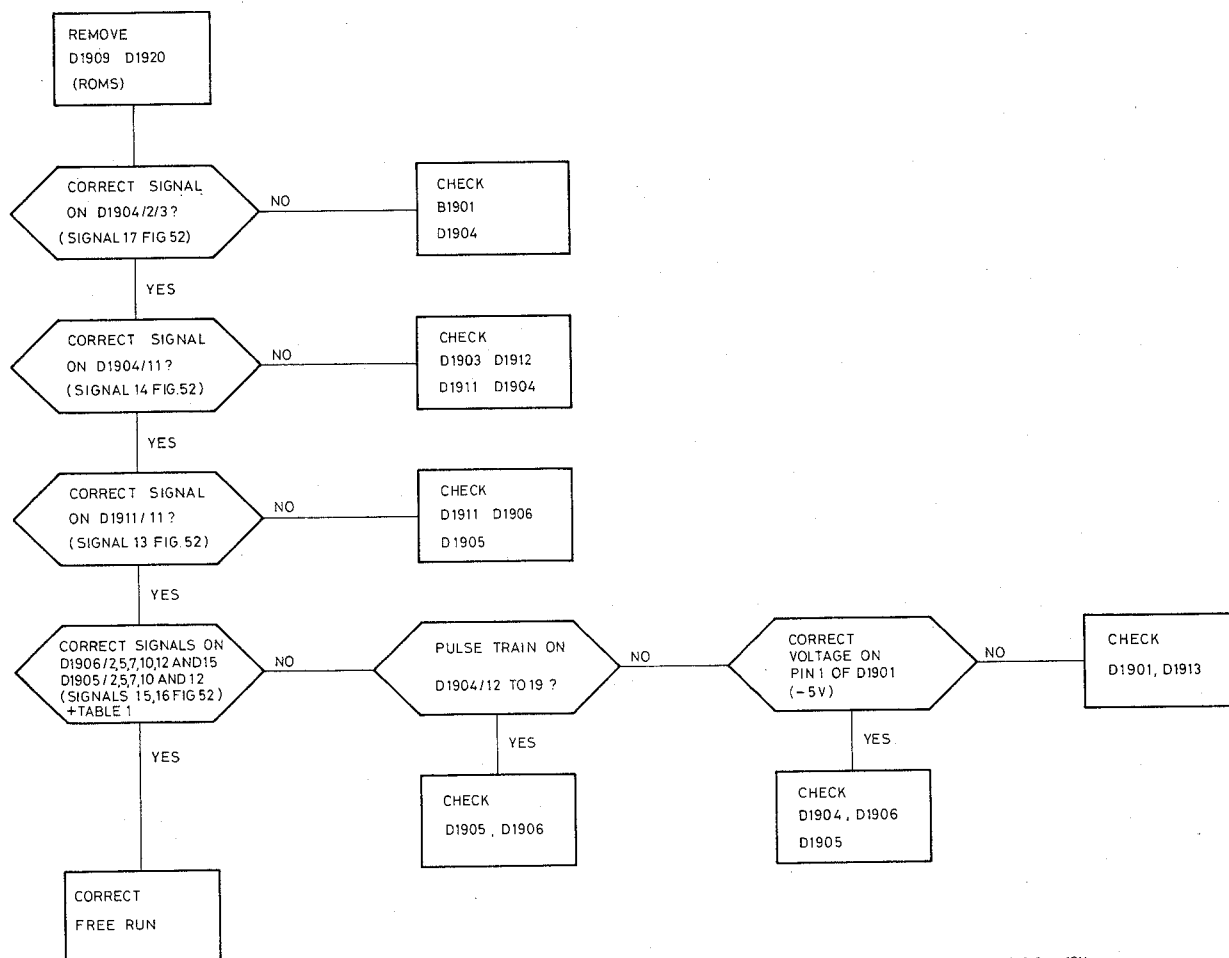

NOTE: MEASUREMENT ZERO IS LOGIC 0 = -10V.

ST3439  
820129


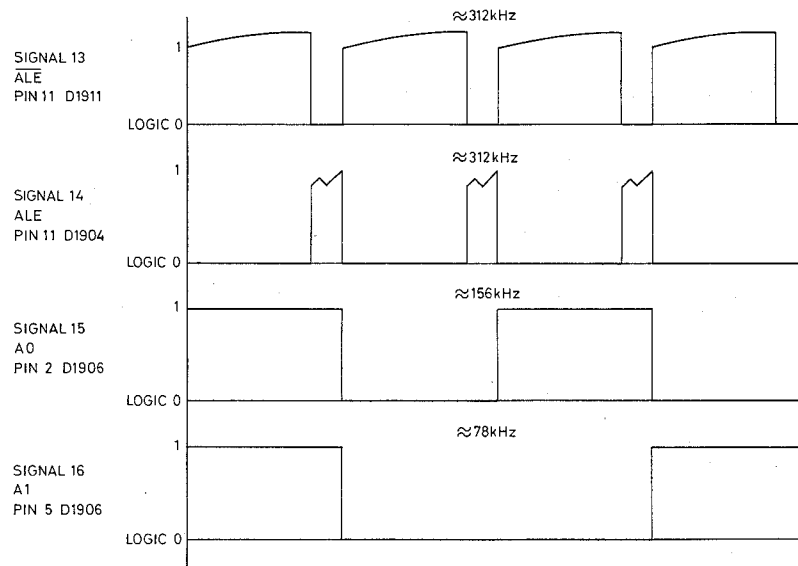


TABLE 1

| ADDR. | FREQ.   | PIN      | ADDR. | FREQ.  | PIN      |
|-------|---------|----------|-------|--------|----------|
| A0    | 156kHz  | D1906-2  | A6    | 2437Hz | D1905-2  |
| A1    | 78kHz   | D1906-5  | A7    | 1219Hz | D1905-5  |
| A2    | 39kHz   | D1906-7  | A8    | 609Hz  | D1905-7  |
| A3    | 19,5kHz | D1906-10 | A9    | 305Hz  | D1905-10 |
| A4    | 9750Hz  | D1906-12 | A10   | 152Hz  | D1905-12 |
| A5    | 4875Hz  | D1906-15 |       |        |          |

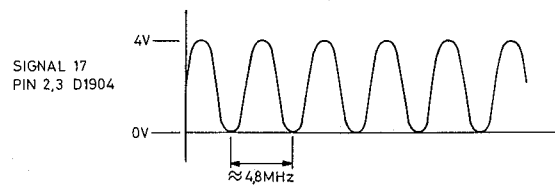


NOTE: OSCILLOSCOPE IN  
POSITION DC

ST3440  
820208

Fig. 52. Waveforms, free run

## 4.2.12. Display part

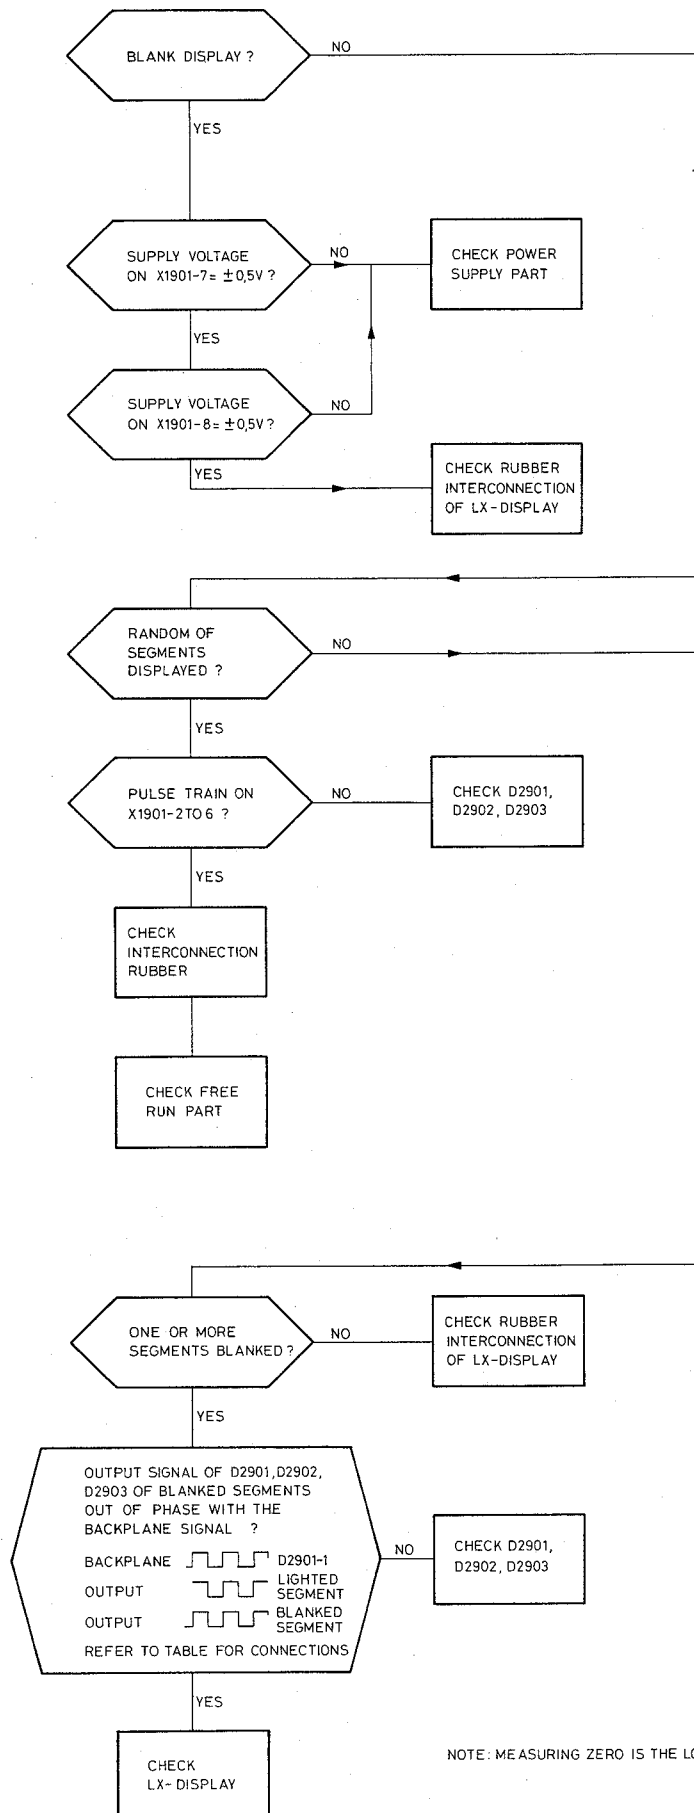

NOTE: MEASURING ZERO IS THE LOGIC 0 = -10V.

CONNECTION TABLE

| CONNECTIONS<br>D2901 D2902 D2903 |         | D2901 | LX-display | D2902 | LX-display | D2903              | LX-display |
|----------------------------------|---------|-------|------------|-------|------------|--------------------|------------|
| Output no.                       | Pin no. | Char. | Pin no.    | Char. | Pin no.    | Char.              | Pin no.    |
| Q1                               | 9       |       | 2          | .3    | 22         | a5                 | 42         |
| Q2                               | 10      | —     | 3          | d3    | 23         | b5                 | 43         |
| Q3                               | 11      | +     | 4          | e3    | 24         | g5                 | 44         |
| Q4                               | 12      | GATE  | 5          | f3    | 25         | c5                 | 45         |
| Q5                               | 13      | .1    | 6          | a3    | 26         | M (Hz)             | 46         |
| Q6                               | 14      | d1    | 7          | b3    | 27         | k (Hz)             | 47         |
| Q7                               | 15      | e1    | 8          | g3    | 28         | Hz                 | 48         |
| Q8                               | 16      | f1    | 9          | c3    | 29         | Z                  | 49         |
| Q9                               | 17      | a1    | 10         | .4    | 30         | s                  | 50         |
| Q10                              | 18      | b1    | 11         | d4    | 31         | V                  | 51         |
| Q11                              | 19      | g1    | 12         | e4    | 32         | A                  | 52         |
| Q12                              | 20      | c1    | 13         | f4    | 33         | *                  | 53         |
| Q13                              | 21      | .2    | 14         | a4    | 34         | m                  | 54         |
| Q14                              | 22      | d2    | 15         | b4    | 35         | $\mu$              | 55         |
| Q15                              | 23      | e2    | 16         | g4    | 36         | $^{\circ}\text{C}$ | 56         |
| Q16                              | 24      | f2    | 17         | c4    | 37         | $\Omega$           | 57         |
| Q17                              | 25      | a2    | 18         | .5    | 38         | k ( $\Omega$ )     | 58         |
| Q18                              | 26      | b2    | 19         | dB    | 39         | M ( $\Omega$ )     | 59         |
| Q19                              | 27      | g2    | 20         | e5    | 40         | n.c.               | —          |
| Q20                              | 28      | c2    | 21         | f5    | 41         | n.c.               | —          |

## 4.2.13. Power supply check



## 5. PARTS LIST

### 5.1. TOP COVER ASSEMBLY

|                      | Ordering number | Qty. | Item | Fig. |
|----------------------|-----------------|------|------|------|
| Cover with screening | 5322 694 54012  | 1    | 4    | 45   |
| Transformer          | 5322 146 24485  | 1    |      | 45   |
| Mains connector      | 5322 267 44135  | 1    |      | 45   |
| Fuse 125mA           | 4822 253 20007  | 1    |      |      |
| Thermal fuse         | 5322 252 20088  | 1    |      | 45   |

### 5.2. BOTTOM COVER ASSEMBLY

|                               |                |   |   |    |
|-------------------------------|----------------|---|---|----|
| Cover with screening and feet | 5322 447 70045 | 1 | 5 | 42 |
| Rubber foot                   | 5322 462 44484 | 1 |   |    |
| Carrying handle               | 5322 498 50126 | 1 |   |    |

### 5.3. FRONT ASSEMBLY

|                         |                |   |    |    |
|-------------------------|----------------|---|----|----|
| Front                   | 5322 447 74009 | 1 | 9  | 44 |
| T.L. potentiometer knob | 5322 414 34269 | 1 | 10 | 44 |
| Function selector       | 5322 414 44088 | 1 | 4  | 44 |
| Window                  | 5322 381 10562 | 1 | 11 | 44 |
| L.C. display            | 5322 130 94033 | 1 | 1  | 44 |
| Interconnection rubber  | 5322 290 84029 | 1 | 3  | 44 |
| Display unit N3         | 5322 216 74066 | 1 | 2  | 44 |
| Ball                    | 4822 520 40044 | 1 | 12 | 44 |

### 5.4. SWITCH ASSEMBLY

|                          |                |   |   |    |
|--------------------------|----------------|---|---|----|
| N2 printed circuit board | 5322 466 10315 | 1 | 6 | 42 |
| Function switch complete | 5322 278 80175 | 2 | 7 | 42 |
| VRPP connector X101      | 5322 267 74125 | 1 | 8 | 42 |



## 5.5. PRINTED CIRCUIT BOARD

### 5.5.1. Miscellaneous

|                                | Ordering number | Qty. | Item | Fig. |
|--------------------------------|-----------------|------|------|------|
| Power switch                   | 5322 276 84077  | 1    | 13   | 44   |
| Knob power switch              | 5322 414 26415  | 1    | 13   | 44   |
| +/- switch SK1                 | 5322 276 14417  | 1    | 14   | 44   |
| Auto switch SK2                | 5322 276 14417  | 1    | 14   | 44   |
| Down switch SK3                | 5322 276 14417  | 1    | 14   | 44   |
| Up switch SK4                  | 5322 276 14417  | 1    | 14   | 44   |
| Switch for high current ranges | 5322 492 62405  | 1    |      | 53   |
| Push button knobs              | 5322 414 26416  | 4    | 14   | 44   |
| 10p connector male X801        | 5322 264 54061  | 1    | 15   | 42   |
| 5p connector male X802         | 5322 264 44064  | 1    | 16   | 42   |
| 10p connector female X1901     | 5322 266 44028  | 1    | 17   | 42   |
| 8p DIN connector BU3           | 5322 267 54107  | 1    | 15   | 44   |
| Input sockets                  | 5322 532 14709  | 3    | 16   | 44   |
| Coil L801                      | 5322 158 10052  | 1    | 18   | 42   |
| Crystal B1901                  | 5322 242 74404  | 1    | 19   | 42   |
| Reed relay K101                | 5322 280 24146  | 1    |      |      |
| Reed relay K102                | 5322 280 24146  | 1    |      |      |
| Reed relay K201                | 5322 280 24146  | 1    |      |      |
| Reed relay K301                | 5322 280 24146  | 1    |      |      |
| Reed relay K602                | 5322 280 24146  | 1    |      |      |

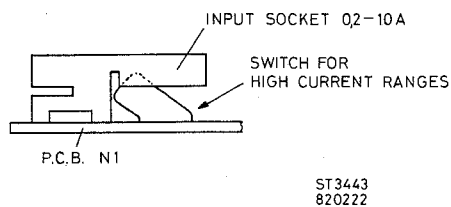


Fig. 53. Switch for high current range

## 5.5.2. Resistors

| POSNR | DESCRIPTION          | ORDERING CODE  |
|-------|----------------------|----------------|
| R 1   | 10A SHUNT            | 5322 115 84046 |
| R 101 | THIN FILM RESISTANCE | 5322 209 86478 |
| R 102 | 71K5 1% 0,4W         | 5322 116 54685 |
| R 103 | 100K CARB LIN 0,05W  | 4822 100 10052 |
| R 105 | 11K5 1% 0,4W         | 5322 116 55358 |
| R 106 | 215E 1% 0,4W         | 5322 116 55274 |
| R 107 | 681K 1% 0,4W         | 5322 116 55284 |
| R 108 | 47K CARB LIN 0,1W    | 5322 101 34037 |
| R 201 | 18E7 1% 0,4W         | 5322 116 50895 |
| R 203 | 1K CARB LIN 0,1W     | 4822 100 10037 |
| R 204 | 38,3K 0,5% 0,5W      | 5322 116 55576 |
| R 205 | 38K3 0,5% 0,5W       | 5322 116 55576 |
| R 206 | 590K 1% 0,5W         | 5322 116 55567 |
| R 207 | 590E 1% 0,4W         | 5322 116 50561 |
| R 208 | 1M 5% CR25           | 4822 110 73187 |
| R 209 | 40K2 1% 0,4W         | 5322 116 54665 |
| R 210 | 59K0 1% 0,4W         | 5322 116 54678 |
| R 211 | 162E 1% 0,4W         | 5322 116 50417 |
| R 212 | 649K 1% 0,4W         | 5322 116 55331 |
| R 213 | 100K CARB LIN 0,05W  | 4822 100 10052 |
| R 214 | 100E 0,1% 0,125W     | 5322 116 50268 |
| R 215 | 100E 0,1% 0,125W     | 5322 116 50268 |
| R 216 | 4K81 0,1% 0,1W       | 5322 116 55578 |
| R 217 | 140E 0,5% 0,4W       | 5322 116 55568 |
| R 218 | 481K 0,1% 0,125W     | 5322 116 55565 |
| R 219 | 14K 0,5% 0,4W        | 5322 116 55571 |
| R 220 | 10K 1% 0,4W          | 4822 116 51253 |
| R 221 | 100E 20% 265VR       | 4822 116 40006 |
| R 222 | 51K1 0,5% 0,5W       | 5322 116 55577 |
| R 223 | 750-1K5 245VR        | 5322 116 44006 |
| R 224 | 422K 1% 0,4W         | 5322 116 55247 |
| R 225 | 100K 1% 0,4W         | 4822 116 51268 |
| R 226 | 100K 1% 0,4W         | 4822 116 51268 |
| R 227 | 100K CARB LIN 0,05W  | 4822 100 10052 |
| R 228 | 110E 1% 0,4W         | 5322 116 54474 |
| R 229 | 110E 1% 0,4W         | 5322 116 54474 |
| R 231 | 1MOHM 1% 0,4W        | 5322 116 55535 |
| R 232 | 1MOHM 1% 0,4W        | 5322 116 55535 |
| R 301 | 100K 1% 0,4W         | 4822 116 51268 |
| R 302 | 1K 1% 0,4W           | 5322 116 54549 |
| R 303 | 866E 1% 0,4W         | 5322 116 54543 |
| R 304 | 10K 1% 0,4W          | 4822 116 51253 |
| R 305 | 3K01 0,1% MR24E 0,1W | 5322 116 54218 |
| R 306 | 30K1 0,1% 0,1W       | 5322 116 51392 |
| R 307 | 33E2 1% 0,4W         | 5322 116 50527 |
| R 308 | 100K 1% 0,4W         | 4822 116 51268 |
| R 309 | 44E2 1% 0,4W         | 5322 116 50818 |
| R 310 | 220E CARB LIN 0,05W  | 4822 100 10019 |
| R 311 | 8K25 1% 0,4W         | 5322 116 54558 |
| R 313 | 1K 1% 0,4W           | 5322 116 54549 |
| R 314 | 31K6 1% 0,4W         | 5322 116 54657 |
| R 315 | 100K 1% 0,4W         | 4822 116 51268 |
| R 317 | 590E 1% 0,4W         | 5322 116 50561 |
| R 318 | 1K 1% 0,4W           | 5322 116 54549 |
| R 319 | 100K 1% 0,4W         | 4822 116 51268 |
| R 320 | 10K 1% 0,4W          | 4822 116 51253 |
| R 401 | 100E 20% 256VR       | 4822 116 40006 |
| R 402 | 1K 1% 0,4W           | 5322 116 54549 |
| R 403 | 19,6M 1% VR37R       | 5322 116 64131 |
| R 404 | 2K87 1% 0,4W         | 5322 116 50414 |
| R 405 | 100E CARB LIN 0,05W  | 4822 100 10075 |

| POSNR | DESCRIPTION         | ORDERING | CODE  |
|-------|---------------------|----------|-------|
| R 406 | 2K87 1% 0,4W        | 5322 116 | 50414 |
| R 407 | 1K 1% 0,4W          | 5322 116 | 54549 |
| R 408 | 121K 0,1% 0,125W    | 5322 116 | 55245 |
| R 409 | 590E 1% 0,4W        | 5322 116 | 50561 |
| R 410 | 16K9 0,1% 0,1W      | 5322 116 | 54833 |
| R 411 | 47K CARB LIN 0,05W  | 4822 100 | 10036 |
| R 413 | 100K 1% 0,4W        | 4822 116 | 51268 |
| R 414 | 100K 1% 0,4W        | 4822 116 | 51268 |
| R 415 | 33K2 1% 0,4W        | 4822 116 | 51259 |
| R 416 | 100K 1% 0,4W        | 4822 116 | 51268 |
| R 417 | 10K 1% 0,4W         | 4822 116 | 51253 |
| R 418 | 215K 1% 0,4W        | 5322 116 | 54728 |
| R 502 | 47K 20% 0,1W        | 5322 101 | 34036 |
| R 503 | 4K64 1% 0,4W        | 5322 116 | 50484 |
| R 504 | 30K1 1% 0,4W        | 5322 116 | 54655 |
| R 505 | 13K3 1% 0,4W        | 5322 116 | 55276 |
| R 506 | 51E1 1% 0,4W        | 5322 116 | 54442 |
| R 507 | 10K 0,5% 0,4W       | 4822 116 | 51253 |
| R 508 | 51E1 1% 0,4W        | 5322 116 | 54442 |
| R 509 | 10K 1% 0,4W         | 4822 116 | 51253 |
| R 510 | 2K05 1% 0,4W        | 5322 116 | 50664 |
| R 511 | 10K 1% 0,4W         | 4822 116 | 51253 |
| R 512 | 10K 1% 0,4W         | 4822 116 | 51253 |
| R 513 | 511E 1% 0,4W        | 4822 116 | 51282 |
| R 514 | 1K 1% 0,4W          | 5322 116 | 54549 |
| R 515 | 3K01 1% 0,4W        | 4822 116 | 51246 |
| R 516 | 1K 1% 0,4W          | 5322 116 | 54549 |
| R 517 | 10K 1% 0,4W         | 4822 116 | 51253 |
| R 518 | 23K7 1% 0,4W        | 5322 116 | 54646 |
| R 519 | 121K 1% 0,4W        | 5322 116 | 54704 |
| R 520 | 619E 1% 0,4W        | 5322 116 | 54529 |
| R 521 | 470E CARB LIN 0,05W | 4822 100 | 10038 |
| R 522 | 590E 0,5% 0,4W      | 5322 116 | 50561 |
| R 523 | 51E1 1% 0,4W        | 5322 116 | 54442 |
| R 600 | 10K 0,5% 0,4W       | 4822 116 | 51253 |
| R 601 | 332K 1% 0,4W        | 4822 116 | 51184 |
| R 602 | 33K2 1% 0,4W        | 4822 116 | 51259 |
| R 603 | 332K 1% 0,4W        | 4822 116 | 51184 |
| R 604 | 56K2 1% 0,4W        | 4822 116 | 51264 |
| R 605 | 56K2 1% 0,4W        | 4822 116 | 51264 |
| R 606 | 1K 0,1% 0,1W        | 5322 116 | 50747 |
| R 607 | 681K 1% 0,4W        | 5322 116 | 55284 |
| R 608 | 100K 1% 0,4W        | 4822 116 | 51268 |
| R 609 | 681E 1% 0,4W        | 4822 116 | 51233 |
| R 610 | 681E 1% 0,4W        | 4822 116 | 51233 |
| R 611 | 86K6 1% 0,4W        | 5322 116 | 54692 |
| R 612 | 86K6 1% 0,4W        | 5322 116 | 54692 |
| R 613 | 6E81 1% 0,4W        | 5322 116 | 54013 |
| R 614 | 100K 1% 0,4W        | 4822 116 | 51268 |
| R 615 | 10K2 1% 0,4W        | 5322 116 | 54621 |
| R 616 | 1K24 1% 0,4W        | 5322 116 | 54559 |
| R 617 | 681K 1% 0,4W        | 5322 116 | 55284 |
| R 618 | 20K5 1% 0,4W        | 5322 116 | 54643 |
| R 619 | 681K 1% 0,4W        | 5322 116 | 55284 |
| R 620 | 20K5 1% 0,4W        | 5322 116 | 54643 |
| R 621 | 100K 1% 0,4W        | 4822 116 | 51268 |

| POSHR  | DESCRIPTION         | ORDERING | CODE  |
|--------|---------------------|----------|-------|
| R 622  | 1K1 1% 0,4W         | 5322 116 | 54554 |
| R 623  | 11K0 1% 0,4W        | 5322 116 | 54619 |
| R 624  | 220E CARB LIN 0,05W | 4822 100 | 10019 |
| R 625  | 681K 1% 0,4W        | 5322 116 | 55284 |
| R 626  | 10K 1% 0,4W         | 4822 116 | 51253 |
| R 627  | 511K 1% 0,4W        | 5322 116 | 55258 |
| R 628  | 100K 1% 0,4W        | 4822 116 | 51268 |
| R 629  | 110E 1% 0,4W        | 5322 116 | 54619 |
| R 701  | 9K53 0,5% 0,4W      | 5322 116 | 55575 |
| R 702  | 9K53 0,5% 0,4W      | 5322 116 | 55575 |
| R 703  | 1K43 0,5% 0,4W      | 5322 116 | 55572 |
| R 704  | 15E4 0,5% 0,4W      | 5322 116 | 55573 |
| R 705  | 1K4 0,5% 0,4W       | 5322 116 | 55569 |
| R 707  | 619E 1% 0,4W        | 5322 116 | 54529 |
| R 708  | 100E CARB LIN 0,05  | 4822 100 | 10075 |
| R 801  | 2K49 1% 0,4W        | 5322 116 | 50581 |
| R 802  | 1K87 1% 0,4W        | 5322 116 | 50728 |
| R 803  | 7K5 1% 0,4W         | 5322 116 | 54608 |
| R 804  | 464E 1% 0,4W        | 5322 116 | 50536 |
| R 805  | 100E 1% 1/8W        | 5322 116 | 54469 |
| R 806  | 464E 1% 0,4W        | 5322 116 | 50536 |
| R 807  | 1E 1% 0,4W          | 4822 116 | 51179 |
| R 808  | 2K26 1% 0,4W        | 5322 116 | 50675 |
| R 809  | 100K 1% 0,4W        | 4822 116 | 51268 |
| R 810  | 100K 1% 0,4W        | 4822 116 | 51268 |
| R 811  | 1E 1% 0,4W          | 4822 116 | 51179 |
| R 1901 | 27K4 1% 0,4W        | 5322 116 | 50559 |
| R 1902 | 27K4 1% 0,4W        | 5322 116 | 50559 |
| R 1903 | 27K4 1% 0,4W        | 5322 116 | 50559 |
| R 1904 | 27K4 1% 0,4W        | 5322 116 | 50559 |
| R 1905 | 27K4 1% 0,4W        | 5322 116 | 50559 |
| R 1906 | 27K4 1% 0,4W        | 5322 116 | 50559 |
| R 1907 | 27K4 1% 0,4W        | 5322 116 | 50559 |
| R 1908 | 27K4 1% 0,4W        | 5322 116 | 50559 |
| R 1909 | 27K4 1% 0,4W        | 5322 116 | 50559 |
| R 1910 | 27K4 1% 0,4W        | 5322 116 | 50559 |
| R 1911 | 1K 1% 0,4W          | 5322 116 | 54549 |
| R 1912 | 27K4 1% 0,4W        | 5322 116 | 50559 |
| R 1913 | 4K22 1% 0,4W        | 5322 116 | 50729 |
| R 1914 | 27K4 1% 0,4W        | 5322 116 | 50559 |
| R 1915 | 27K4 1% 0,4W        | 5322 116 | 50559 |
| R 1916 | 27K4 1% 0,4W        | 5322 116 | 50559 |
| R 1917 | 27K4 1% 0,4W        | 5322 116 | 50559 |
| R 1918 | 27K4 1% 0,4W        | 5322 116 | 50559 |
| R 1919 | 27K4 1% 0,4W        | 5322 116 | 50559 |
| R 1920 | 27K4 1% 0,4W        | 5322 116 | 50559 |
| R 1921 | 10K 1% 0,4W         | 4822 116 | 51253 |
| R 1922 | 22K6 1% 0,4W        | 5322 116 | 50481 |
| R 1923 | 27K4 1% 0,4W        | 5322 116 | 50559 |
| R 1924 | 1M1 5% 0,25W        | 5322 111 | 44178 |
| R 1925 | 22K6 1% 0,4W        | 5322 116 | 50481 |
| R 1926 | 10K 1% 1% 0,4W      | 4822 116 | 51253 |
| R 1927 | 27K4 1% 0,4W        | 5322 116 | 50559 |
| R 1928 | 2K74 1% 0,4W        | 5322 116 | 50636 |
| R 1929 | 2K74 1% 0,4W        | 5322 116 | 50636 |
| R 1930 | 27K4 1% 0,4W        | 5322 116 | 50559 |

## 5.5.3. Capacitors

| POSNR | DESCRIPTION    | ORDERING CODE  |
|-------|----------------|----------------|
| C 100 | 33NF 10% 400V  | 5322 121 44025 |
| C 101 | 100PF 1% 630V  | 4822 121 50562 |
| C 102 | 100PF 1% 630V  | 4822 121 50562 |
| C 103 | 5,5PF 400V     | 5322 125 54027 |
| C 104 | 33PF 2% 100V   | 5322 122 31574 |
| C 105 | 3,9PF 100V     | 5322 122 34162 |
| C 106 | 2/30PF 250V    | 4822 125 50088 |
| C 107 | 1NF 1% 630V    | 4822 121 50591 |
| C 108 | 18PF 2% 100V   | 5322 122 34064 |
| C 109 | 5/105PF 250V   | 5322 125 54082 |
| C 110 | 11NF 1% 63V    | 5322 121 54147 |
| C 111 | 82PF 2% 100V   | 4822 122 31237 |
| C 112 | 150PF 2% 63V   | 4822 122 31308 |
| C 113 | 270PF 2% 100V  | 4822 122 31168 |
| C 115 | 100NF 10% 100V | 5322 121 40323 |
| C 116 | 10NF 80% 40V   | 4822 122 30043 |
| C 151 | 22NF 80% 40V   | 4822 122 30103 |
| C 152 | 22NF 80% 40V   | 4822 122 30103 |
| C 153 | 22NF 80% 40V   | 4822 122 30103 |
| C 201 | 33NF 10% 400V  | 5322 121 44025 |
| C 202 | 33PF 2% 100V   | 5322 122 34139 |
| C 203 | 22NF 80% 40V   | 4822 122 30103 |
| C 204 | 220PF 2% 100V  | 4822 122 31173 |
| C 205 | 10NF 50% 100V  | 4822 122 31414 |
| C 251 | 22NF 80% 40V   | 4822 122 30103 |
| C 253 | 22NF 80% 63V   | 4822 122 30103 |
| C 301 | 22UF 20% 10V   | 4822 124 20943 |
| C 302 | 1UF 10% 100V   | 5322 121 40197 |
| C 303 | 15UF 20% 10V   | 5322 124 14036 |
| C 304 | 47PF 2% 100V   | 4822 122 31072 |
| C 305 | 470NF 20% 40V  | 5322 124 14123 |
| C 306 | 680NF 10% 100V | 5322 121 40233 |
| C 307 | 22NF 80% 40V   | 4822 122 30103 |
| C 308 | 22NF 80% 40V   | 4822 122 30103 |
| C 309 | 22NF 80% 40V   | 4822 122 30103 |
| C 311 | 22NF 80% 40V   | 4822 122 30103 |
| C 312 | 3,3UF 20% 16V  | 4822 124 20947 |
| C 351 | 22NF 80% 40V   | 4822 122 30103 |
| C 352 | 22NF 80% 40V   | 4822 122 30103 |
| C 401 | 22NF 10% 400V  | 5322 121 40308 |
| C 402 | 1UF 20% 25V    | 4822 124 20944 |
| C 403 | 1NF 10% 100V   | 4822 122 31175 |
| C 404 | 4,7NF 10% 100V | 4822 122 30128 |
| C 405 | 33NF 10% 400V  | 5322 121 44025 |
| C 406 | 1NF 10% 630V   | 5322 121 44286 |
| C 407 | 22NF 80% 40V   | 4822 122 30103 |
| C 408 | 22NF 80% 40V   | 4822 122 30103 |
| C 409 | 22NF 80% 40V   | 4822 122 30103 |
| C 410 | 22NF 80% 40V   | 4822 122 30103 |
| C 411 | 22NF 80% 40V   | 4822 122 30103 |
| C 501 | 56PF 2% 100V   | 4822 122 31074 |
| C 502 | 100PF 2% 100V  | 4822 122 31081 |
| C 503 | 22NF 80% 40V   | 4822 122 30103 |
| C 504 | 22NF 80% 40V   | 4822 122 30103 |
| C 505 | 22PF 5% 100V   | 4822 122 31063 |
| C 506 | 22NF 80% 40V   | 4822 122 30103 |
| C 507 | 22NF 80% 40V   | 4822 122 30103 |
| C 508 | 100PF 2% 100V  | 4822 122 31504 |
| C 509 | 100PF 2% 100V  | 4822 122 31316 |
| C 601 | 4,7NF 10% 630V | 5322 121 44225 |
| C 602 | 220NF 10% 100V | 4822 121 40232 |
| C 603 | 22NF 10% 400V  | 5322 121 40308 |

| POSNR  | DESCRIPTION   |      | ORDERING CODE  |
|--------|---------------|------|----------------|
| C 604  | 22NF 80%      | 40V  | 4822 122 30103 |
| C 605  | 470PF 2% 100V |      | 5322 122 34159 |
| C 606  | 680NF 10%     | 100V | 5322 121 40233 |
| C 607  | 470PF 2%      | 100V | 5322 122 34159 |
| C 608  | 47PF 2%       | 100V | 4822 122 31072 |
| C 609  | 10NF 50%      | 100V | 4822 122 31414 |
| C 610  | 10NF 50%      | 100V | 4822 122 31414 |
| C 611  | 10NF 50%      | 100V | 4822 122 31414 |
| C 612  | 22NF 80%      | 40V  | 4822 122 30103 |
| C 613  | 22NF 80%      | 40V  | 4822 122 30103 |
| C 614  | 22NF 80%      | 40V  | 4822 122 30103 |
| C 615  | 22NF 80%      | 40V  | 4822 122 30103 |
| C 616  | 1NF 10%       | 630V | 5322 121 44286 |
| C 651  | 22NF 80%      | 40V  | 4822 122 30103 |
| C 652  | 22NF 80%      | 40V  | 4822 122 30103 |
| C 653  | 10NF 50%      | 100V | 4822 122 31414 |
| C 654  | 100PF 2%      | 100V | 4822 122 31504 |
| C 655  | 22NF 80%      | 40V  | 4822 122 30103 |
| C 801  | 3300UF 50%    | 10V  | 4822 124 20772 |
| C 802  | 330UF 50%     | 10V  | 4822 124 20684 |
| C 803  | 470UF 50%     | 25V  | 4822 124 20784 |
| C 804  | 470UF 50%     | 25V  | 4822 124 20784 |
| C 806  | 2,2UF 20%     | 16V  | 4822 124 10204 |
| C 807  | 2,2UF 20%     | 16V  | 4822 124 10204 |
| C 808  | 22UF 20%      | 10V  | 4822 124 20943 |
| C 809  | 100PF 2%      | 100V | 4822 122 31081 |
| C 1901 | 22NF 80%      | 40V  | 4822 122 30103 |
| C 1902 | 1NF 10%       | 100V | 4822 122 30027 |
| C 1903 | 100PF 2%      | 100V | 4822 122 31504 |
| C 1904 | 22NF 80%      | 40V  | 4822 122 30103 |
| C 1905 | 22NF 80%      | 40V  | 4822 122 30103 |
| C 1906 | 22NF 80%      | 40V  | 4822 122 30103 |
| C 1907 | 22PF 2%       | 100V | 5322 122 34067 |
| C 1908 | 47PF 2%       | 100V | 4822 122 31244 |
| C 1909 | 22NF 80%      | 40V  | 4822 122 30103 |
| C 1910 | 22PF 2%       | 100V | 5322 122 34067 |
| C 1911 | 22PF 2%       | 100V | 5322 122 34067 |
| C 1912 | 1NF 10%       | 100V | 4822 122 30027 |
| C 1913 | 22NF 80%      | 40V  | 4822 122 30103 |
| C 1914 | 22NF 80%      | 40V  | 4822 122 30103 |
| C 1915 | 1UF 20%       | 25V  | 4822 124 20944 |
| C 1916 | 22NF 80%      | 40V  | 4822 122 30103 |
| C 1917 | 22NF 80%      | 40V  | 4822 122 30103 |
| C 1918 | 1NF 10%       | 100V | 4822 122 30027 |
| C 1919 | 22NF 80%      | 40V  | 4822 122 30103 |
| C 1920 | 22NF 80%      | 40V  | 4822 122 30103 |
| C 1921 | 10NF 80%      | 40V  | 4822 122 30043 |
| C 1922 | 10NF 80%      | 40V  | 4822 122 30043 |
| C 1923 | 10NF 80%      | 40V  | 4822 122 30043 |
| C 1924 | 10NF 80%      | 40V  | 4822 122 30043 |
| C 1925 | 10NF 80%      | 40V  | 4822 122 30043 |
| C 1926 | 10NF 80%      | 40V  | 4822 122 30043 |
| C 1927 | 10NF 80%      | 40V  | 4822 122 30043 |
| C 1928 | 10NF 80%      | 40V  | 4822 122 30043 |
| C 1929 | 10NF 80%      | 40V  | 4822 122 30043 |
| C 1930 | 10NF 80%      | 40V  | 4822 122 30043 |
| C 1931 | 10NF 80%      | 40V  | 4822 122 30043 |
| C 1932 | 10NF 80%      | 40V  | 4822 122 30043 |

## 5.5.4. Semi conductors

| POSNR | DESCRIPTION | ORDERING CODE  |
|-------|-------------|----------------|
| V 151 | BAW62       | 4822 130 30613 |
| V 152 | BAW62       | 4822 130 30613 |
| V 153 | BAW62       | 4822 130 30613 |
| V 201 | BF256B      | 5322 130 44744 |
| V 202 | BF256B      | 5322 130 44744 |
| V 203 | BC 547B     | 4822 130 40959 |
| V 204 | BC558       | 4822 130 40941 |
| V 205 | BC558       | 4822 130 40941 |
| V 206 | BC 547B     | 4822 130 40959 |
| V 207 | BC558       | 4822 130 40941 |
| V 208 | BC 547B     | 4822 130 40959 |
| V 209 | BC 547B     | 4822 130 40959 |
| V 210 | BC558       | 4822 130 40941 |
| V 251 | BY527       | 4822 130 31509 |
| V 252 | BY527       | 4822 130 31509 |
| V 253 | BZX70-C7V5  | 5322 130 34981 |
| V 254 | BZX70-C7V5  | 5322 130 34981 |
| V 257 | BZX70-C12   | 5322 130 30753 |
| V 258 | BZX70-C12   | 5322 130 30753 |
| V 259 | BAW62       | 4822 130 30613 |
| V 260 | BAW62       | 4822 130 30613 |
| V 261 | BAW62       | 4822 130 30613 |
| V 263 | BAW62       | 4822 130 30613 |
| V 264 | 0A 95       | 4822 130 30191 |
| V 265 | 0A 95       | 4822 130 30191 |
| V 301 | BF256A      | 5322 130 44418 |
| V 302 | ON528       | 5322 130 44405 |
| V 303 | BC 547B     | 4822 130 40959 |
| V 304 | BC 547B     | 4822 130 40959 |
| V 305 | BF324       | 4822 130 41448 |
| V 306 | BC 547B     | 4822 130 40959 |
| V 350 | BC558       | 4822 130 40941 |
| V 351 | BAW62       | 4822 130 30613 |
| V 401 | BF256A      | 5322 130 44418 |
| V 403 | BC 547B     | 4822 130 40959 |
| V 450 | BZX70-C10   | 5322 130 34299 |
| V 451 | BZX70-C10   | 5322 130 34299 |
| V 452 | BZX79-B13   | 4822 130 34195 |
| V 453 | BAW62       | 4822 130 30613 |
| V 454 | BZV46-C2V0  | 4822 130 31248 |
| V 501 | BF324       | 4822 130 41448 |
| V 502 | BSX20       | 5322 130 40417 |

| POSNR  | DESCRIPTION | ORDERING CODE  |
|--------|-------------|----------------|
| V 503  | BSX20       | 5322 130 40417 |
| V 504  | BF324       | 4822 130 41448 |
| V 505  | BF324       | 4822 130 41448 |
| V 506  | BC 547B     | 4822 130 40959 |
| V 507  | BC 547B     | 4822 130 40959 |
| V 550  | BAW62       | 4822 130 30613 |
| V 551  | BAW62       | 4822 130 30613 |
| V 601  | BC 547B     | 4822 130 40959 |
| V 602  | BC 547B     | 4822 130 40959 |
| V 603  | BF256A      | 5322 130 44418 |
| V 604  | BF256A      | 5322 130 44418 |
| V 605  | ON528       | 5322 130 44405 |
| V 606  | ON528       | 5322 130 44405 |
| V 607  | ON528       | 5322 130 44405 |
| V 608  | ON 527      | 5322 130 44528 |
| V 609  | BC 547B     | 4822 130 40959 |
| V 610  | BC 547B     | 4822 130 40959 |
| V 611  | BC 547B     | 4822 130 40959 |
| V 612  | BC 547B     | 4822 130 40959 |
| V 613  | BC 547B     | 4822 130 40959 |
| V 614  | BFW12       | 5322 130 41785 |
| V 652  | BAW62       | 4822 130 30613 |
| V 654  | BZX79-B7V5  | 4822 130 30861 |
| V 655  | BZV46-C1V5  | 5322 130 34865 |
| V 656  | BZV46-C1V5  | 5322 130 34865 |
| V 657  | BZV46C2V0   | 4822 130 31248 |
| V 801  | BC 547B     | 4822 130 40959 |
| V 802  | BC 547B     | 4822 130 40959 |
| V 803  | BD675       | 5322 130 44786 |
| V 804  | BC558       | 4822 130 40941 |
| V 805  | BZX79-B9V1  | 4822 130 30862 |
| V 851  | BY164       | 4822 130 30414 |
| V 852  | BZX79-B5V1  | 4822 130 34233 |
| V 853  | BY164       | 4822 130 30414 |
| V 855  | BZX79-B5V1  | 4822 130 34233 |
| V 1901 | OA95        | 4822 130 30191 |



## 5.5.5. Integrated circuit

| POSNR  | DESCRIPTION | ORDERING CODE  |
|--------|-------------|----------------|
| A 201  | UA714HC     | 5322 209 86169 |
| A 302  | OQ0061      | 5322 209 85885 |
| A 401  | OQ0063      | 5322 209 80989 |
| A 501  | UA741TC     | 4822 209 80617 |
| A 502  | UA710HC     | 5322 209 86414 |
| A 601  | UA741TC     | 4822 209 80617 |
| A 602  | OQ0064      | 5322 209 85887 |
| A 603  | OQ0060      | 5322 209 85884 |
| A 801  | LM78L05ACZ  | 5322 209 80903 |
| A 802  | UA741TC     | 4822 209 80617 |
| D 1901 | N74LS244N   | 5322 209 86017 |
| D 1902 | SN74LS161AN | 5322 209 85915 |
| D 1903 | HEF4027BP   | 5322 209 14055 |
| D 1904 | P8035       | 5322 209 86479 |
| D 1905 | HEF40174BP  | 5322 209 14444 |
| D 1906 | HEF40174BP  | 5322 209 14444 |
| D 1907 | SN74LS161AN | 5322 209 85915 |
| D 1908 | SAA1060     | 4822 209 80512 |
| D 1909 | 2716        | 5322 209 54696 |
| D 1910 | HEF4070BP   | 5322 209 14073 |
| D 1911 | SN74LS86N   | 5322 209 84997 |
| D 1912 | HEF40174BP  | 5322 209 14444 |
| D 1913 | SN74LS10N   | 5322 209 84996 |
| D 1914 | HEF4011BP   | 5322 209 14046 |
| D 1915 | SN74LS74    | 4822 209 80782 |
| D 1916 | HEF4051P    | 5322 209 14212 |
| D 1917 | HEF40106BP  | 5322 209 14549 |
| D 1918 | HEF4023BP   | 5322 209 14065 |
| D 1919 | HEF4051P    | 5322 209 14212 |
| D 1920 | 2716        | 5322 209 54697 |
| D 1921 | N74LS00N    | 5322 209 84823 |

## 6. CIRCUIT DIAGRAMS AND P.C.B. LAY-OUTS

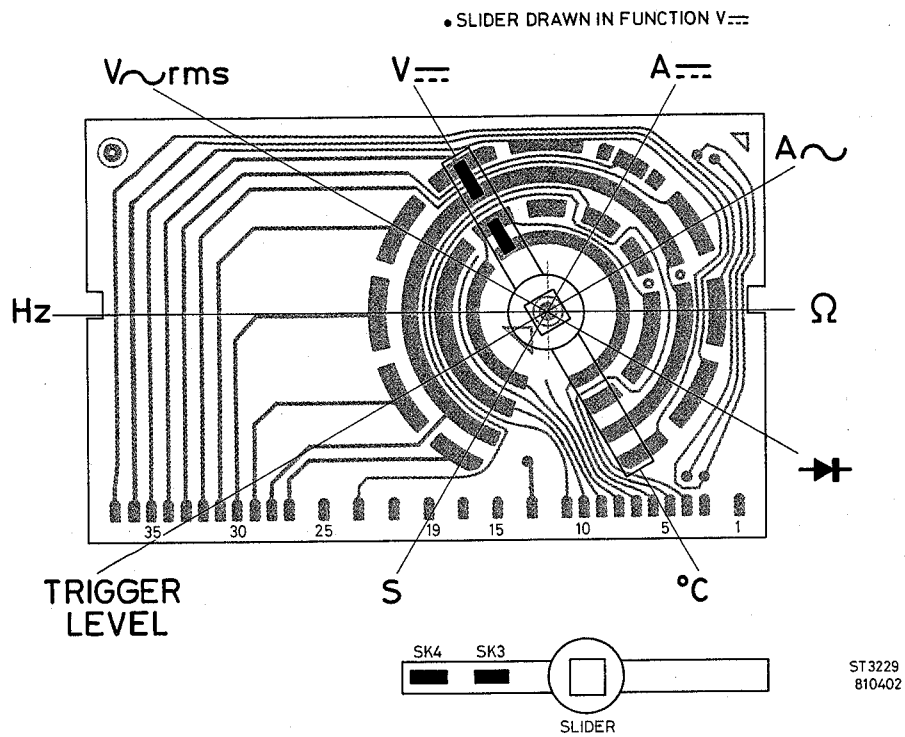


Fig. 54. Switch p.c.b. lay-out, front view



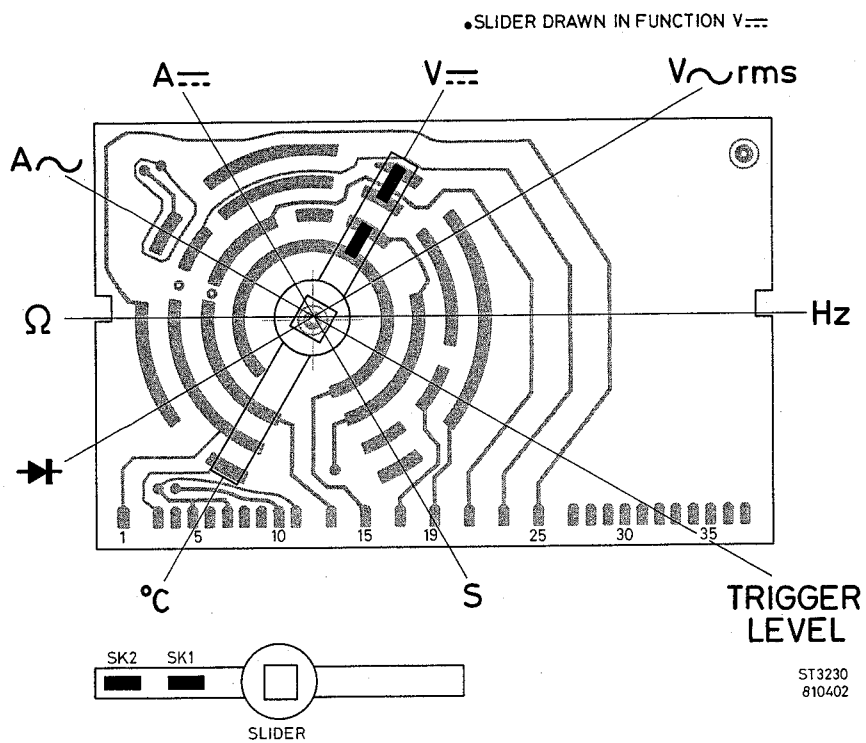


Fig. 55. Switch p.c.b. lay-out, rear view

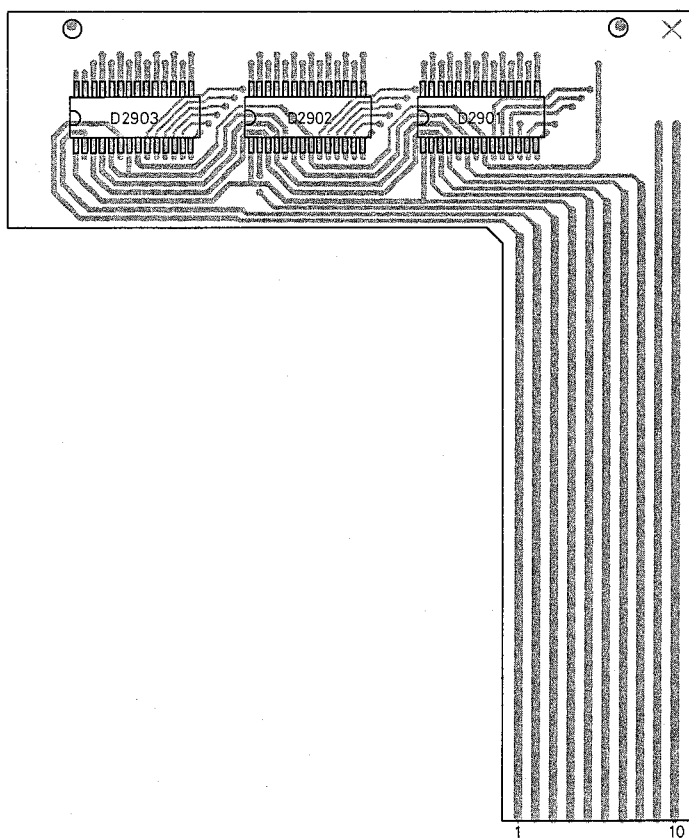

ST3231  
810402

Fig. 56. Display p.c.b. lay-out, component side

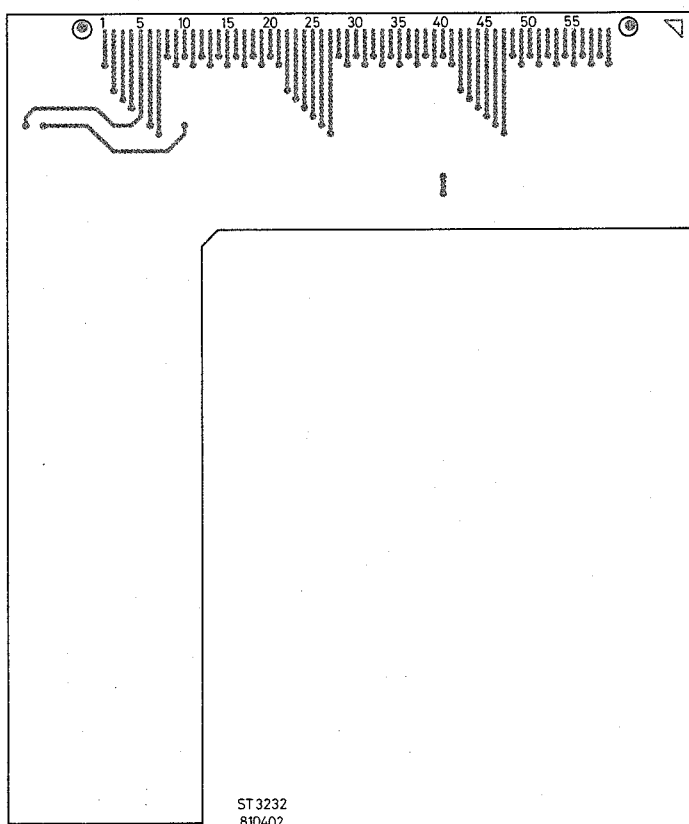

ST3232  
810402

Fig. 57. Display p.c.b. lay-out, conductor side








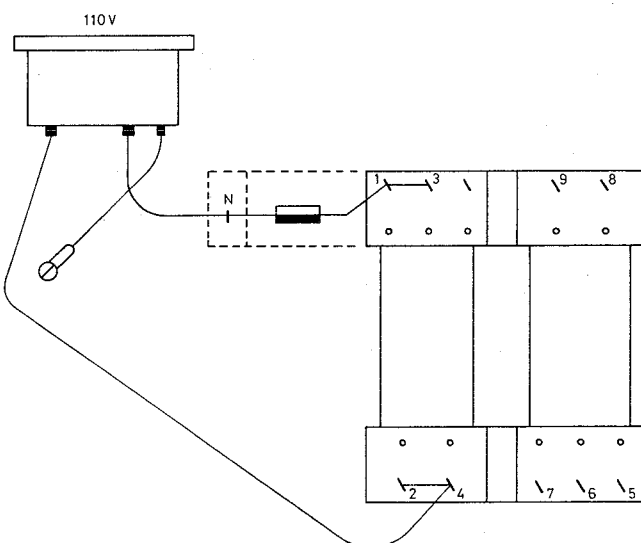


Fig. 58. Adapting the mains transformer

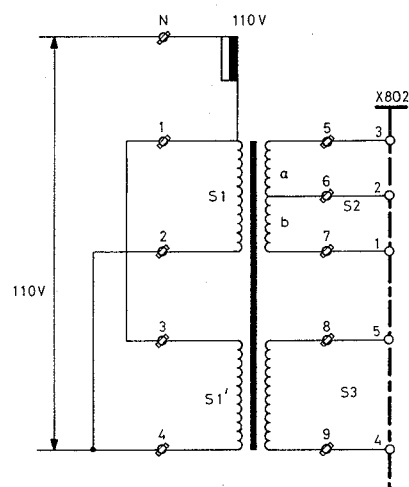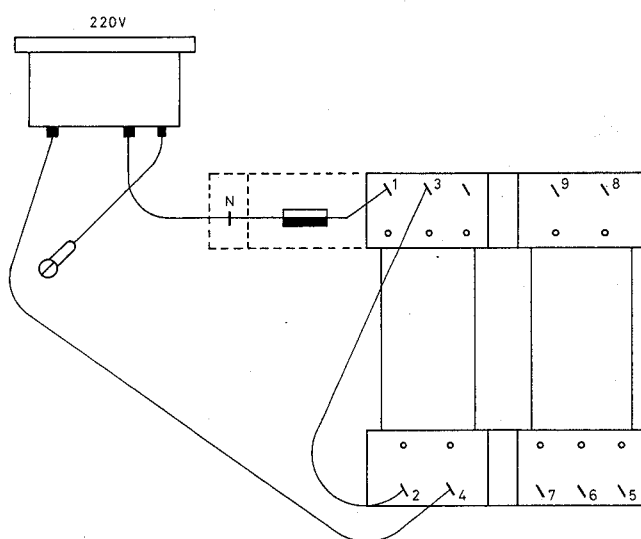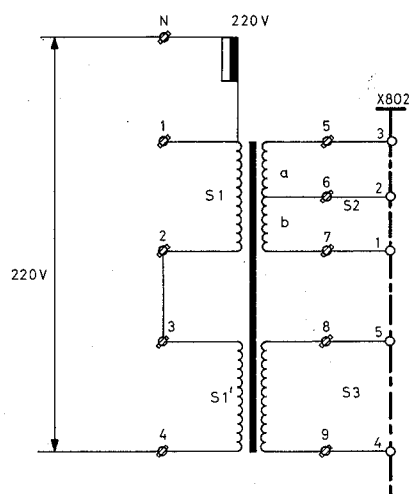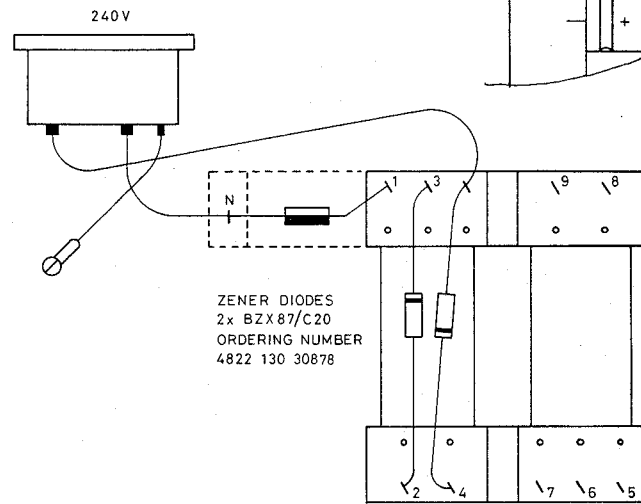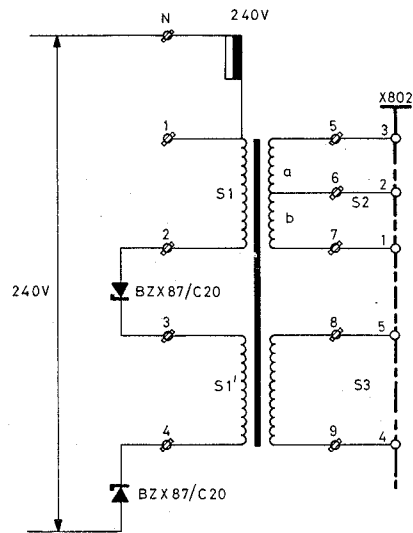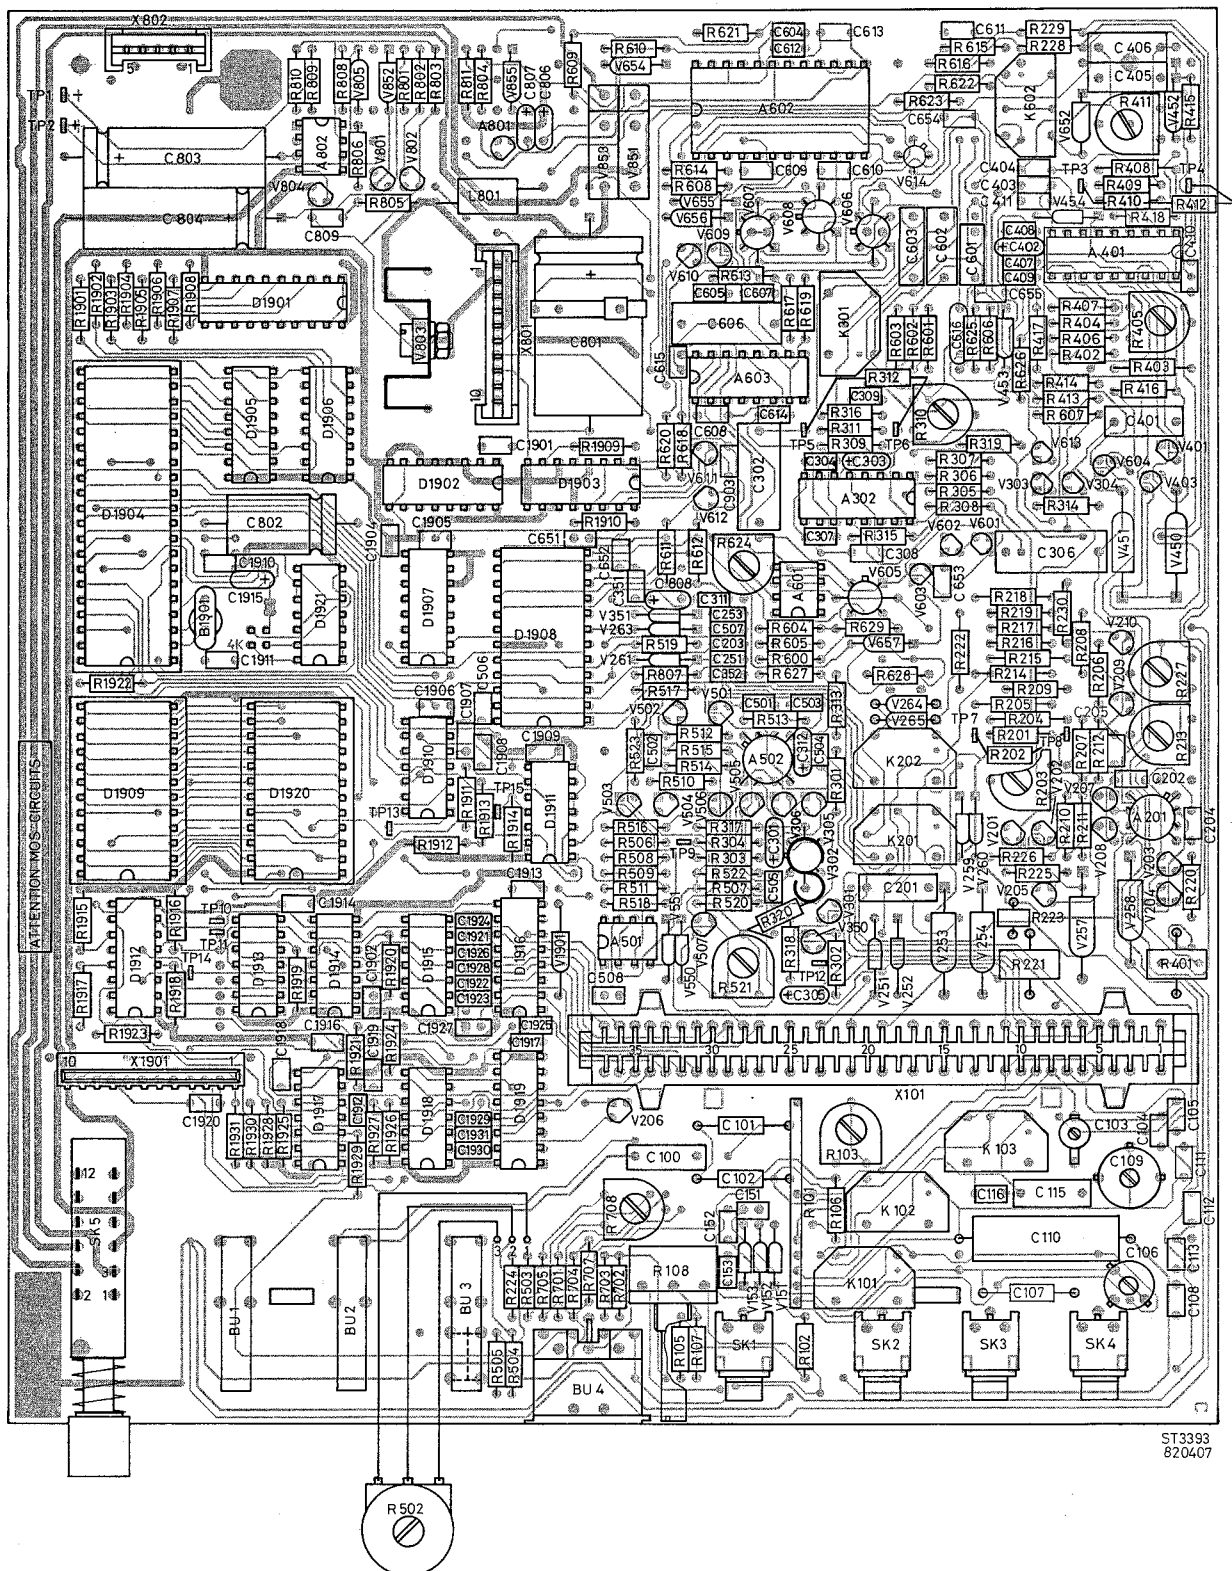

*Fig. 59. Main p.c.b. lay-out, component side*

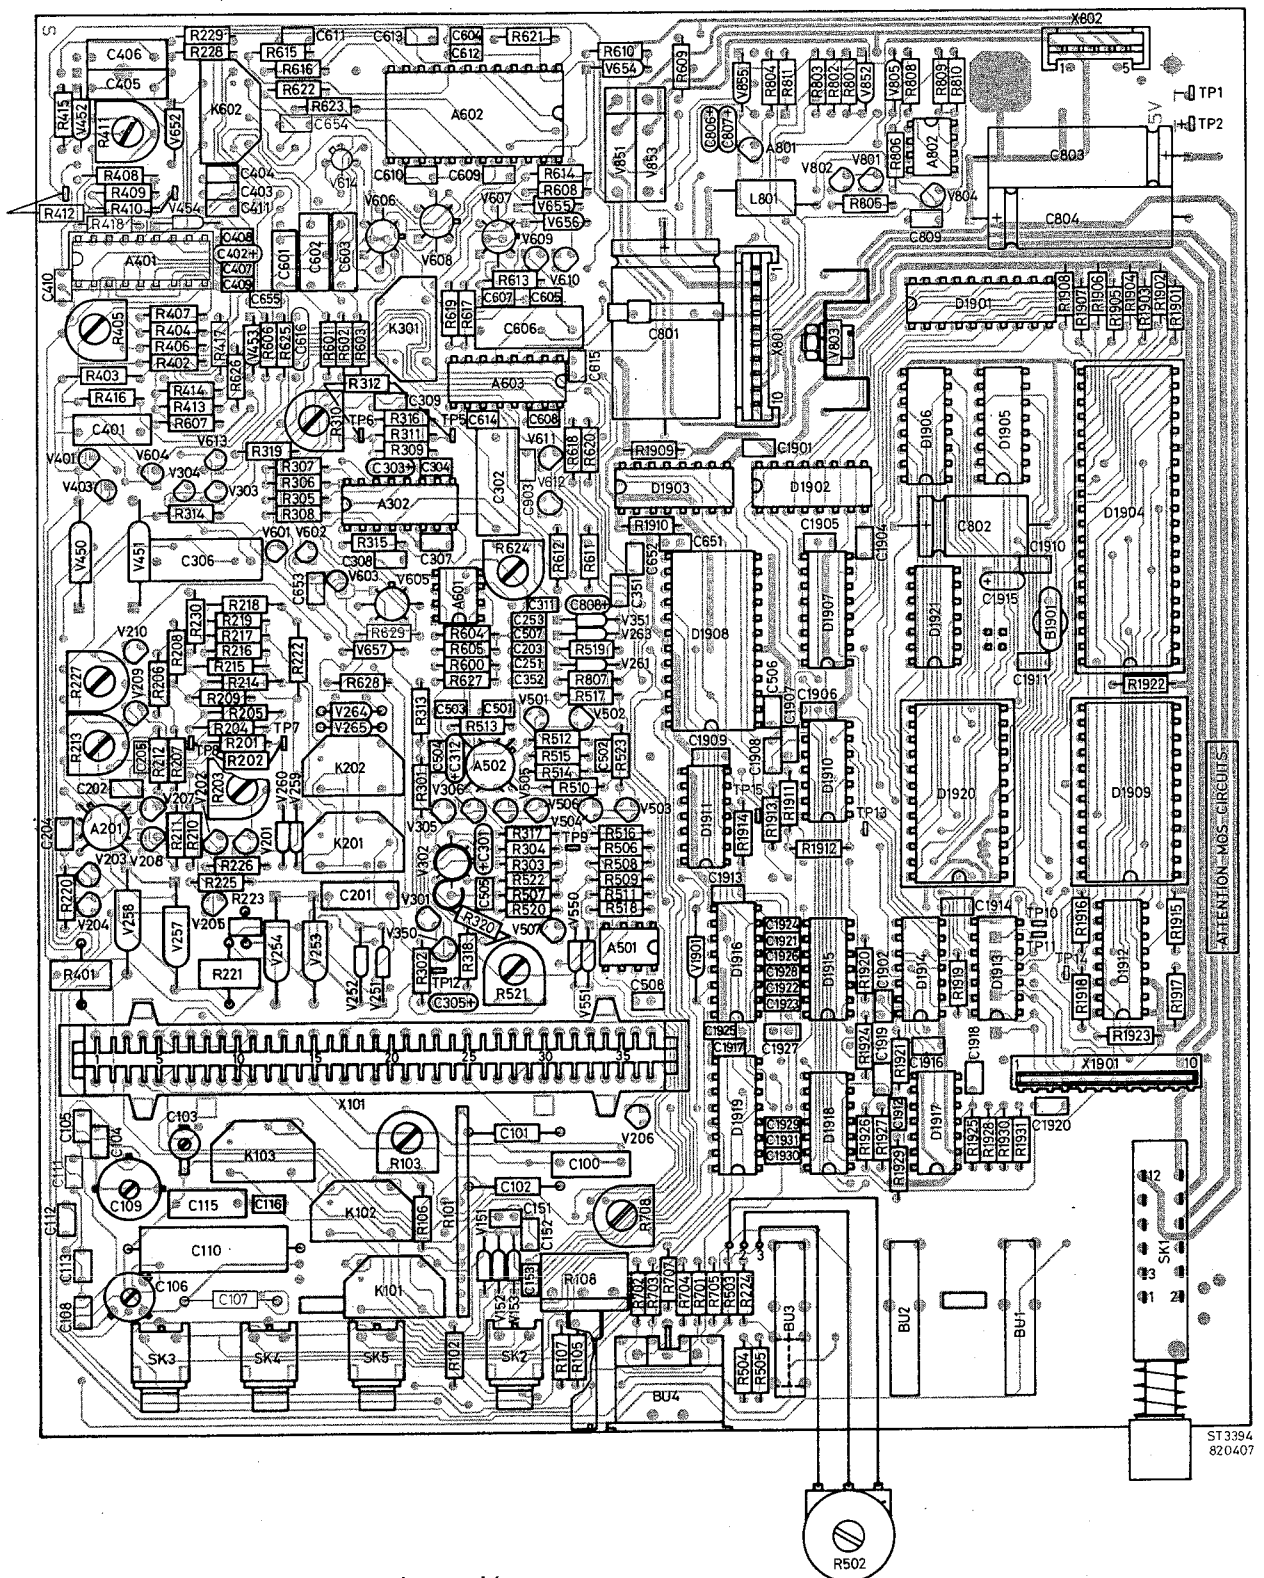

*Fig. 60. Main p.c.b. lay-out, conductor side*

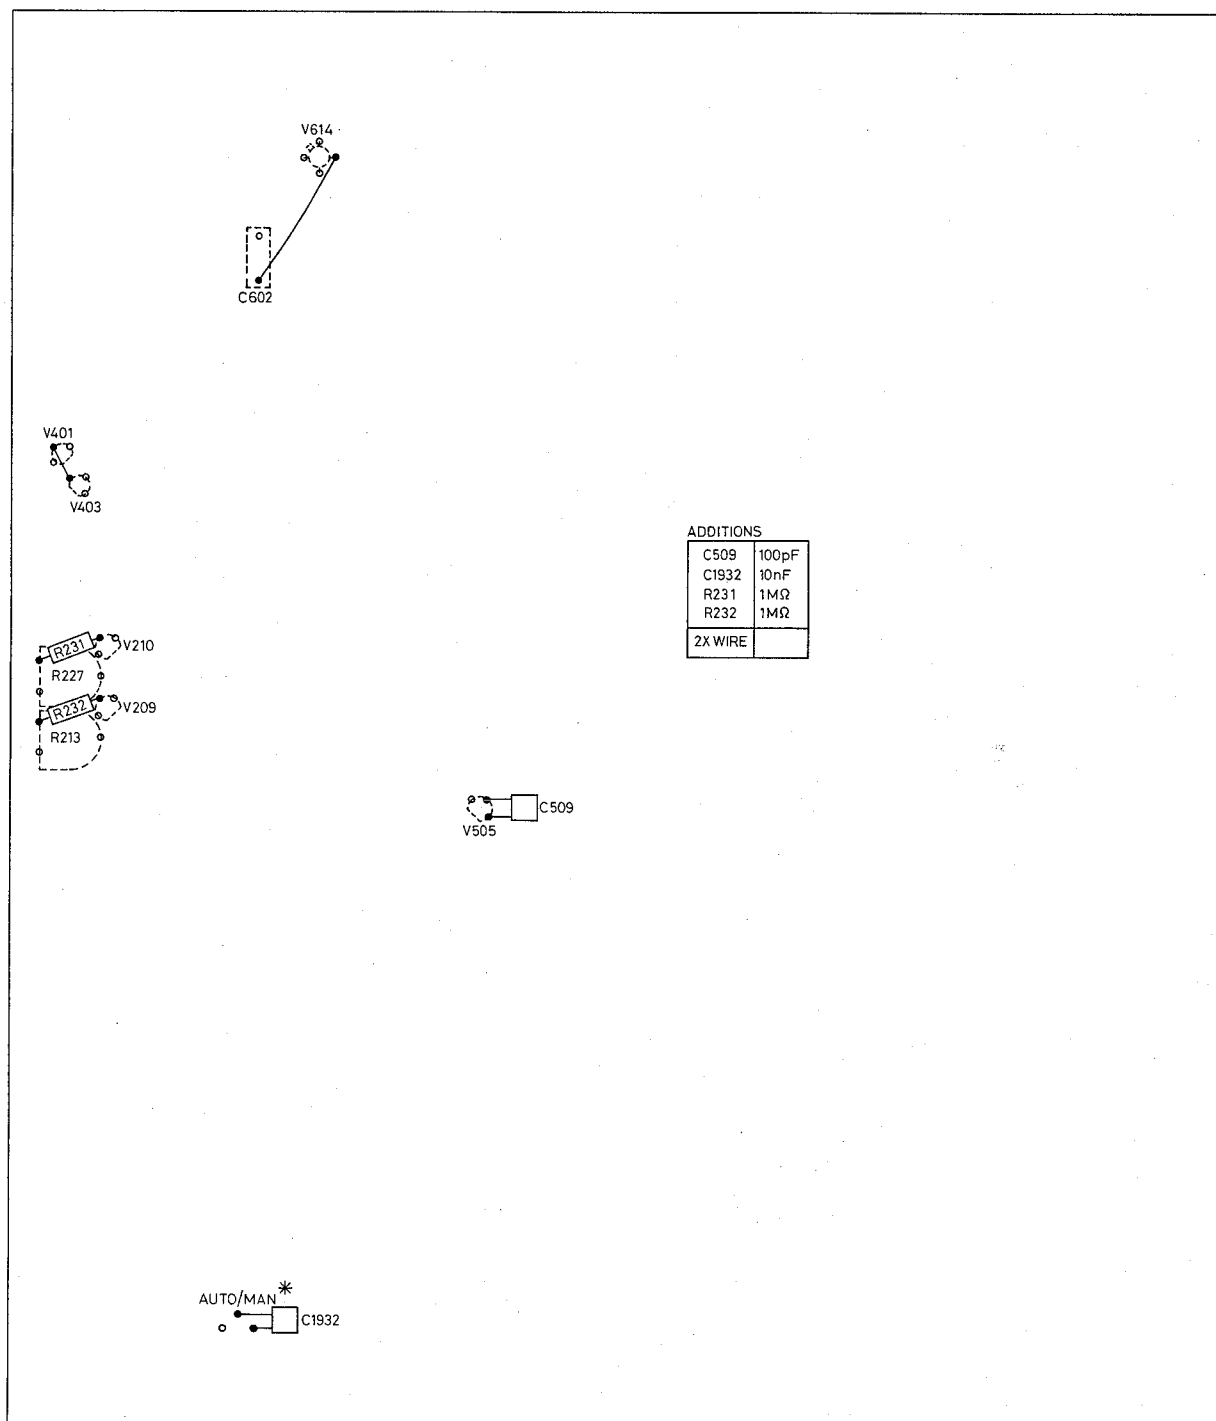


Fig. 61. Additional components conductor side of main p.c.b.

ST3444  
820208

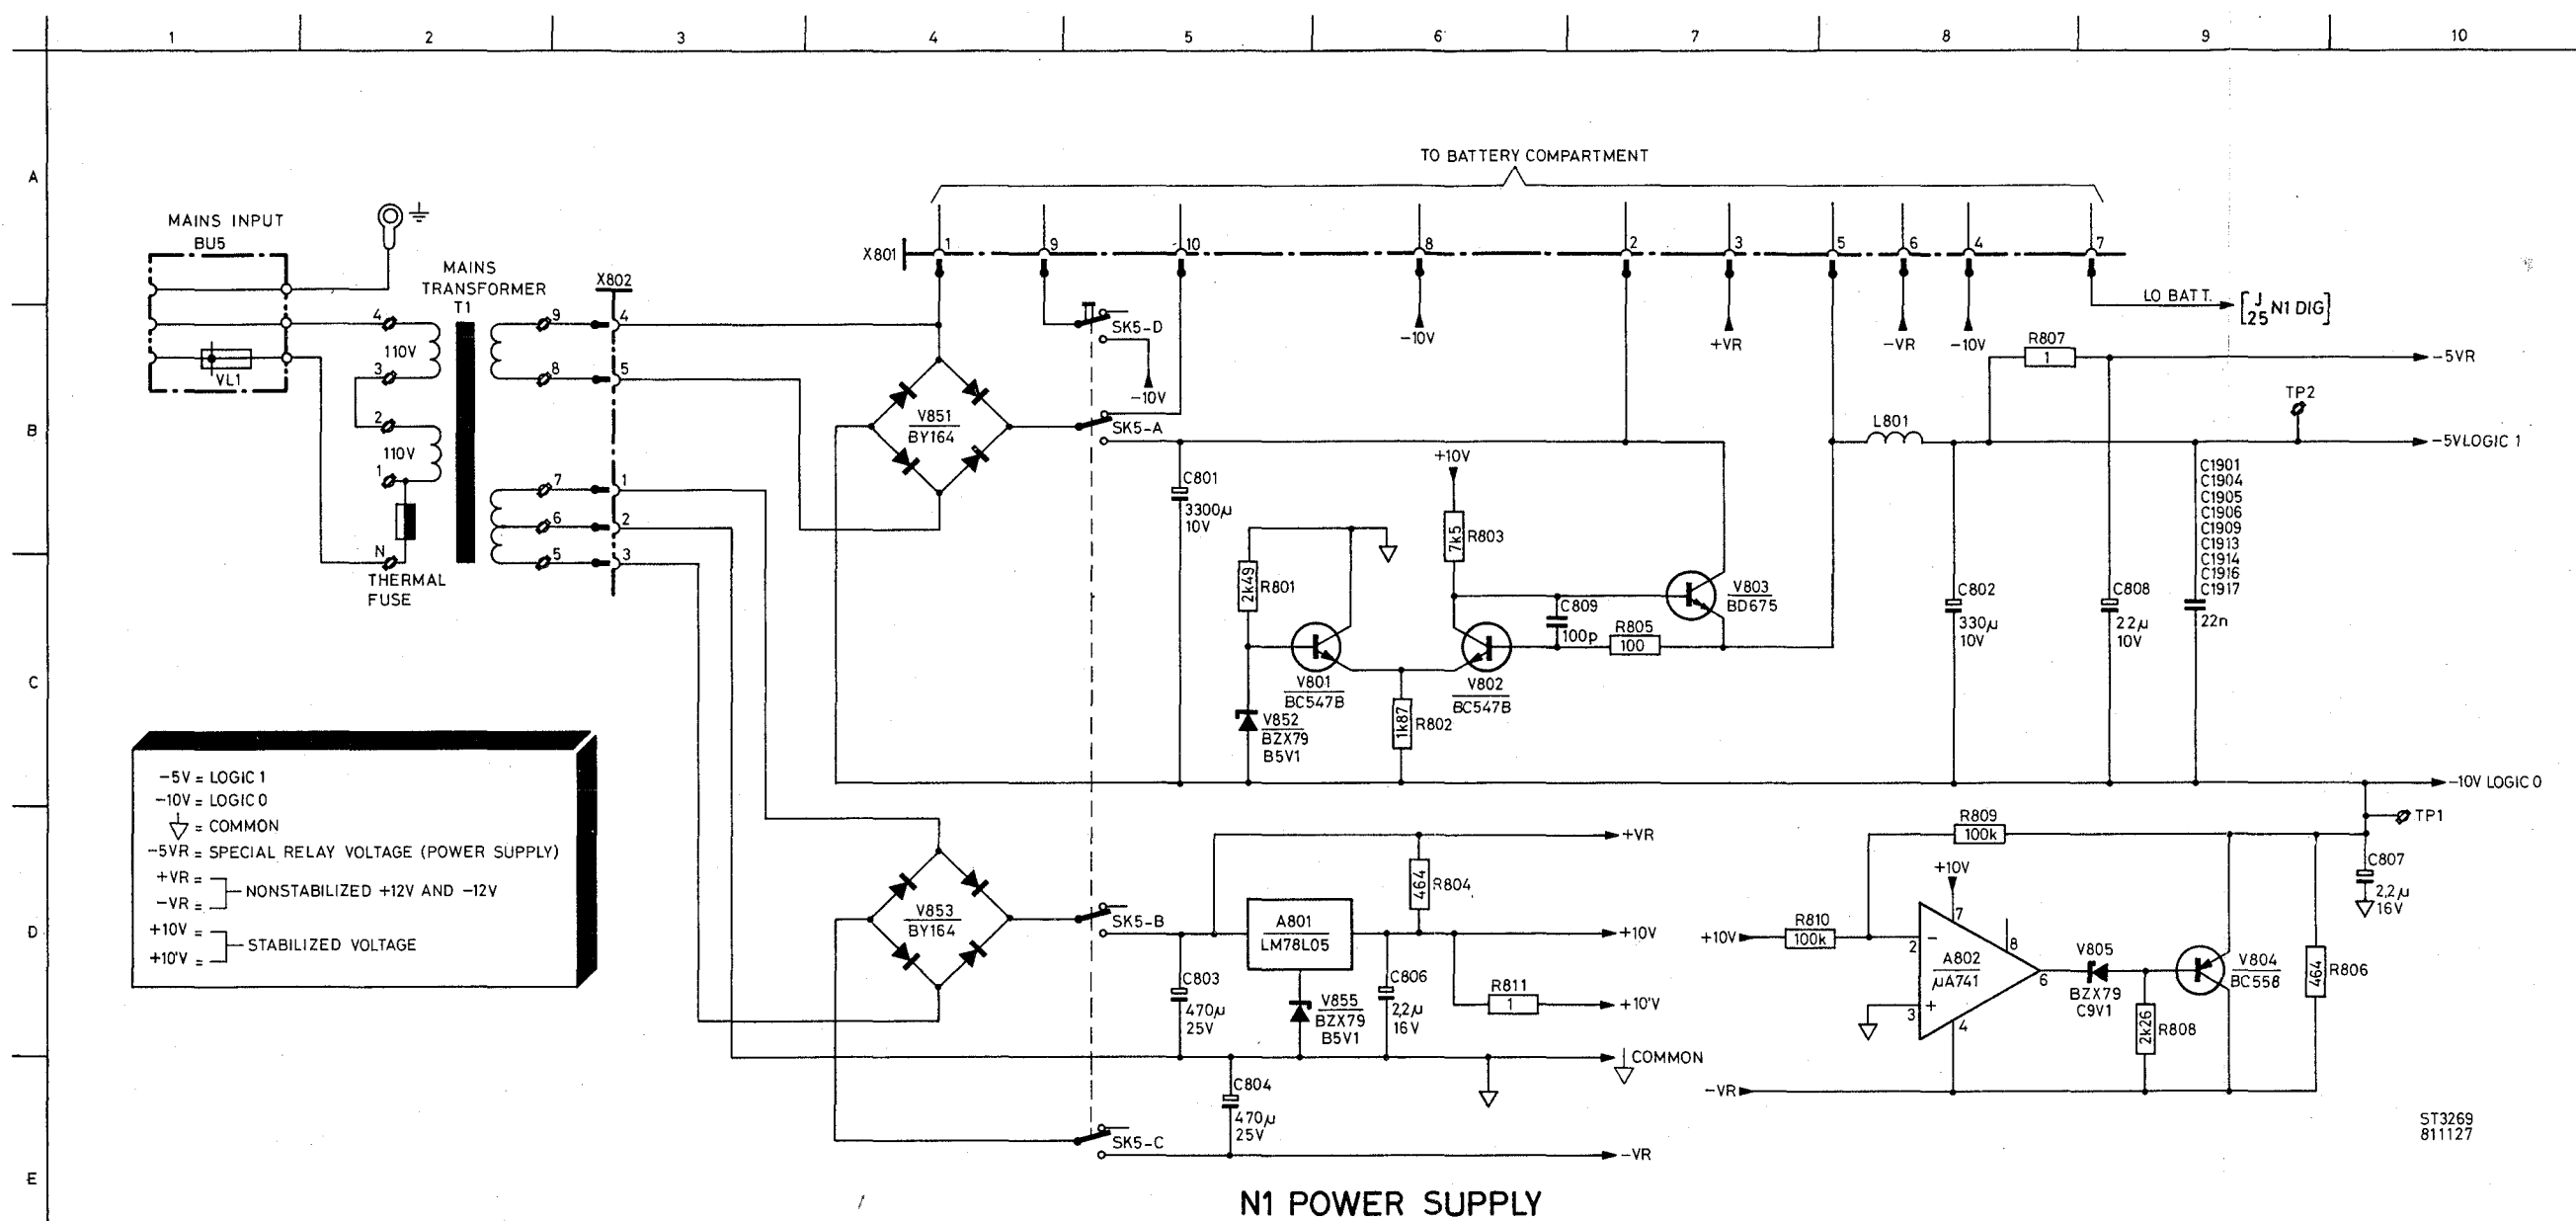


Fig. 62. Power supply circuit diagram



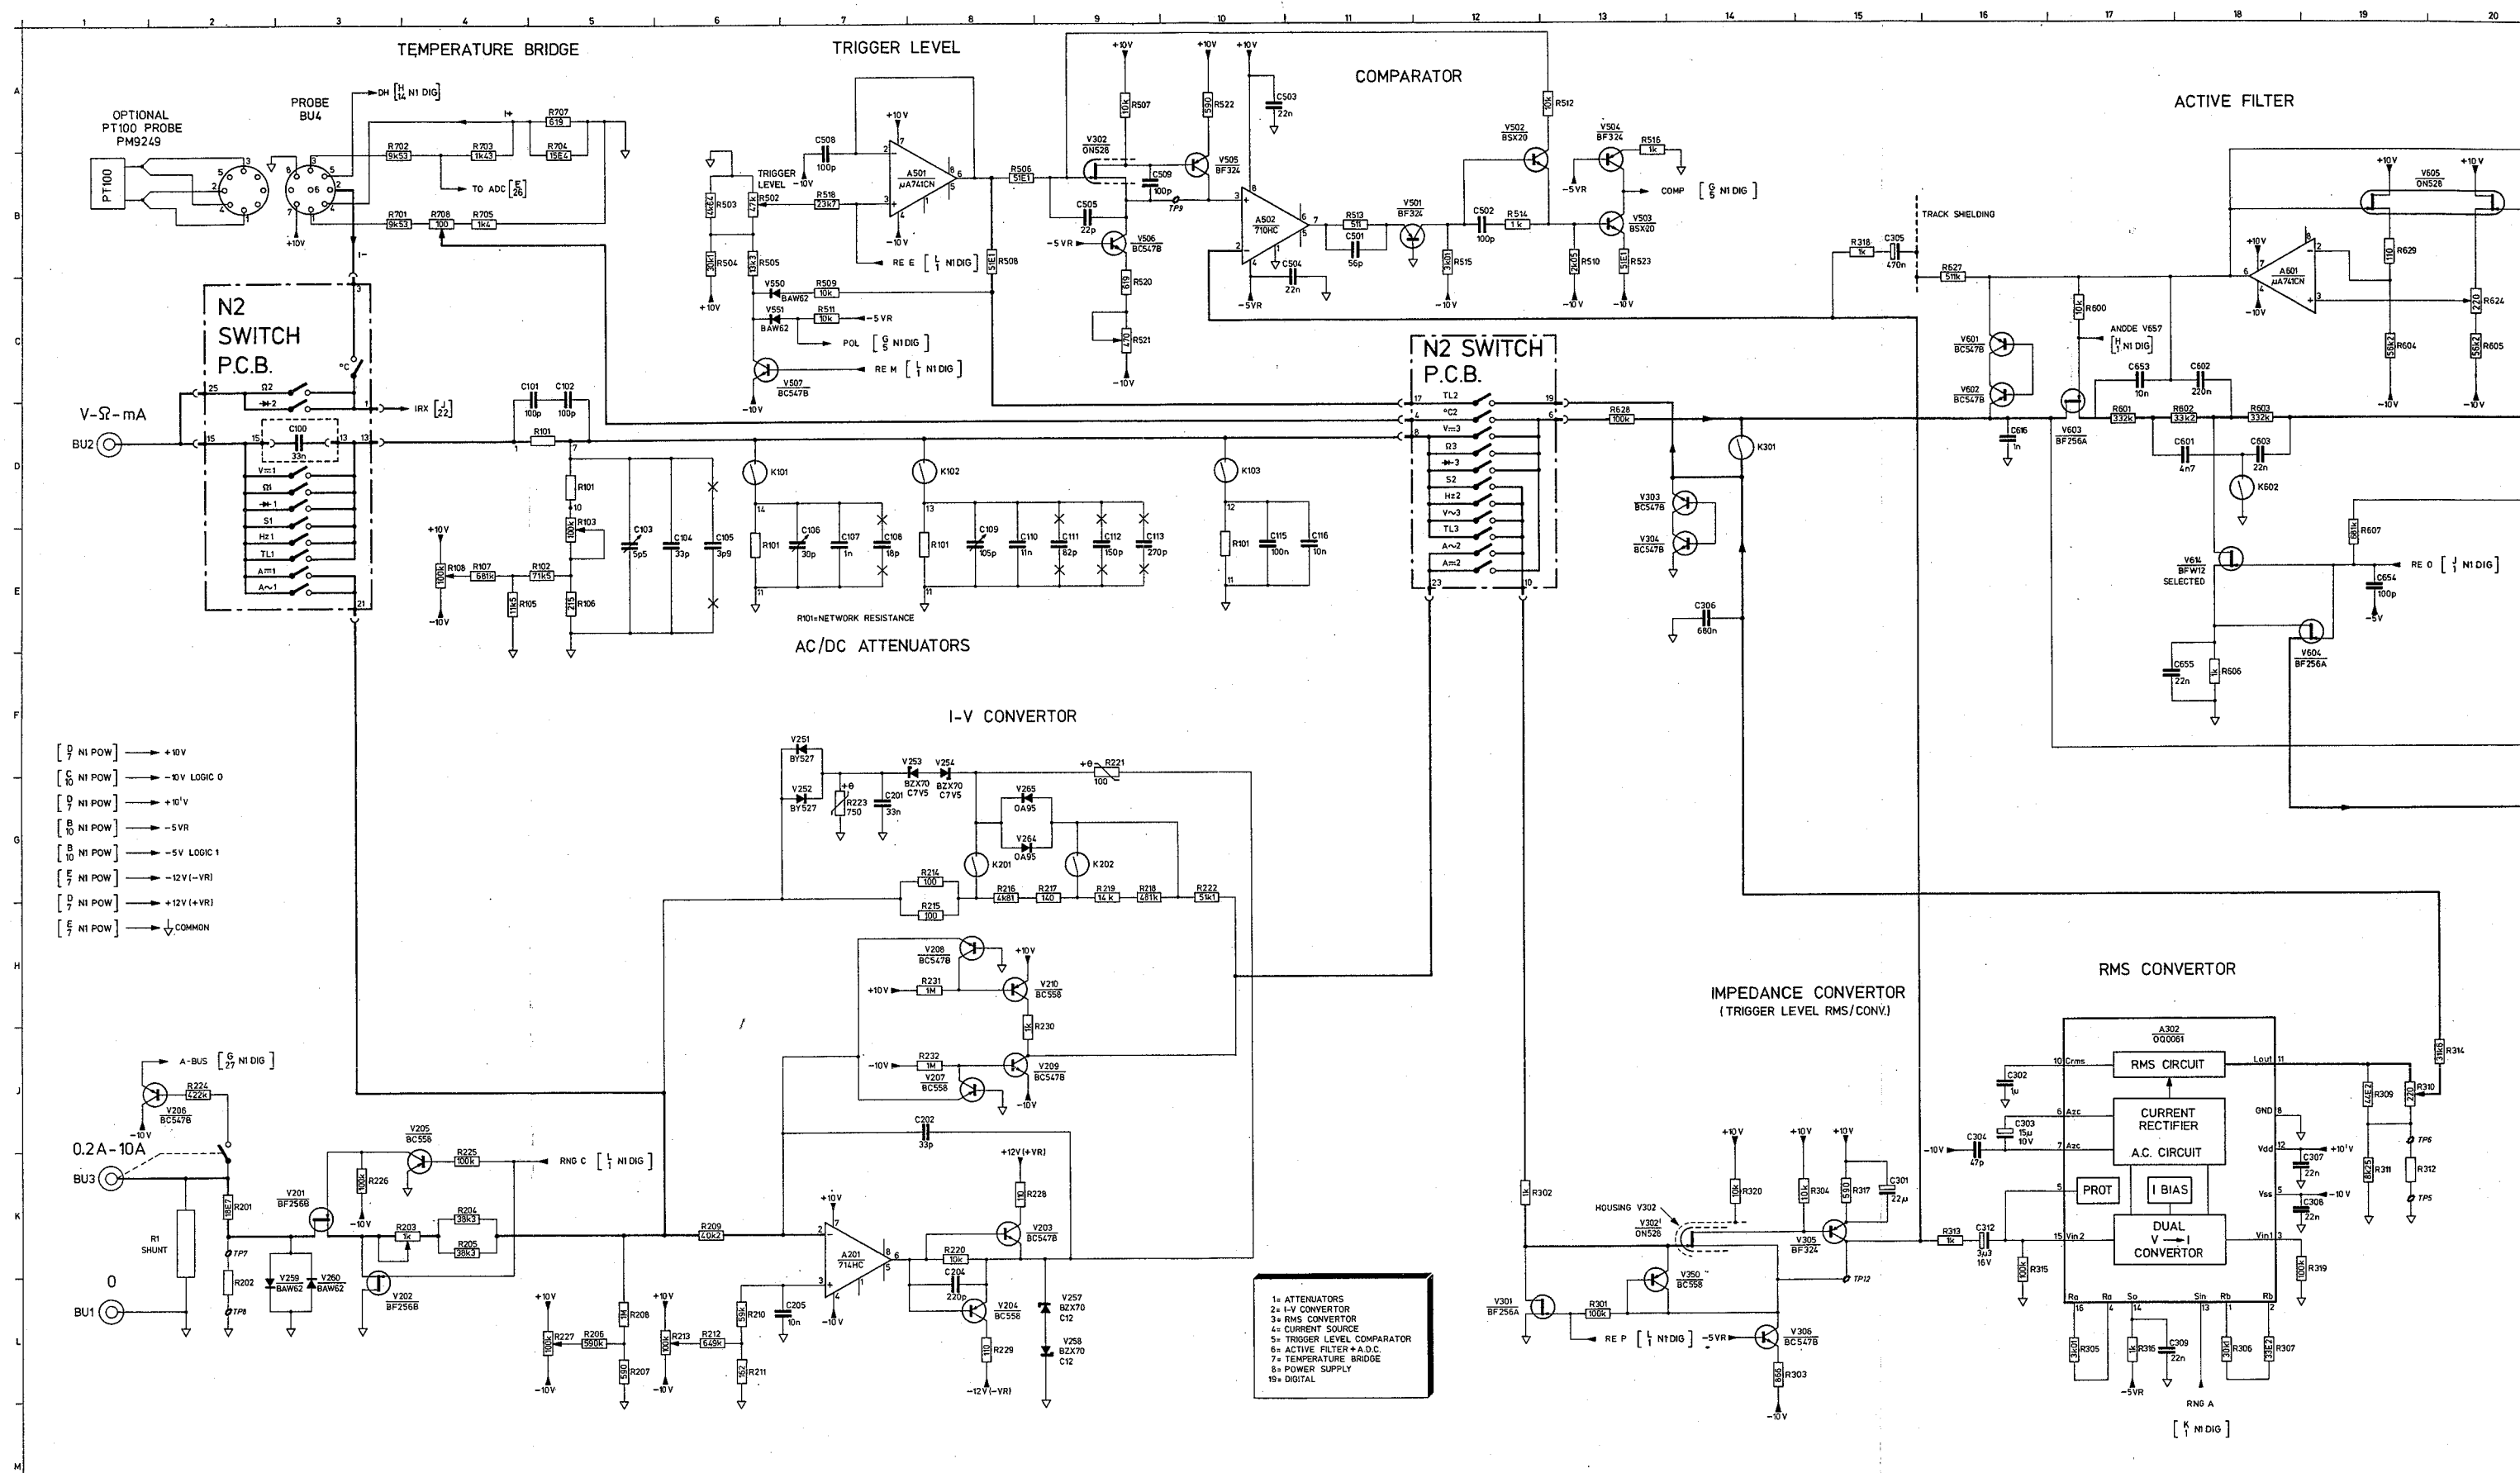
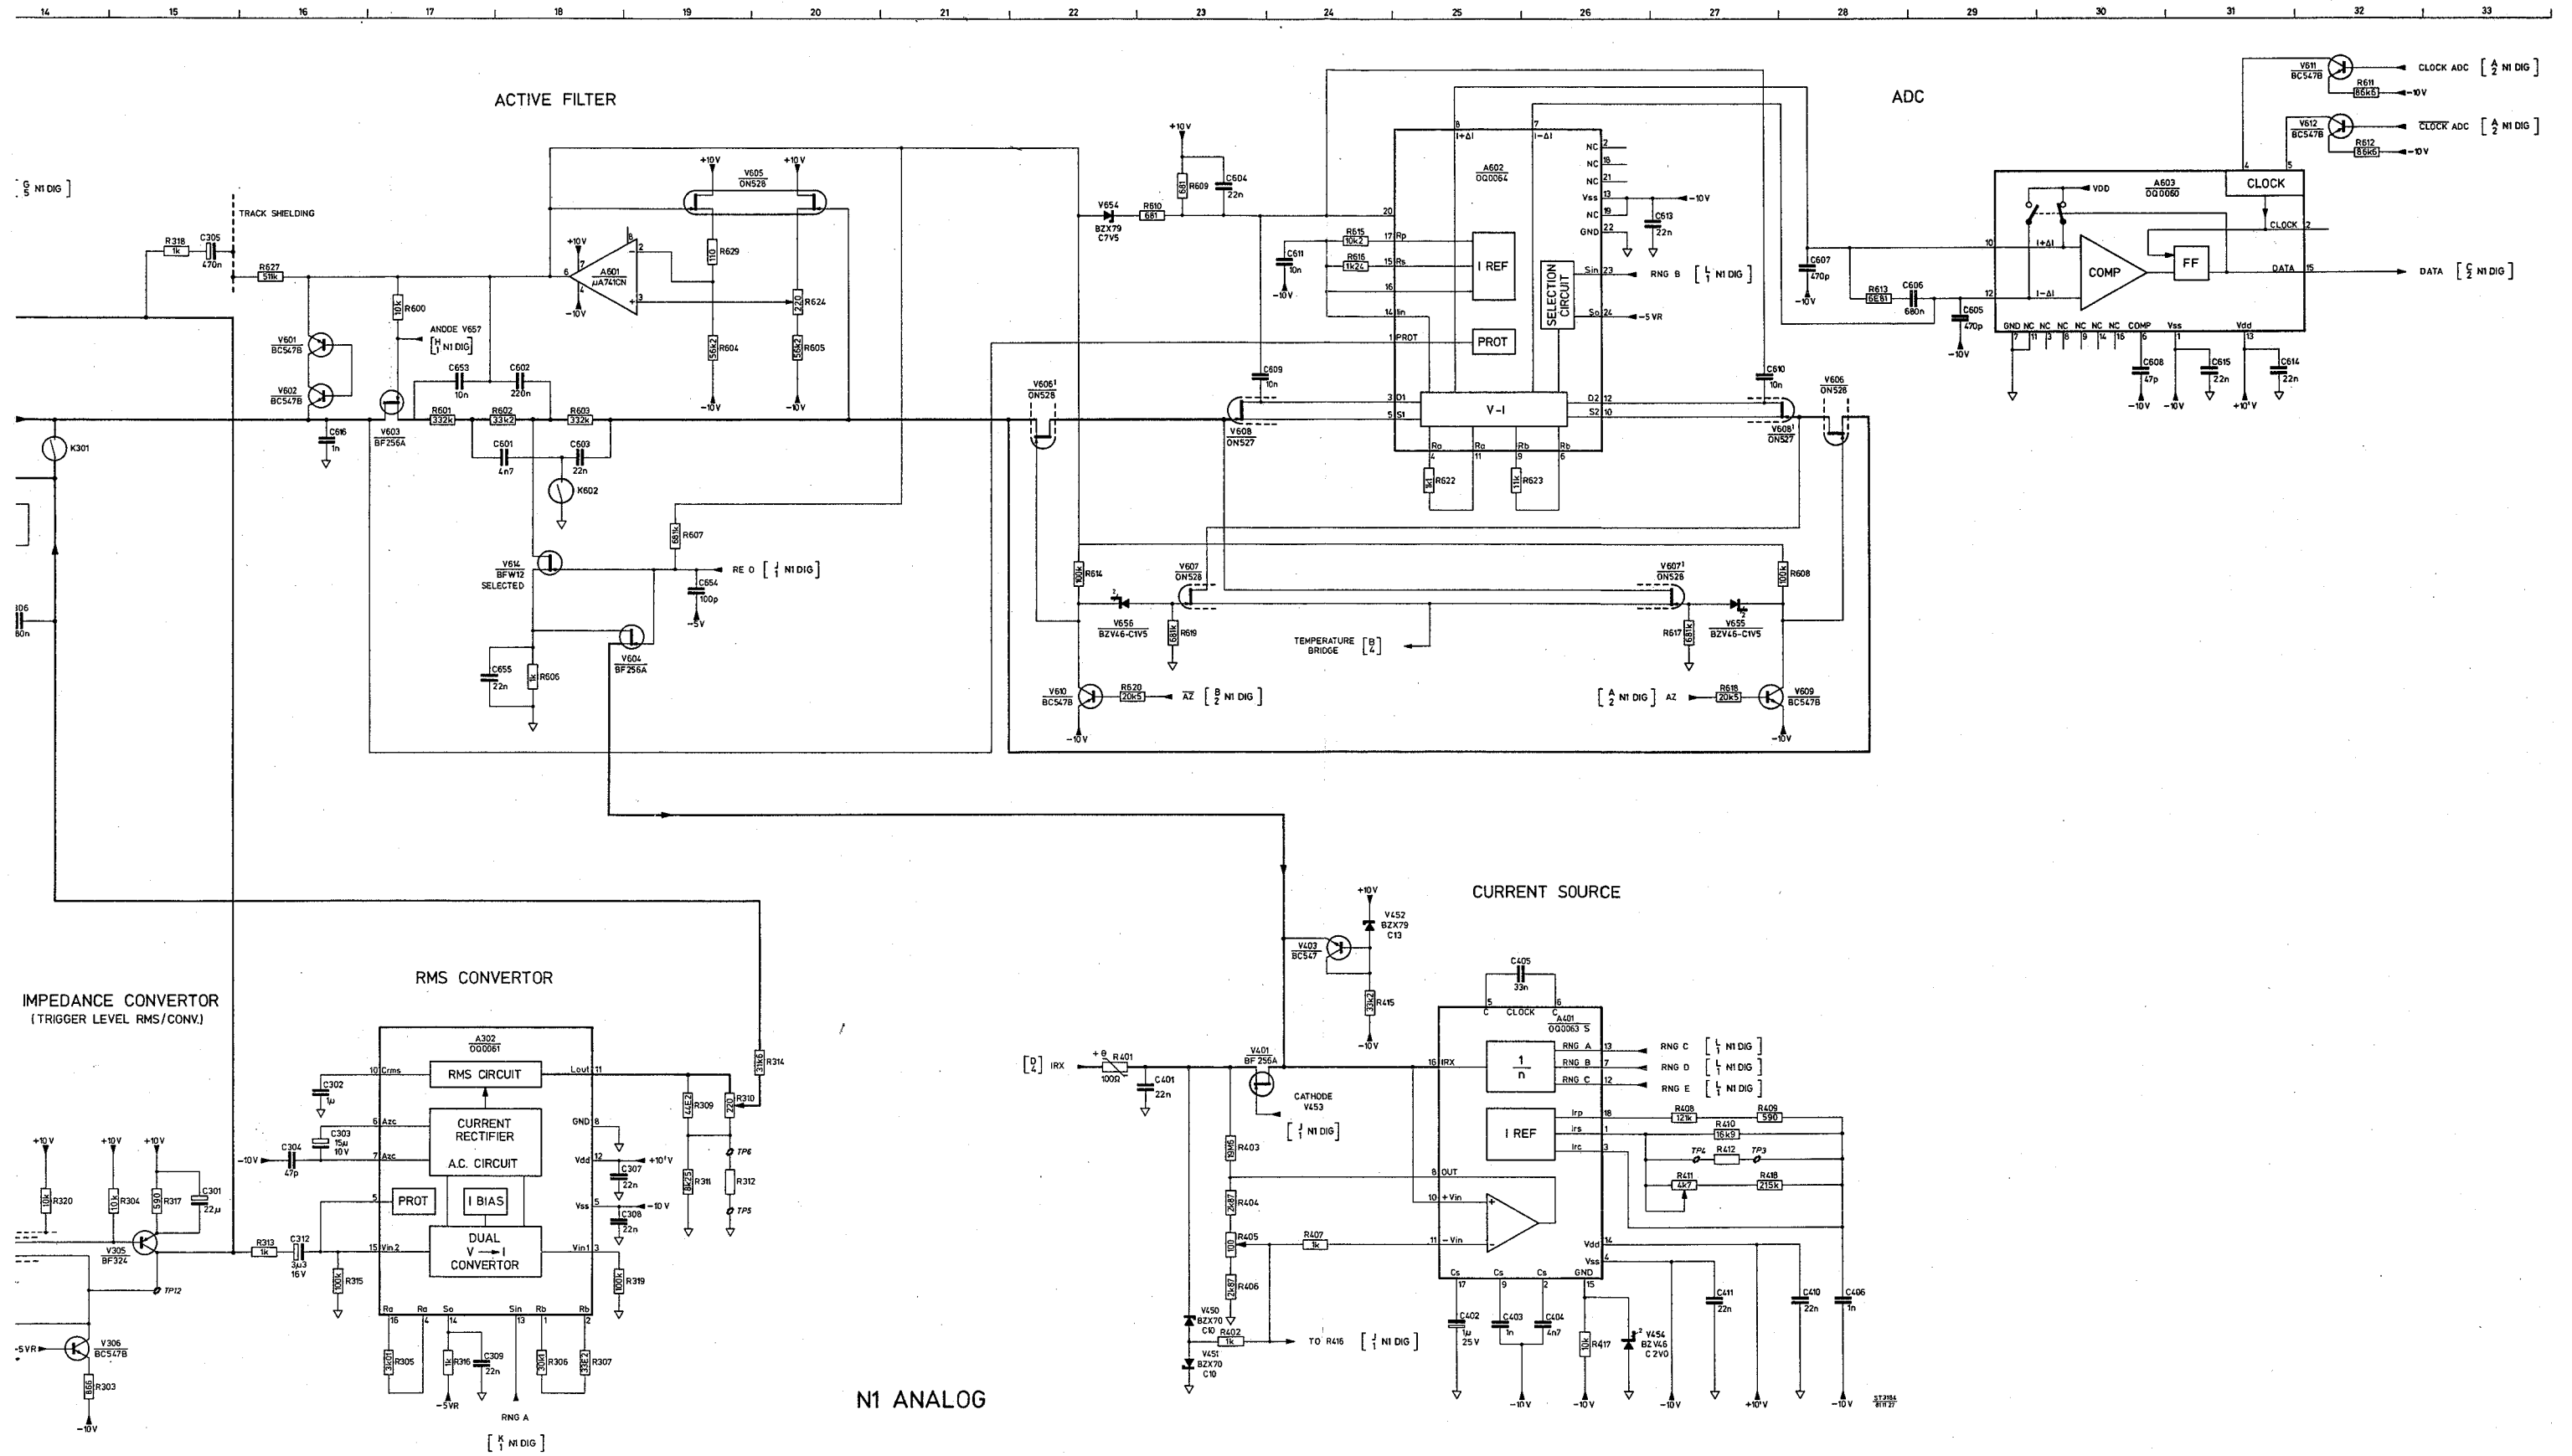


Fig. 63. Analog section diagram



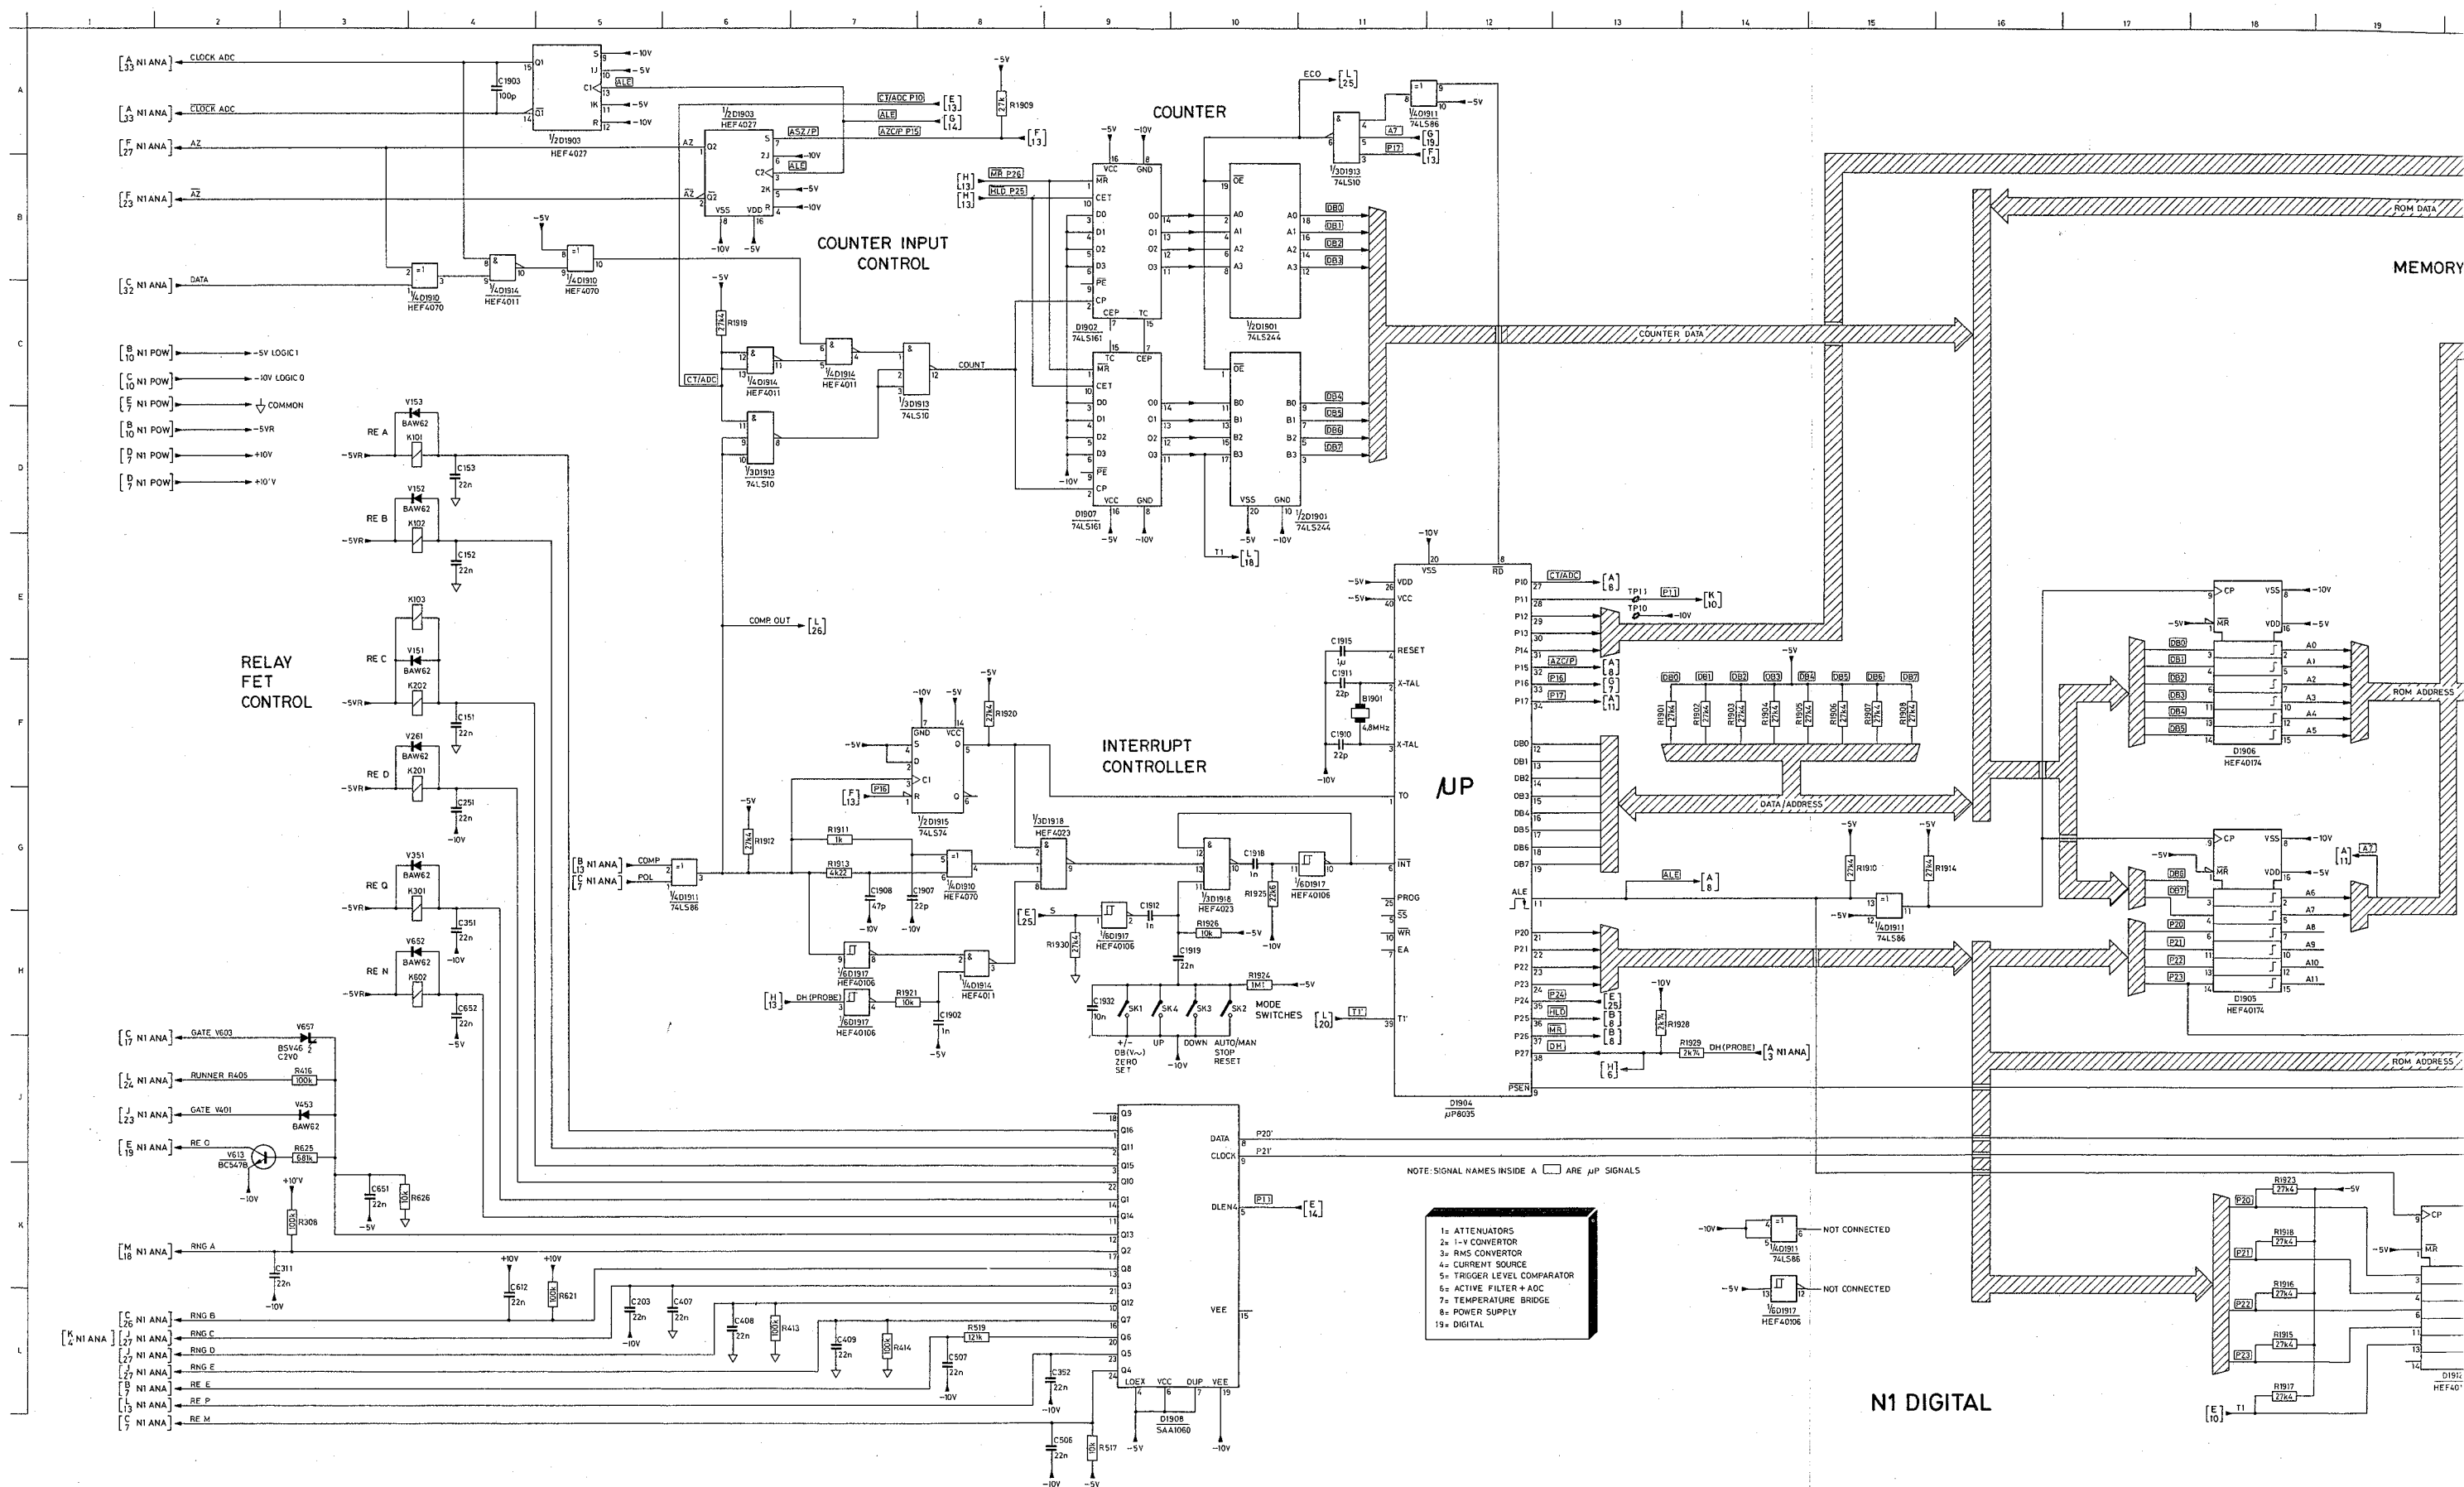




Fig. 64. Digital section circuit diagram

## 7. MODIFICATIONS TO THE PM2521

This service manual is based on the instrument numbers DM 01 1145 and onwards. For instruments with a lower number the following modifications are given.

### 7.1. Modifications to circuit diagrams and p.c.b. lay-out.

The following diagrams must be used:

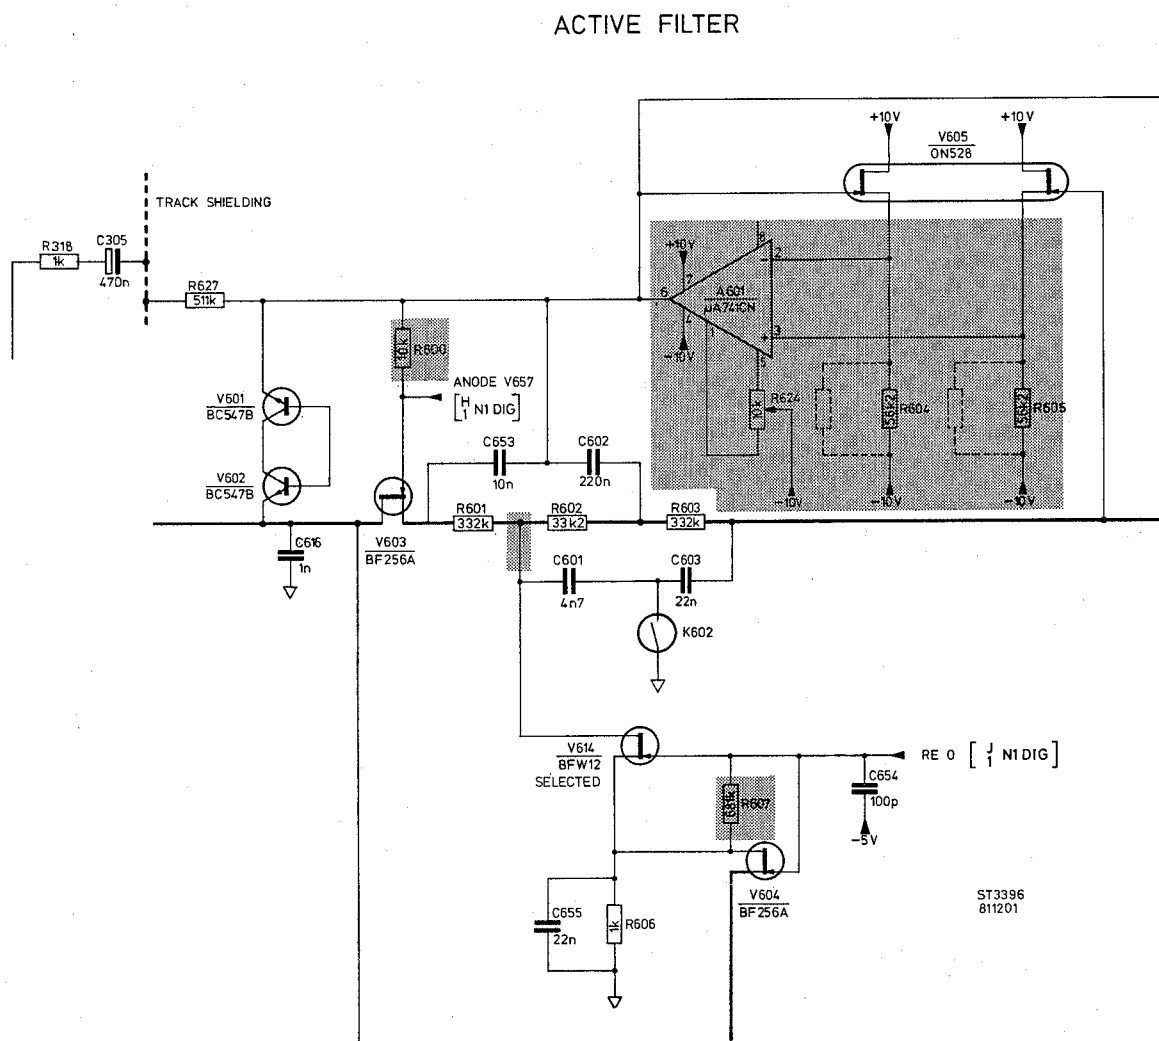


Fig. 65. Modifications to active filter



*Fig. 66. Modifications to current source*

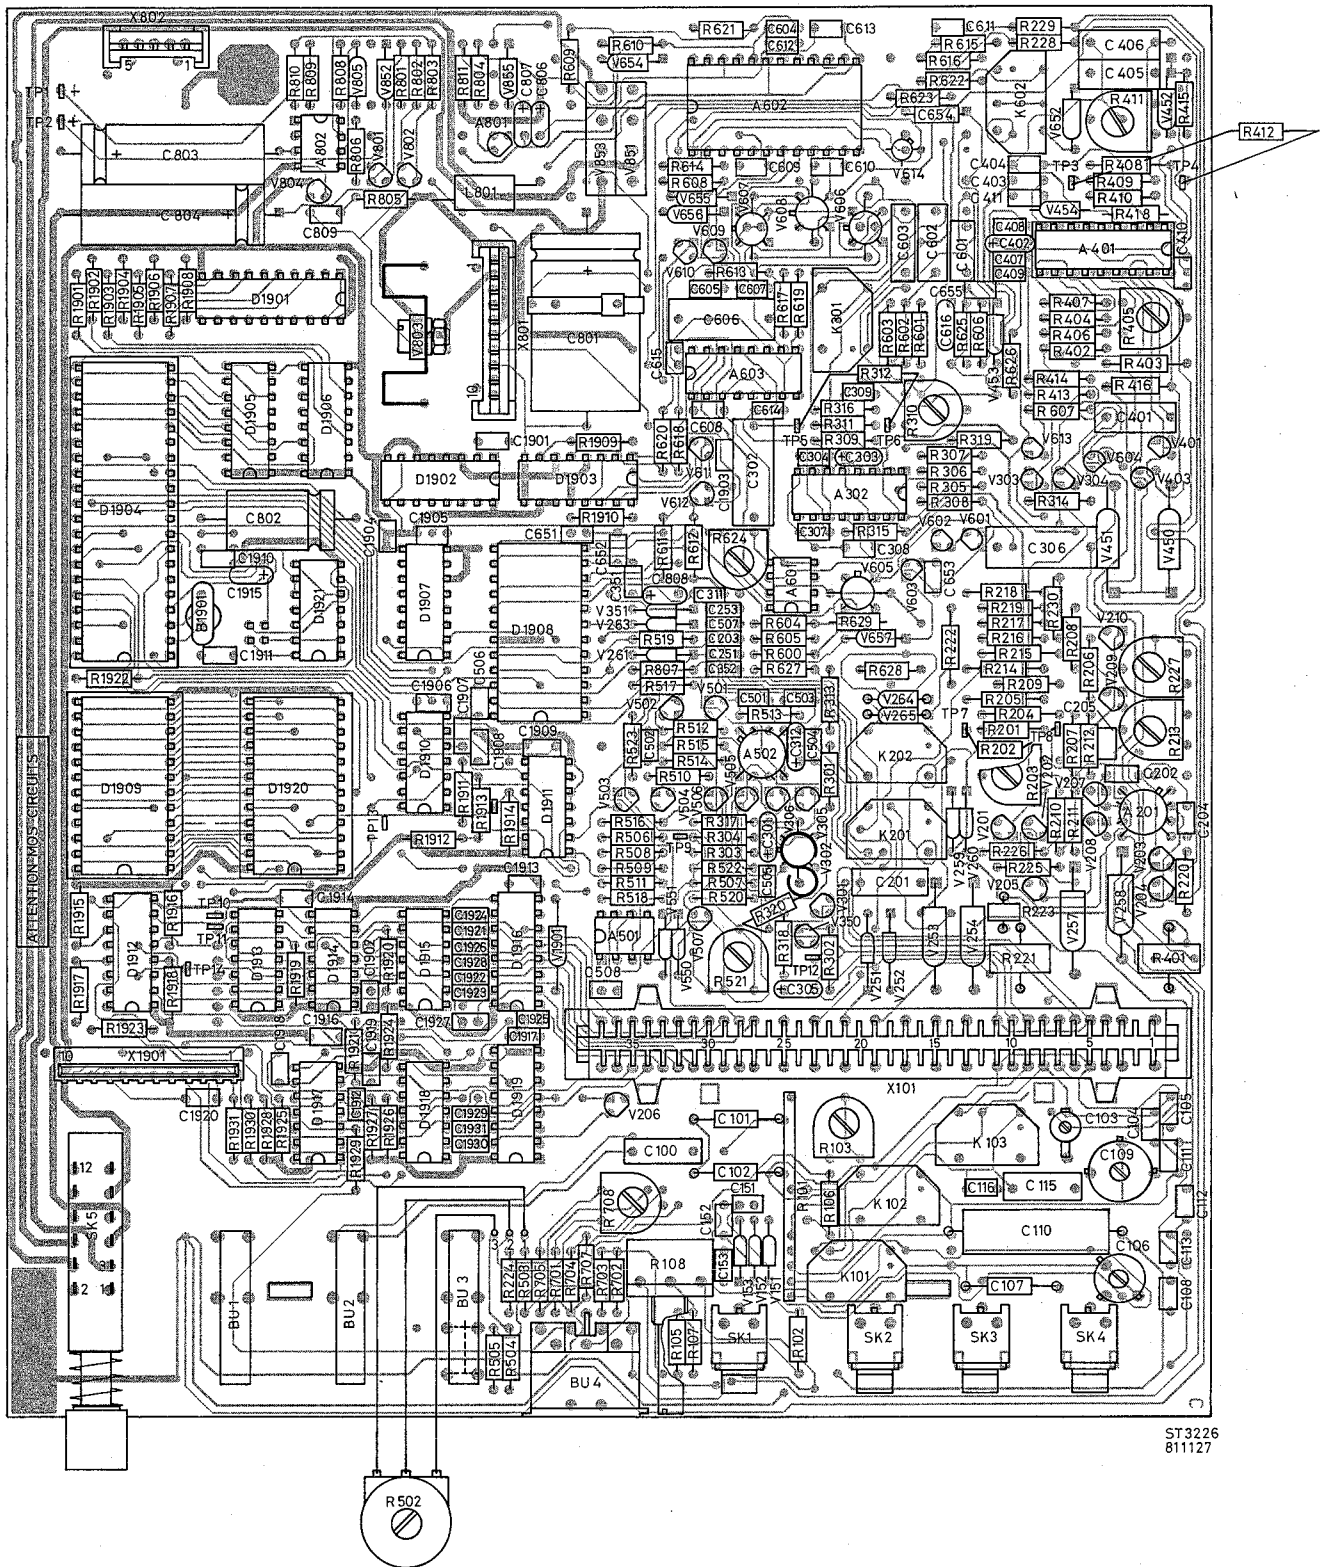


Fig. 67. Main p.c.b. lay-out, component side former version

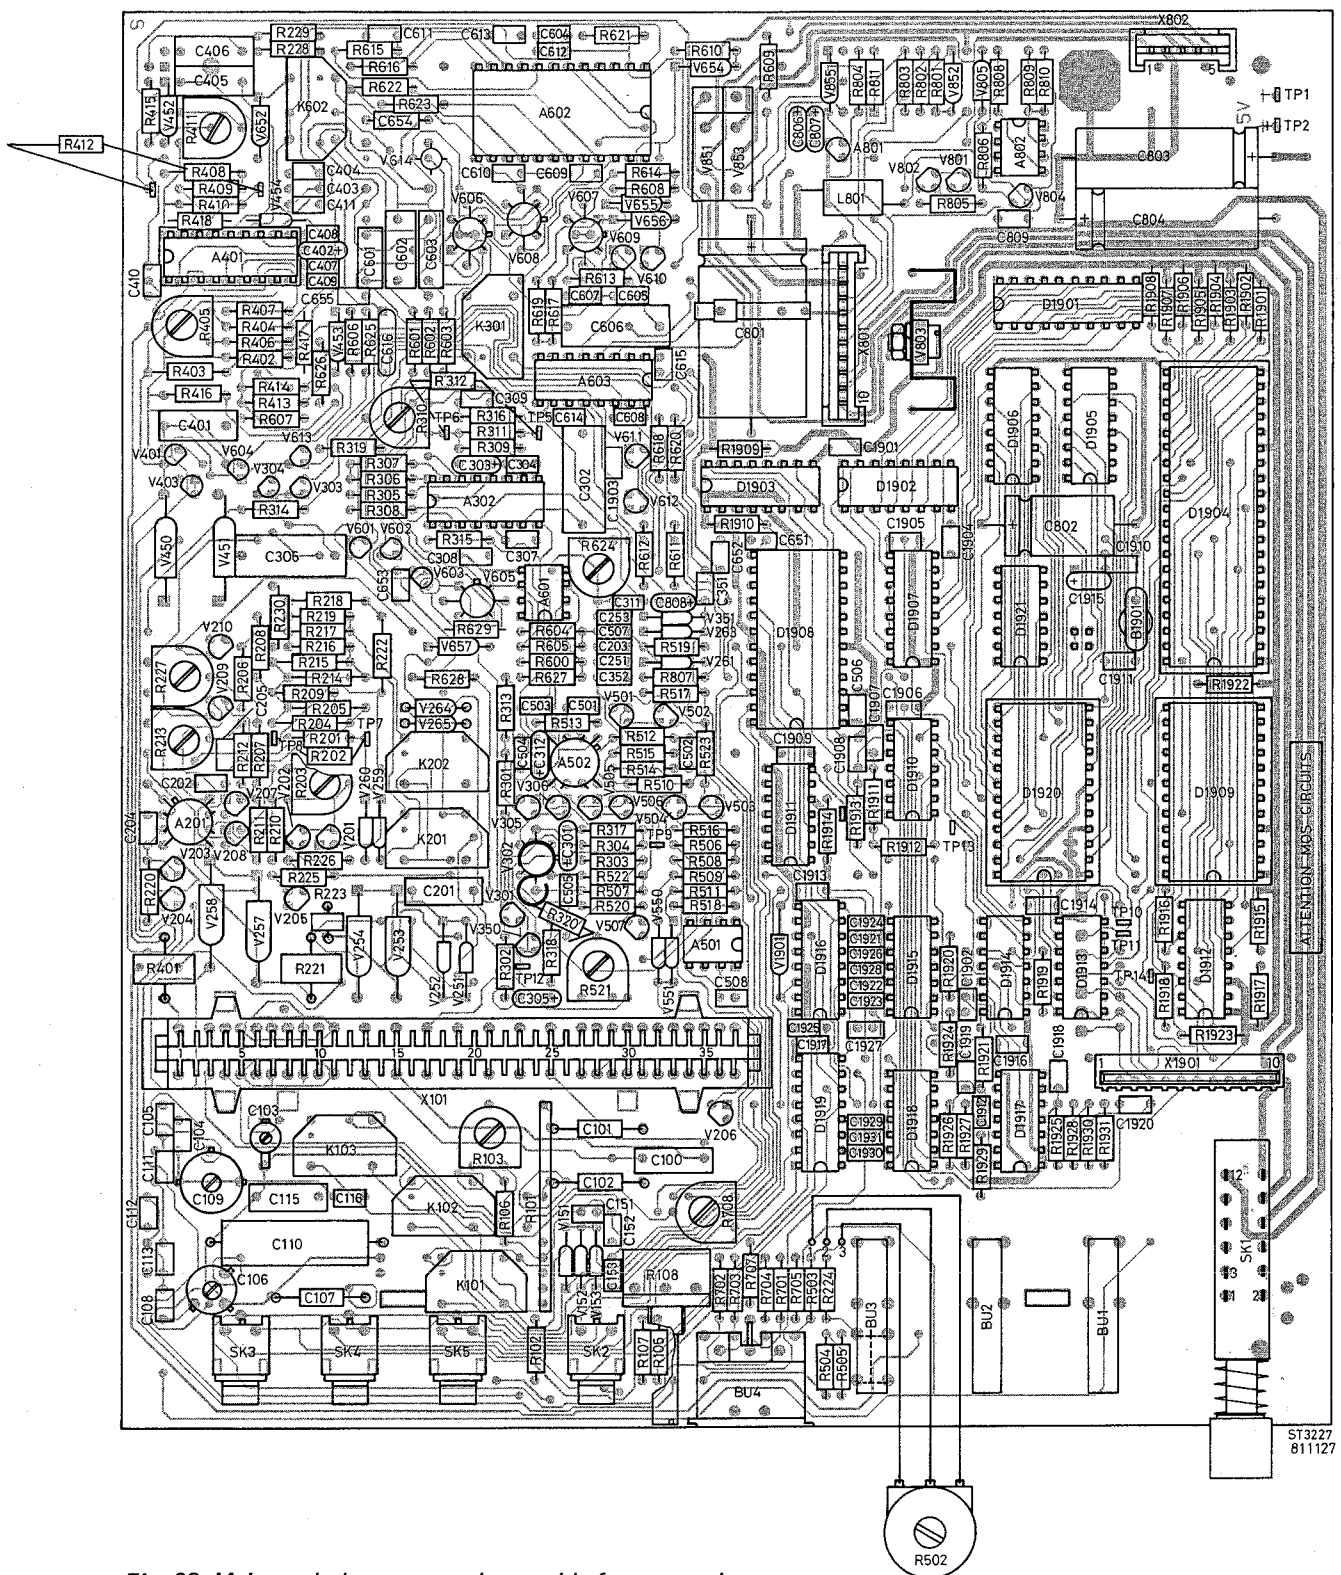


Fig. 68. Main p.c.b. lay-out, conductor side former version



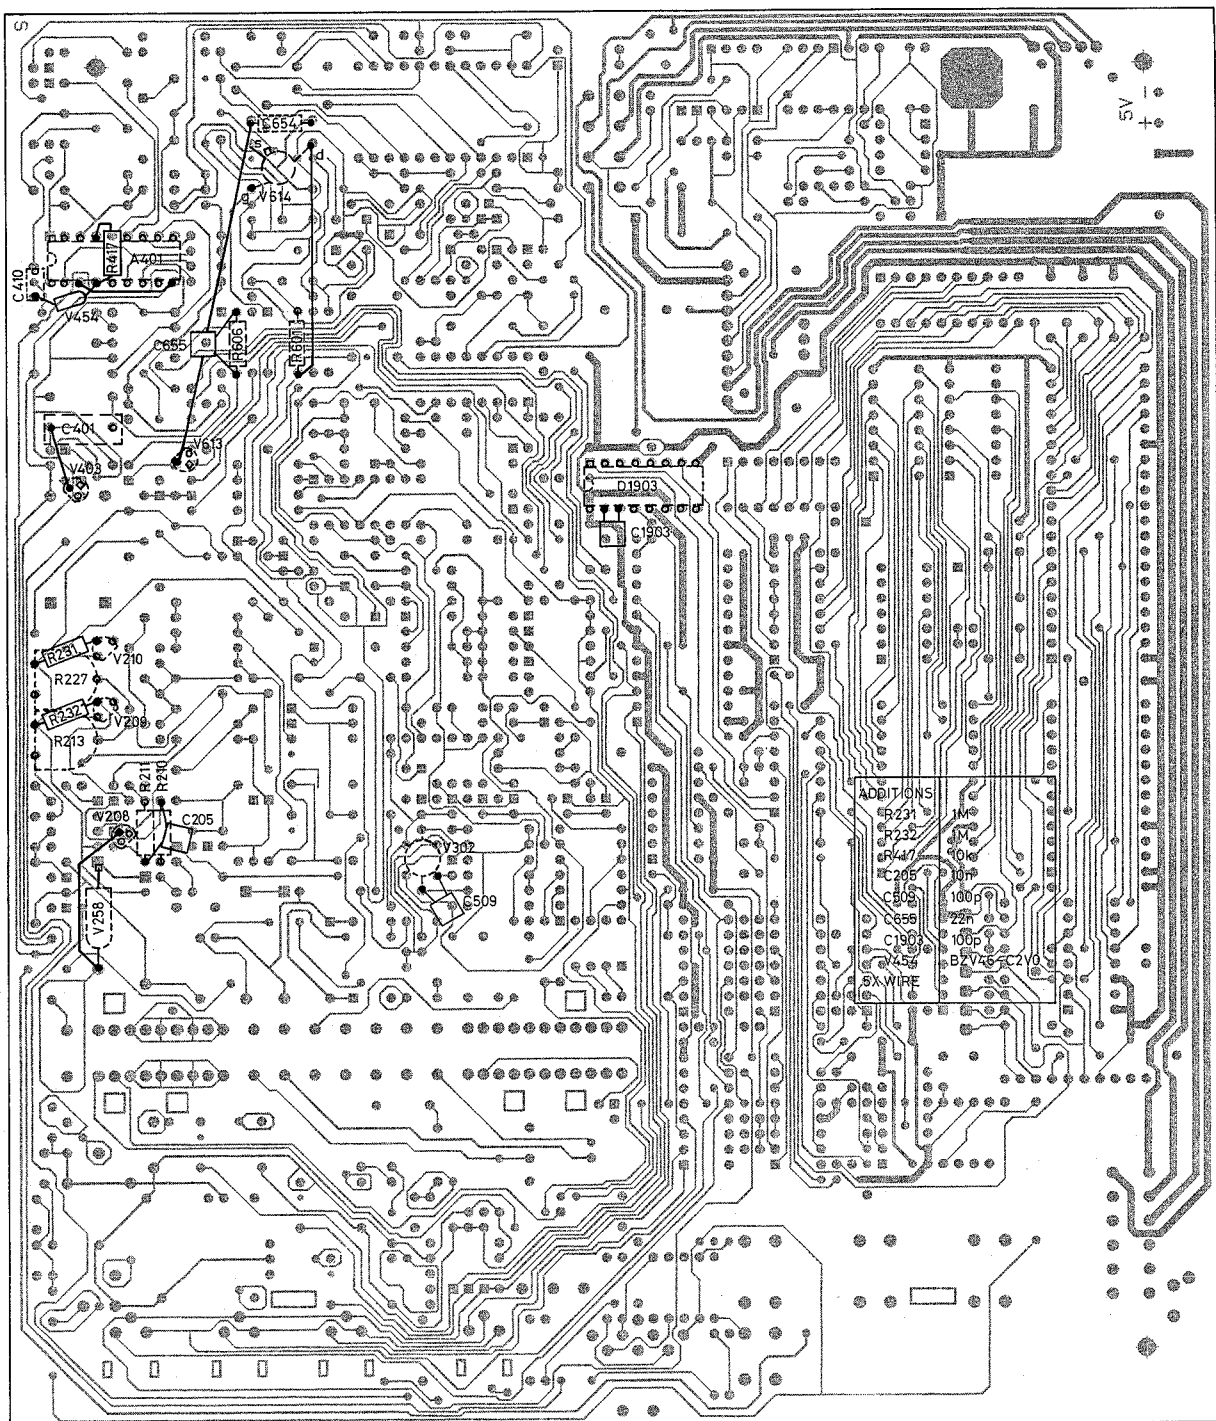


Fig. 69. Additional components on conductor side of main p.c.b.

## 7.2. MODIFICATION TO COMPONENTS

DM 01 635 upto DM 01 1145

|      |           |                  |
|------|-----------|------------------|
| R600 | 56k2      | (5322 116 54676) |
| R624 | 10k potm. | (4822 100 10035) |
| R629 | —         | —                |
| R626 | 68k1      | (5322 116 54683) |
| R411 | 4k7 potm. | (4822 100 10036) |
| R418 | —         | —                |

|      |      |                  |
|------|------|------------------|
| R304 | 5k9  | (5322 116 50583) |
| R317 | 1k27 | (5322 116 50555) |
| R507 | 5k9  | (5322 116 50583) |
| R522 | 1k27 | (5322 116 50555) |

|      |   |
|------|---|
| R707 | 887 $\Omega$ or 619 $\Omega$ (887 = 5322 116 54544) |
| R622 | 1k21 or 1k1 (1k21 = 5322 116 54554)                 |
| R623 | 12k1 or 11k0 (12k1 = 5322 116 50572)                |
| R231 | 1M or no resistor placed (5322 116 55535)           |
| R232 | 1M or no resistor placed (5322 116 55535)           |

|      |       |                  |
|------|-------|------------------|
| V251 | BYX10 | (4822 130 30195) |
| V252 | BYX10 | (4822 130 30195) |
| V657 | BAW62 | (4822 130 30613) |

From DM 01 11145 onwards

|                    |                  |
|--------------------|------------------|
| 10k                | (5322 116 54619) |
| 220 $\Omega$ potm. | (4822 100 10019) |
| 110 $\Omega$       | (5322 116 54474) |
| 10k                | (5322 116 54619) |
| 47k potm.          | (4822 100 10079) |
| 215k               | (5322 116 54728) |

|              |                  |
|--------------|------------------|
| 10k          | (5322 116 54619) |
| 590 $\Omega$ | (5322 116 50561) |
| 10k          | (5322 116 54619) |
| 590 $\Omega$ | (5322 116 50561) |

|              |                  |
|--------------|------------------|
| 619 $\Omega$ | (5322 116 54529) |
| 1k1          | (5322 116 54554) |
| 11k0         | (5322 116 54619) |
| 1M           | (5322 116 55535) |
| 1M           | (5322 116 55535) |

|            |                  |
|------------|------------------|
| BY527      | (4822 130 31509) |
| BY527      | (4822 130 31509) |
| BZV46 C2V0 | (4822 130 31248) |

## 7.3. MODIFICATIONS TO THE ADJUSTING PROCEDURE (refer to chapter 3.1).



 

 
 
 

 
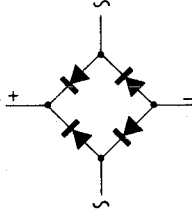

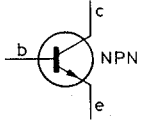
 
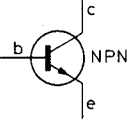

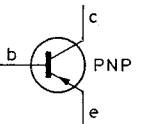
 
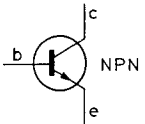
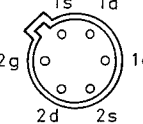
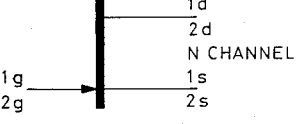
 
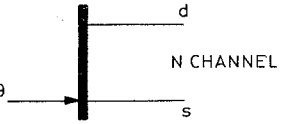
Adjustment 1: Active filter.

If adjustment is not possible because the potentiometer R624 is turned fully anti-clockwise then solder a resistor of 1M $\Omega$  (MR 25,1% E48 series) in parallel across R604 and repeat adjustment 1.

If the potentiometer R624 is turned fully clockwise, then solder a resistor of 1M $\Omega$  (MR25,1% E48 series) in parallel across R605 and repeat adjustment 1.


## 8. COMPONENT DATA

### 8.1. SEMI CONDUCTORS

|  |  |
|--|--|
| BAW62<br>    |  |
| BYX10<br>    | OA 95<br>      |
| BZX70-C7V5<br>C12<br>C10<br>BZX79-B13<br>C7V5<br>C1V5<br>C9V1<br>B5V1<br>BZV46-C1V5<br>C2V0<br>  |  |
| BY164<br>   |  |
| BC547B<br>BC588<br>    | BD675<br>  |
| BC558<br>BF324<br>   | BSX20<br>  |
| ON 528<br>   |  |
| BF 256B<br>BF 256A<br>   |  |


## ABSOLUTE MAXIMUM RATINGS 78L05ACS

| PARAMETER                                 | RATING             | UNIT |
|---|--------------------|------|
| Input voltage                             | 30                 | V    |
| Internal power dissipation                | Internally limited |      |
| Storage temperature range                 |                    |      |
| Metal can (TO-39 type)                    | -65 to +150        | °C   |
| Moulded TO-92                             | -55 to +150        | °C   |
| Operating junction temperature range      | 0 to +150          | °C   |
| Lead temperatures                         |                    |      |
| Metal can (soldering, 60s time limit)     | 300                | °C   |
| Moulded TO-92 (soldering, 10s time limit) | 260                | °C   |

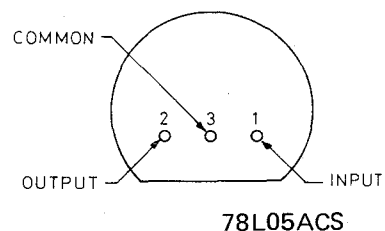


## 8.2. LOCOS CIRCUITS (HEF)


## HEF4011B QUADRUPLE 2-INPUT NAND GATE

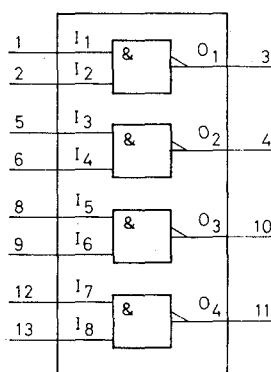

Functional diagram

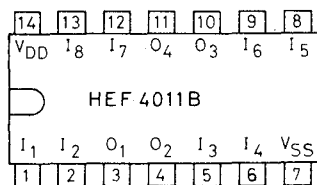


Pinning diagram

 


Logic diagram (one gate)


## HEF4023B TRIPLE 3-INPUT NAND GATE

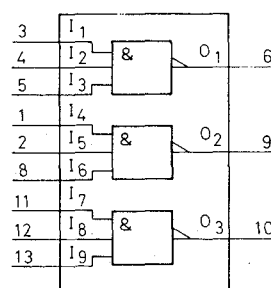

Functional diagram

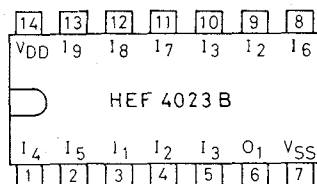


Pinning diagram

 

Logic diagram (one gate)

## HEF4027B DUAL JK FLIP-FLOP

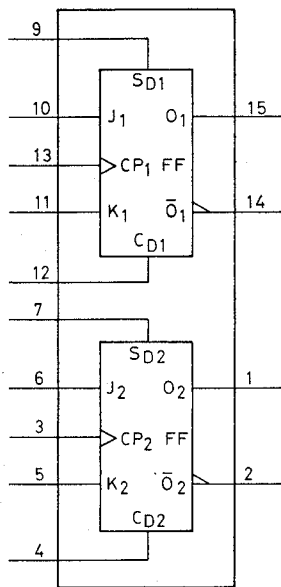

Functional diagram

## FUNCTION TABLES


| inputs |       |    |   |   | outputs |           |
|--------|-------|----|---|---|---------|-----------|
| $S_D$  | $C_D$ | CP | J | K | O       | $\bar{O}$ |
| H      | L     | X  | X | X | H       | L         |
| L      | H     | X  | X | X | L       | H         |
| H      | H     | X  | X | X | H       | H         |

| inputs |       |            |   |   | outputs     |                 |
|--------|-------|------------|---|---|-------------|-----------------|
| $S_D$  | $C_D$ | CP         | J | K | $O_n + 1$   | $\bar{O}_n + 1$ |
| L      | L     | $\uparrow$ | L | L | no change   |                 |
| L      | L     | $\uparrow$ | H | L | H           | L               |
| L      | L     | $\uparrow$ | L | H | L           | H               |
| L      | L     | $\uparrow$ | H | H | $\bar{O}_n$ | $O_n$           |

H= HIGH state (the more positive voltage)

L= LOW state (the less positive voltage)

X= state is immaterial

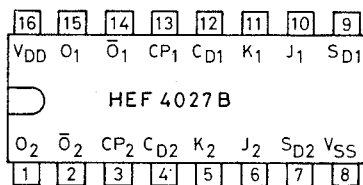 $\uparrow$  = positive-going transition $O_n + 1$  = state after clock positive transition

Pinning diagram


## PINNING

J, K synchronous inputs


CP clock input (L to H edge-triggered)

 $S_D$  asynchronous set-direct input (active HIGH) $C_D$  asynchronous clear-direct input (active HIGH) $O$  true output $\bar{O}$  complement output

HEF4051B 8-CHANNEL ANALOGUE MULTIPLEXER/DEMULTIPLEXER

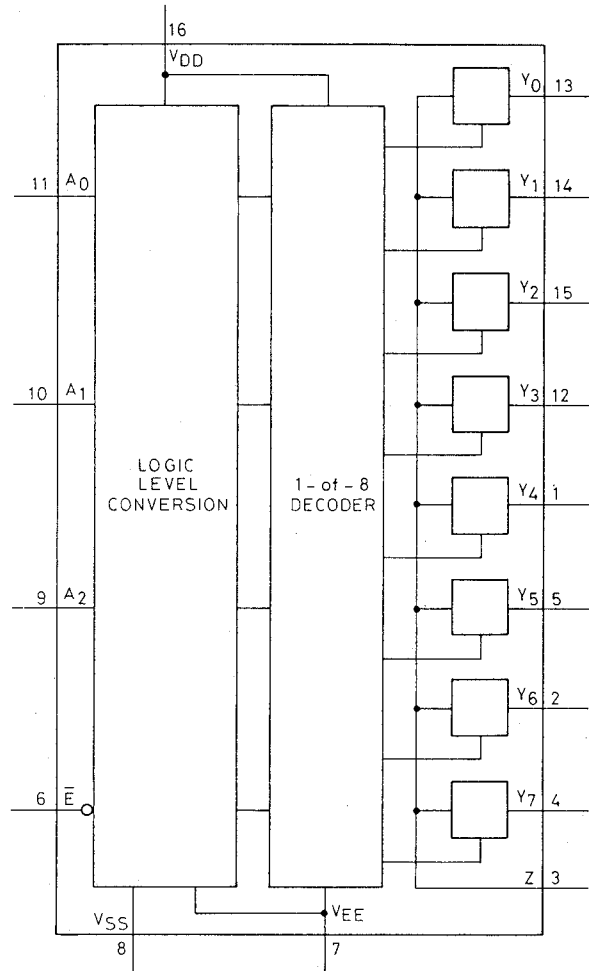


Functional diagram

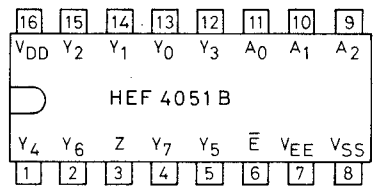

Pinning diagram

PINNING

- $Y_0$  to  $Y_7$  independent inputs/outputs
- $A_0$  to  $A_2$  address inputs
- $\bar{E}$  enable input (active LOW)
- $Z$  common input/output

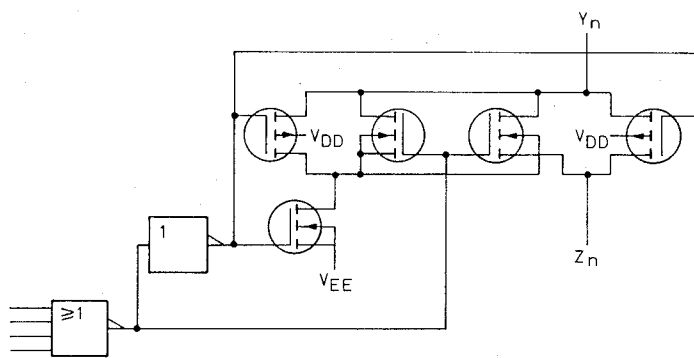


Schematic diagram (one switch)

FUNCTION TABLE


| inputs    |       |       |       | channel<br>ON |
|-----------|-------|-------|-------|---------------|
| $\bar{E}$ | $A_2$ | $A_1$ | $A_0$ |               |
| L         | L     | L     | L     | $Y_0-Z$       |
| L         | L     | L     | H     | $Y_1-Z$       |
| L         | L     | H     | L     | $Y_2-Z$       |
| L         | L     | H     | H     | $Y_3-Z$       |
| L         | H     | L     | L     | $Y_4-Z$       |
| L         | H     | L     | H     | $Y_5-Z$       |
| L         | H     | H     | L     | $Y_6-Z$       |
| L         | H     | H     | H     | $Y_7-Z$       |
| H         | X     | X     | X     | none          |

- H = HIGH state (the more positive voltage)
- L = LOW state (the less positive voltage)
- X = state in immaterial

### HEF4070B QUADRUPLE EXCLUSIVE-OR GATE

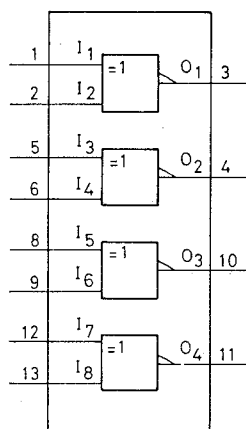

Functional diagram

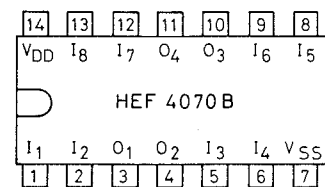


Pinning diagram

TRUTH TABLE

| $I_1$ | $I_2$ | $O_1$ |
|-------|-------|-------|
| L     | L     | L     |
| H     | L     | H     |
| L     | H     | H     |
| H     | H     | L     |


H = HIGH state (the more positive voltage)

L = LOW state (the less positive voltage)

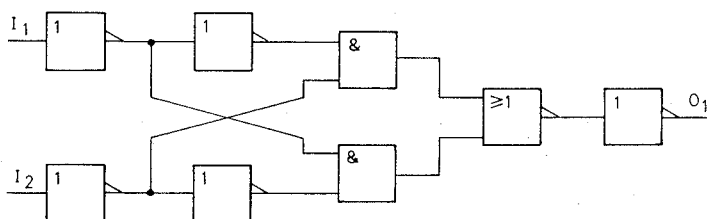


Logic diagram (one gate)


### HEF40106B HEX SCHMITT TRIGGER

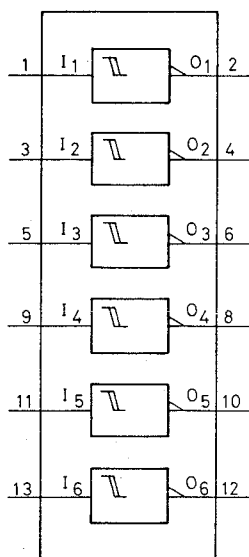

Functional diagram

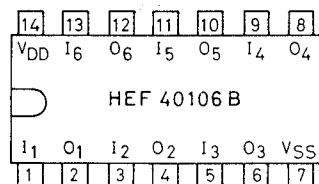


Pinning diagram

 


Logic diagram (one inverter)

HEF40174B HEX D-TYPE FLIP-FLOP

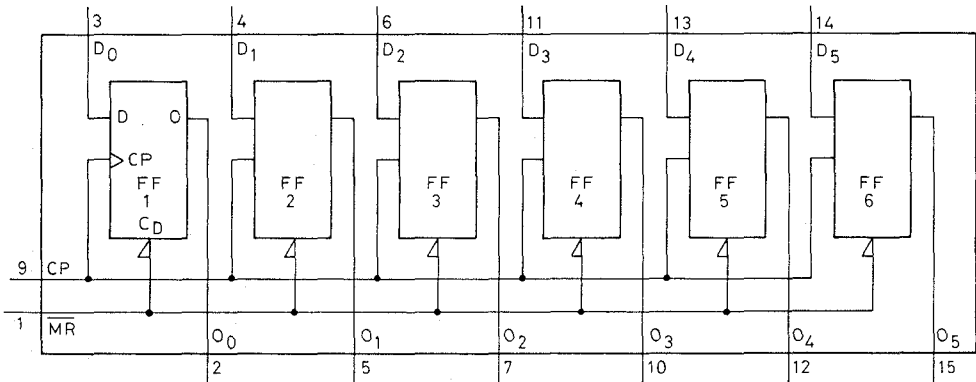

Functional diagram

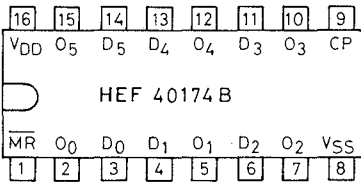

Pinning diagram

PINNING

- D<sub>0</sub> to D<sub>5</sub> data inputs
- CP clock input (LOW to HIGH edge triggered)
- MR master reset input (active LOW)
- O<sub>0</sub> to O<sub>5</sub> buffered outputs

FUNCTION TABLE


| inputs |   |    | output    |
|--------|---|----|-----------|
| CP     | D | MR | O         |
| ↑      | H | H  | H         |
| ↑      | L | H  | L         |
| ↓      | X | H  | no change |
| X      | X | L  | L         |

- H = HIGH state (the more positive voltage)
- L = LOW state (the less positive voltage)
- X = state is immaterial
- ↑ = positive-going transition
- ↓ = negative going transition



## 8.3. OQ CIRCUITS



## OQ0060 SWITCHING PART OF THE ADC

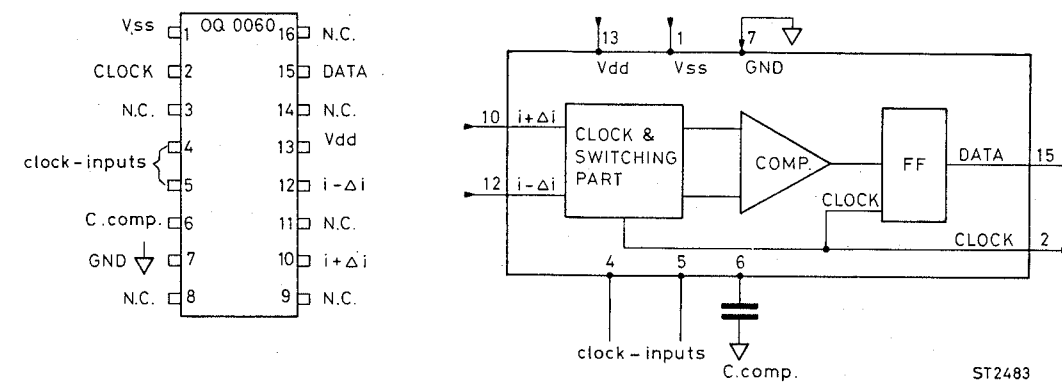

## Specification of inputs and outputs

| Pin nr. | Name           | Description   |
|---------|----------------|---|
| 1       | Vss            | Supply Negative supply voltage  |
| 2       | CLOCK          | Clock output  |
| 3       | nc             | no connection   |
| 4       | clock          | clock input   |
| 5       | clock          | clock input   |
| 6       | C comp         | Capacitor for compensation Capacitor compensates internal active parts            |
| 7       | GND            | Ground Supply zero $\nabla$   |
| 8       | n.c.           | no connection   |
| 9       | n.c.           | no connection   |
| 10      | $I + \Delta I$ | Current input Input from V-I convertor  |
| 11      | n.c.           | no connection   |
| 12      | $I - \Delta I$ | Current input Input from V-I convertor  |
| 13      | Vdd            | Supply Positive supply voltage  |
| 14      | n.c.           | no connection   |
| 15      | DATA           | Data output Outgoing data with a duty-cycle depending on input voltage of the ADC |
| 16      | n.c.           | no connection   |



OQ0061 AC TO DC CONVERTOR

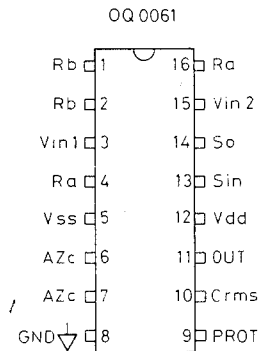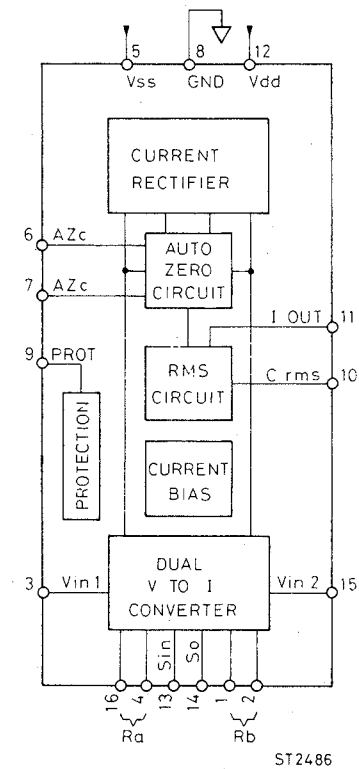

Specifications of inputs and outputs

| Pin no.  | Name  | Description                      |   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
|--|-------|----------------------------------|---|-------------------------|-------------|----|----|-------|-------------|---|---|---|--|-------|------|---|---|--|---|-------------------------|----|
| 1  | Rb    | Range b, conversion resistor     | The conversion resistor b is connected between inputs 1 and 2. The resistor determines the basic current of the V-I convertor. Rb is selected dependent on the code of Sin and So.  |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 2  | Rb    |                                  |   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 3  | Vin 1 | Voltage input 1                  | Input of the V to I convertor in the OQ0061.  |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 4  | Ra    | Range a, conversion resistor     | The conversion resistor a is connected between inputs 4 and 16. The resistor determines the basic current of the V to I convertor. Ra is selected dependent on the code of Sin and So.  |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 5  | Vss   | SUPPLY                           |   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 6  | AZc   | Auto Zero                        | The auto zero decoupling capacitor C is alternately charged and discharged. When no DC offset is present, the voltage across the capacitor is zero. A DC offset causing a voltage across C, is compensated so no influence is seen upon the output signal.                    |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 7  | AZc   | Decoupling capacitor             |   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 8  | GND   | GROUND                           | Supply zero ↓   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 9  | PROT  | PROTECTION                       | Protection input.   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 10   | Crms  | R.M.S. averaging: capacitor      |   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 11   | I out | Current output:                  | Output current of the R.M.S. convertor. The current flowing through a known resistor gives the R.M.S. voltage of the unknown input voltage.   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 12   | Vdd   | SUPPLY                           | Positive supply.  |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 13   | Sin   | Range selecting; input           | By means of the Sin and So a selection can be made Ra or Rb, which determine the input sensitivity of the AD/DC conv.   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 14   | So    | Range selecting: reference input |   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
|  |       |                                  | <table><tr><th>Sin</th><th>So</th><th>Ra</th><th>Rb</th><th>Range</th><th>Sensitivity</th></tr><tr><td>0</td><td>1</td><td>X</td><td></td><td>200mV</td><td>0,1V</td></tr><tr><td>1</td><td>1</td><td></td><td>X</td><td>2V, 20V, 200V and 2000V</td><td>1V</td></tr></table> | Sin                     | So          | Ra | Rb | Range | Sensitivity | 0 | 1 | X |  | 200mV | 0,1V | 1 | 1 |  | X | 2V, 20V, 200V and 2000V | 1V |
| Sin  | So    | Ra                               | Rb  | Range                   | Sensitivity |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 0  | 1     | X                                |   | 200mV                   | 0,1V        |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 1  | 1     |                                  | X   | 2V, 20V, 200V and 2000V | 1V          |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| NOTE: Above mentioned table is valid for PM2521. |       |                                  |   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 15   | Vin 2 | Voltage input 2;                 | Input of the V to I convertor in the OQ0061.  |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 16   | Ra    | Range a, conversion; resistor    | The conversion resistor a is connected between inputs 4 and 16. The resistor determines the basic current of the V to I convertor. Ra is selected dependent on the code of Sin and So.  |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |

OQ0063 PROGRAMMABLE CURRENT SOURCE

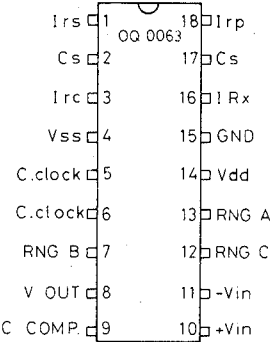
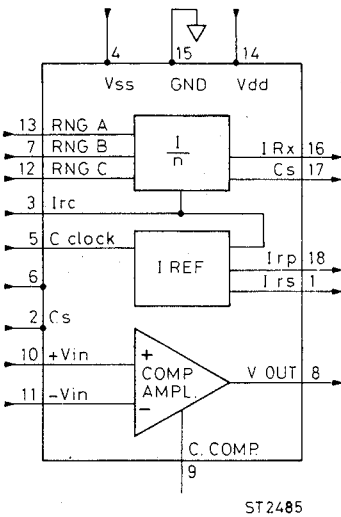


Specification of the inputs and outputs of the OQ0063

| Pin no. | Name    | Description   |
|---------|---------|---|
| 1       | Irs     | Ref. current adjustment<br>With Rs the output current can be adjusted.  |
| 2       | Cs      | Smoothing Capacitor<br>Smoothing capacitor for the switched currents.   |
| 3       | Irc     | I Ref. Common<br>Common connection of Rs and Rp.  |
| 4       | Vss     | Supply<br>Negative supply voltage.  |
| 5       | C clock | Capacitor for the clock-oscillator.   |
| 6       | C clock |   |
| 7       | RNG B   | Range B<br>Range information (see 12, 13).  |
| 8       | V out   | Output voltage<br>Output of the compensation amplifier.   |
| 9       | C comp  | C. Compensation<br>Compensation capacitor for the compensation amplifier.   |
| 10      | +Vin    | + input<br>- input<br><br>+ and - input of the compensation/protection amplifier.<br><b>Compensation:</b> With the amplfier the current consumption of the ADC is compensated during $\Omega$ measurements.<br><b>Protection:</b> With the amplifier also the leak current through the protection diodes during $\Omega$ measurements is compensated. |
| 11      | -Vin    |   |
| 12      | RNG C   | Range C<br>Range A<br><br>Together with signal RNG B the signals determine the digital range information from the $\mu$ P.  |
| 13      | RNG A   |   |
| 14      | Vdd     | Supply<br>Positive supply voltage.  |
| 15      | GND     | GROUND $\nabla$<br>Supply zero $\nabla$   |
| 16      | I out   | Output current.   |
| 17      | Cs      | Smoothing capacitor.  |
| 18      | Irp     | With Rp the temperature-coefficient of the reference current is determined.   |

| Range          | Measuring current | RNG A | RNG B | RNG C |
|----------------|-------------------|-------|-------|-------|
| 1 k $\Omega$   | 1mA               | 1     | 1     | 1     |
| 10 k $\Omega$  | 100 $\mu$ A       | 0     | 0     | 0     |
| 100 k $\Omega$ | 10 $\mu$ A        | 1     | 0     | 0     |
| 1M $\Omega$    | 1 $\mu$ A         | 0     | 1     | 0     |
| 10M $\Omega$   | 100 nA            | 1     | 1     | 0     |

OQ0064 V-I CONVERTOR (ADC)

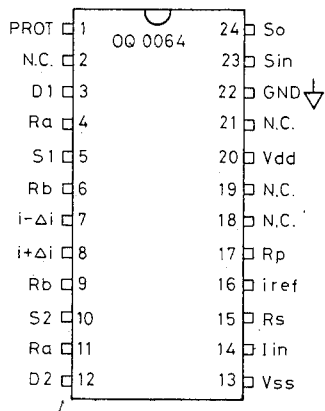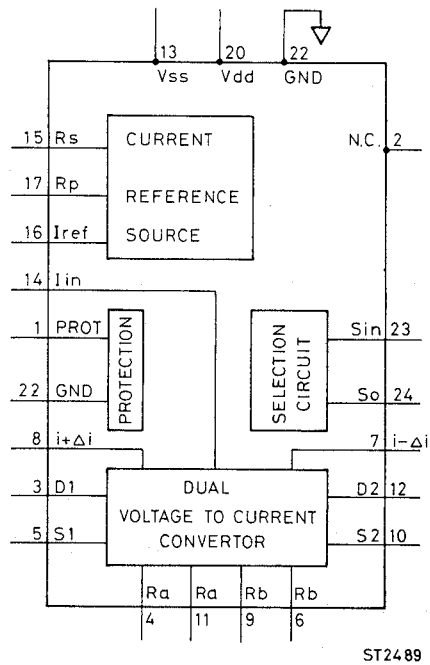


Specification of inputs and outputs

| Pin no. | Name  | Description   |
|---------|-------|---|
| 1       | PROT  | Protection input.   |
| 2       | n.c.  | no connection   |
| 3       | D1    | Drain input for device 1.                                   |
| 4       | Ra    | Range a conversion resistor (input sensitivity 0,1V).       |
| 5       | S1    | Source input for device 1.                                  |
| 6       | Rb    | Range b conversion resistor (input sensitivity 1V).         |
| 7       | I     | Current output.   |
| 8       | I     | Current output  |
| 9       | Rb    | Range b conversion resistor (input sensitivity 1V).         |
| 10      | S2    | Source input for device 2.                                  |
| 11      | Ra    | Range a conversion resistor (input sensitivity 0,1V).       |
| 12      | D2    | Drain input for device 2.                                   |
| 13      | Vss   | Negative supply voltage.                                    |
| 14      | I in  | Current input.  |
| 15      | Rs    | Current setting resistor. Adjustment reference current.     |
| 16      | I ref | Current reference output.                                   |
| 17      | Rp    | Tc setting resistor. Rp determines temperature coefficient. |
| 18      | n.c.  | no connection   |
| 19      | n.c.  | no connection   |
| 20      | Vdd   | Positive supply voltage.                                    |
| 21      | n.c.  | no connection.  |
| 22      | GND   | Supply Zero   |
| 23      | Sin   | Range selecting input (a or b).                             |
| 24      | So    | Range selecting reference input.                            |

| Sin | So | Ra | Rb | Sensitivity ADC |
|-----|----|----|----|-----------------|
| 0   | 1  | X  |    | 0,1V            |
| 1   | 1  |    | X  | 1V              |

## 8.3. OQ CIRCUITS



## OQ0060 SWITCHING PART OF THE ADC

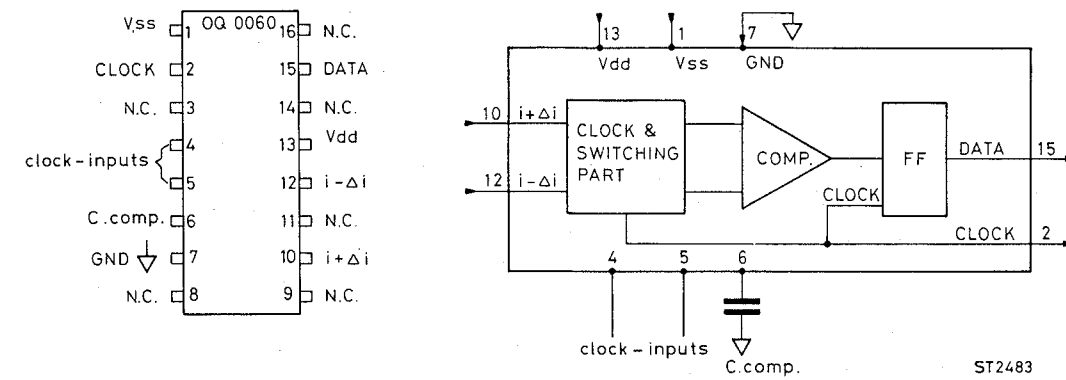

## Specification of inputs and outputs

| Pin nr. | Name           | Description  |
|---------|----------------|--|
| 1       | Vss            | Supply<br>Negative supply voltage  |
| 2       | CLOCK          | Clock output   |
| 3       | nc             | no connection  |
| 4       | clock          | clock input  |
| 5       | clock          | clock input  |
| 6       | C comp         | Capacitor for compensation<br>Capacitor compensates internal active parts            |
| 7       | GND            | Ground<br>Supply zero $\nabla$   |
| 8       | n.c.           | no connection  |
| 9       | n.c.           | no connection  |
| 10      | $I + \Delta I$ | Current input<br>Input from V-I convertor  |
| 11      | n.c.           | no connection  |
| 12      | $I - \Delta I$ | Current input<br>Input from V-I convertor  |
| 13      | Vdd            | Supply<br>Positive supply voltage  |
| 14      | n.c.           | no connection  |
| 15      | DATA           | Data output<br>Outgoing data with a duty-cycle depending on input voltage of the ADC |
| 16      | n.c.           | no connection  |



OQ0061 AC TO DC CONVERTOR

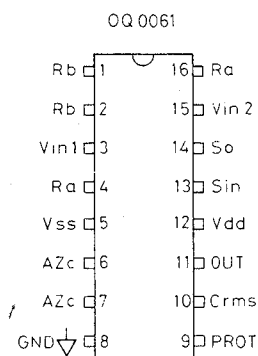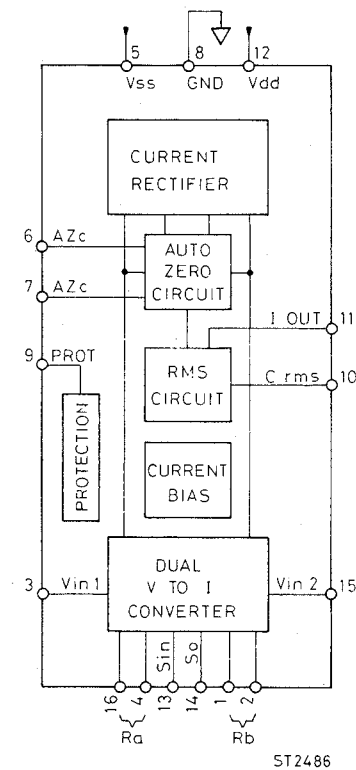

Specifications of inputs and outputs

| Pin no.  | Name  | Description                      |   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
|--|-------|----------------------------------|---|-------------------------|-------------|----|----|-------|-------------|---|---|---|--|-------|------|---|---|--|---|-------------------------|----|
| 1  | Rb    | Range b, conversion resistor     | The conversion resistor b is connected between inputs 1 and 2. The resistor determines the basic current of the V-I convertor. Rb is selected dependent on the code of Sin and So.  |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 2  | Rb    |                                  |   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 3  | Vin 1 | Voltage input 1                  | Input of the V to I convertor in the OQ0061.  |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 4  | Ra    | Range a, conversion resistor     | The conversion resistor a is connected between inputs 4 and 16. The resistor determines the basic current of the V to I convertor. Ra is selected dependent on the code of Sin and So.  |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 5  | Vss   | SUPPLY                           | Negative supply voltage.  |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 6  | AZc   | Auto Zero                        | The auto zero decoupling capacitor C is alternately charged and discharged. When no DC offset is present, the voltage across the capacitor is zero. A DC offset causing a voltage across C, is compensated so no influence is seen upon the output signal.                    |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 7  | AZc   | Decoupling capacitor             |   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 8  | GND   | GROUND                           | Supply zero ↓   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 9  | PROT  | PROTECTION                       | Protection input.   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 10   | Crms  | R.M.S. averaging: capacitor      |   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 11   | I out | Current output:                  | Output current of the R.M.S. convertor. The current flowing through a known resistor gives the R.M.S. voltage of the unknown input voltage.   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 12   | Vdd   | SUPPLY                           | Positive supply.  |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 13   | Sin   | Range selecting; input           | By means of the Sin and So a selection can be made Ra or Rb. which determine the input sensitivity of the AD/DC conv.   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 14   | So    | Range selecting: reference input |   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
|  |       |                                  | <table><tr><td>Sin</td><td>So</td><td>Ra</td><td>Rb</td><td>Range</td><td>Sensitivity</td></tr><tr><td>0</td><td>1</td><td>X</td><td></td><td>200mV</td><td>0,1V</td></tr><tr><td>1</td><td>1</td><td></td><td>X</td><td>2V, 20V, 200V and 2000V</td><td>1V</td></tr></table> | Sin                     | So          | Ra | Rb | Range | Sensitivity | 0 | 1 | X |  | 200mV | 0,1V | 1 | 1 |  | X | 2V, 20V, 200V and 2000V | 1V |
| Sin  | So    | Ra                               | Rb  | Range                   | Sensitivity |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 0  | 1     | X                                |   | 200mV                   | 0,1V        |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 1  | 1     |                                  | X   | 2V, 20V, 200V and 2000V | 1V          |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| NOTE: Above mentioned table is valid for PM2521. |       |                                  |   |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 15   | Vin 2 | Voltage input 2;                 | Input of the V to I convertor in the OQ0061.  |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |
| 16   | Ra    | Range a, conversion; resistor    | The conversion resistor a is connected between inputs 4 and 16. The resistor determines the basic current of the V to I convertor. Ra is selected dependent on the code of Sin and So.  |                         |             |    |    |       |             |   |   |   |  |       |      |   |   |  |   |                         |    |

OQ0063 PROGRAMMABLE CURRENT SOURCE

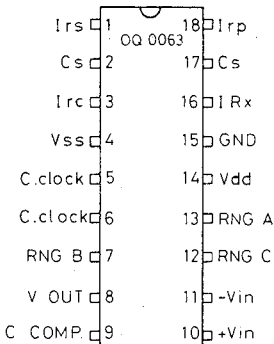
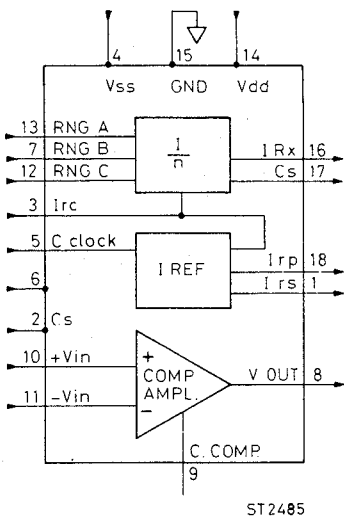


Specification of the inputs and outputs of the OQ0063

| Pin no. | Name    | Description  |
|---------|---------|--|
| 1       | Irs     | Ref. current adjustment<br>With Rs the output current can be adjusted.   |
| 2       | Cs      | Smoothing Capacitor<br>Smoothing capacitor for the switched currents.  |
| 3       | Irc     | I Ref. Common<br>Common connection of Rs and Rp.   |
| 4       | Vss     | Supply<br>Negative supply voltage.   |
| 5       | C clock | Capacitor for the clock-oscillator.  |
| 6       | C clock |  |
| 7       | RNG B   | Range B<br>Range information (see 12, 13).   |
| 8       | V out   | Output voltage<br>Output of the compensation amplifier.  |
| 9       | C comp  | C. Compensation<br>Compensation capacitor for the compensation amplifier.  |
| 10      | +Vin    | + input<br>+ and – input of the compensation/protection amplifier.   |
| 11      | –Vin    | – input<br><b>Compensation:</b> With the amplifier the current consumption of the ADC is compensated during $\Omega$ measurements.<br><b>Protection:</b> With the amplifier also the leak current through the protection diodes during $\Omega$ measurements is compensated. |
| 12      | RNG C   | Range C  |
| 13      | RNG A   | Range A<br>Together with signal RNG B the signals determine the digital range information from the $\mu$ P.  |
| 14      | Vdd     | Supply<br>Positive supply voltage.   |
| 15      | GND     | GROUND $\nabla$<br>Supply zero $\nabla$  |
| 16      | I out   | Output current.  |
| 17      | Cs      | Smoothing capacitor.   |
| 18      | Irp     | With Rp the temperature-coefficient of the reference current is determined.  |

| Range          | Measuring current | RNG A | RNG B | RNG C |
|----------------|-------------------|-------|-------|-------|
| 1 k $\Omega$   | 1mA               | 1     | 1     | 1     |
| 10 k $\Omega$  | 100 $\mu$ A       | 0     | 0     | 0     |
| 100 k $\Omega$ | 10 $\mu$ A        | 1     | 0     | 0     |
| 1M $\Omega$    | 1 $\mu$ A         | 0     | 1     | 0     |
| 10M $\Omega$   | 100 nA            | 1     | 1     | 0     |

OQ0064 V-I CONVERTOR (ADC)

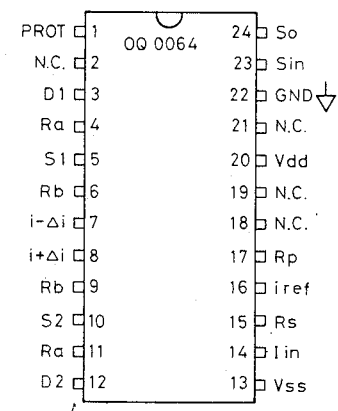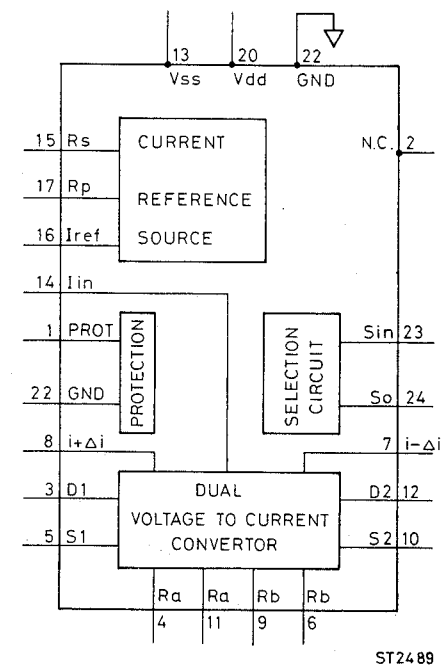

Specification of inputs and outputs


| Pin no. | Name  | Description   |
|---------|-------|---|
| 1       | PROT  | Protection input.   |
| 2       | n.c.  | no connection   |
| 3       | D1    | Drain input for device 1.                                   |
| 4       | Ra    | Range a conversion resistor (input sensitivity 0,1V).       |
| 5       | S1    | Source input for device 1.                                  |
| 6       | Rb    | Range b conversion resistor (input sensitivity 1V).         |
| 7       | I     | Current output.   |
| 8       | I     | Current output  |
| 9       | Rb    | Range b conversion resistor (input sensitivity 1V).         |
| 10      | S2    | Source input for device 2.                                  |
| 11      | Ra    | Range a conversion resistor (input sensitivity 0,1V).       |
| 12      | D2    | Drain input for device 2.                                   |
| 13      | Vss   | Negative supply voltage.                                    |
| 14      | I in  | Current input.  |
| 15      | Rs    | Current setting resistor. Adjustment reference current.     |
| 16      | I ref | Current reference output.                                   |
| 17      | Rp    | Tc setting resistor. Rp determines temperature coefficient. |
| 18      | n.c.  | no connection   |
| 19      | n.c.  | no connection   |
| 20      | Vdd   | Positive supply voltage.                                    |
| 21      | n.c.  | no connection.  |
| 22      | GND   | Supply Zero ↓   |
| 23      | Sin   | Range selecting input (a or b).                             |
| 24      | So    | Range selecting reference input.                            |

| Sin | So | Ra | Rb | Sensitivity ADC |
|-----|----|----|----|-----------------|
| 0   | 1  | X  |    | 0,1V            |
| 1   | 1  |    | X  | 1V              |



## 8.4. DISPLAY INTERFACE CIRCUITS

### SAA1060 LED DISPLAY/INTERFACE CIRCUIT

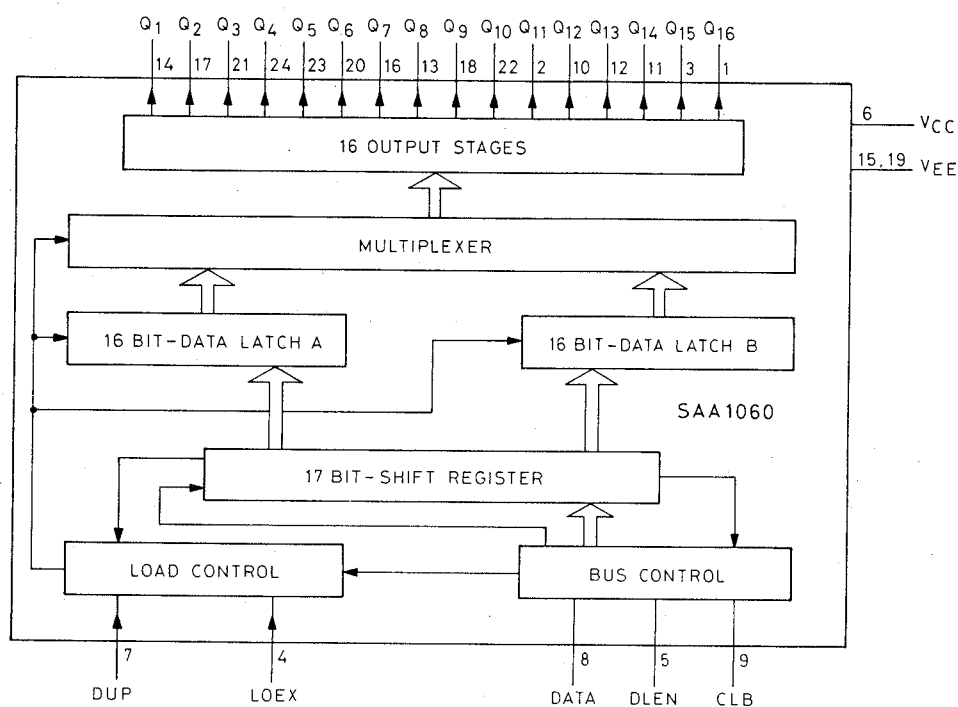

Block diagram

### GENERAL DESCRIPTION

Data transmission is initiated by means of a burst of clock pulses (CLB), a data line enable signal (DLEN) and the data signal (DATA). The bus control circuit distinguishes between interference and valid data by checking word length (17 bits) and the leading zero. This allows different bus information to be supplied on the same bus lines for other circuits (e.g. SAA1056 with 16 bits).


The last bit (bit 17) of the data word contains the information which of the two internal latches will be loaded. The input LOEX determines if the latched data of the selected latches is presented directly to the outputs, or synchronized with the data select signal DUP.

The output stages are n-p-n transistors with open collectors. The current capability is designed for the requirements of duplex operation. Two of the outputs ( $Q_8$  and  $Q_{16}$ ) are arranged for double current, so that  $2 \times 2$  segments can be connected in parallel.

## OPERATION DESCRIPTION

### Data inputs (DLEN, DATA)

The SAA1060 processes serially the 18-bit data words synchronized with the clock burst (CLB) and applied to the data input DATA. A command will be accepted only when the data line enable input (DLEN) is HIGH.

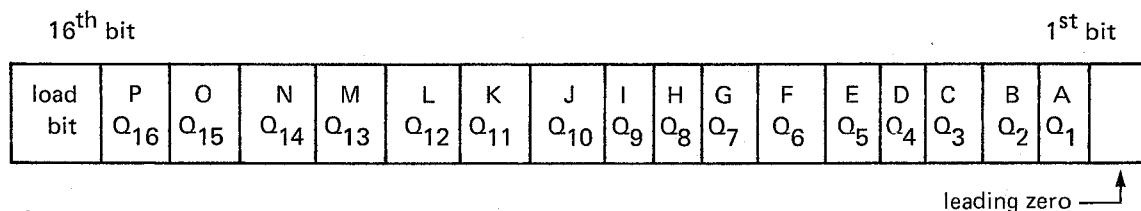


*Organization of a data word*

Condition for 17th bit:

0 = load data latch B

1 = load data latch A

The loading of the accepted information in one of the data latches is done by the 19th clock pulse, when DLEN is LOW.

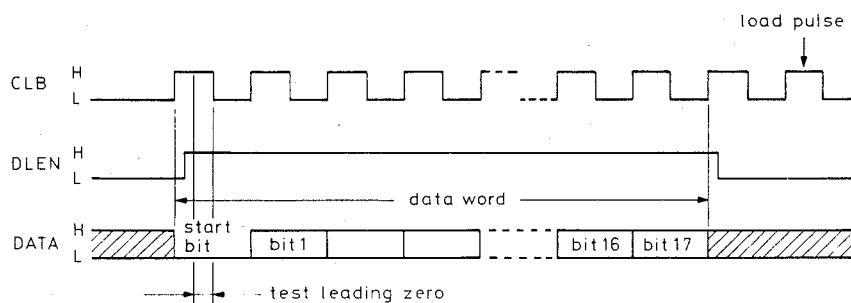

*Pulse diagram of the 16-bit data transmission*

Each data word must start with a leading zero. The SAA1060 checks the data word for the correct length (18 bits) and also for the leading zero.

The actual data is switched directly to the appropriate outputs. For switching on a segment, a "0" (LOW) is necessary at the appropriate data bit.

### Data selection input (DUP)

The logic states at input DUP determine which of the two latch contents can be found on the output.

0 = latch A contents

1 = latch B contents


### Load control input (LOEX)

Input LOEX determines the operation mode in which the device is able to work.

0 = duplex mode, i.e. output synchronized with the duplex signal

1 = d.c. mode, i.e. output direct from the DUP selected data latch.

When operating in duplex mode at 50Hz, the time between two data words to be transmitted must be > 21ms.

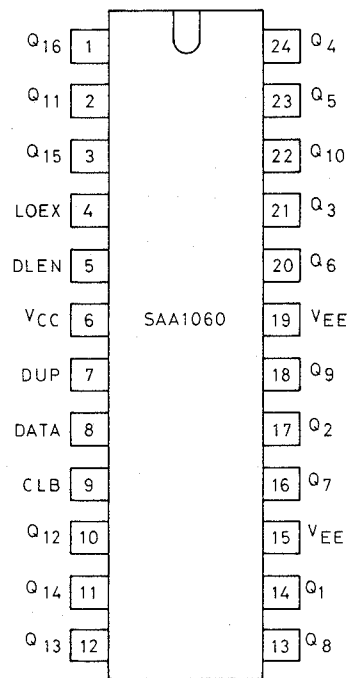

*Pinning diagram*

**RATINGS ( $V_{EE} = 0$ )**


Limiting values in accordance with the Absolute Maximum System (IEC134)

|                                     |           |               |
|-------------------------------------|-----------|---------------|
| Supply voltage range                | $V_{CC}$  | −0.3 to +7V   |
| Total power dissipation             | $P_{tot}$ | max. 900mW    |
| Operating ambient temperature range | $T_{amb}$ | −20 to +80°C  |
| Storage temperature range           | $T_{stg}$ | −25 to +125°C |


## SAA1062 LCD DISPLAY/INTERFACE CIRCUIT

### GENERAL DESCRIPTION

The SAA1062 is designed to drive a Liquid Crystal Display (LCD) of a digital tuning system. It contains a shift register with programmable length (18 or 21 bits), latches, both synchronized or static, exclusive-OR segment drivers (17 or 20 bits), an l.f. oscillator and a backplane driver for the LCD. The circuit is designed to be driven by a 3 bus structure from a microprocessor and can also be used as a programmable 17 or 20 bits serial-to-parallel decoder. It is also capable of storing 60 bits of information.

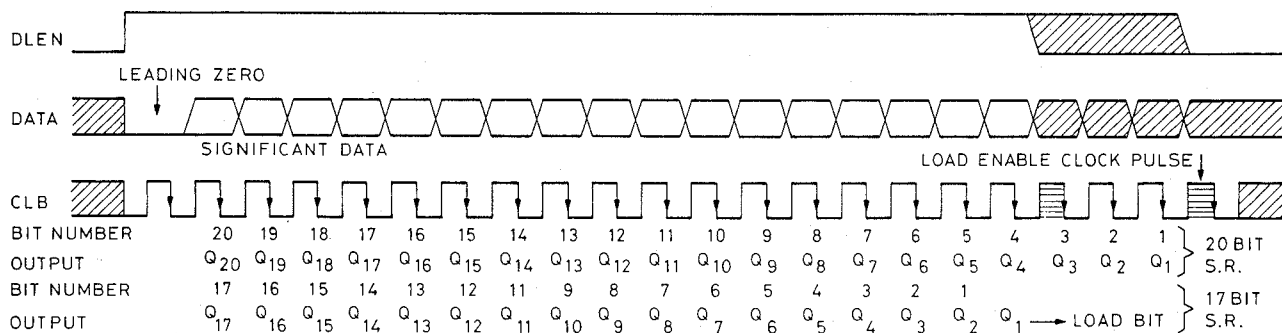


Organization of 18 and 21 bits words; DATA - LOW means segment 'on'

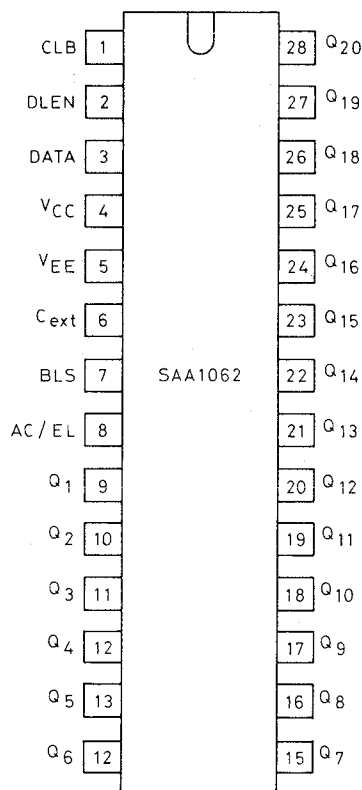

Pinning diagram


## 8.5. OPERATIONAL AMPLIFIERS

### DIFFERENTIAL VOLTAGE COMPARATOR $\mu A710$

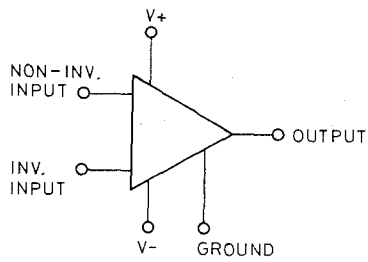


### PIN CONFIGURATION (TOP VIEW)


#### A PACKAGE

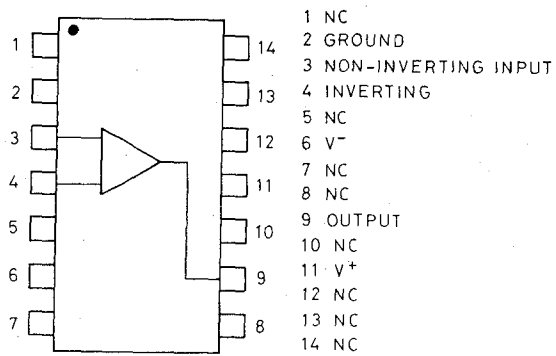

#### T PACKAGE

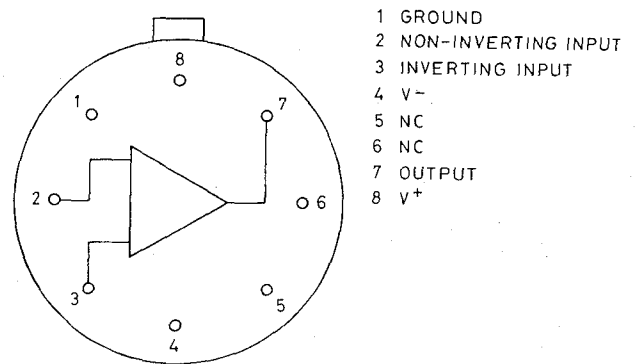


### PRECISION OPERATIONAL AMPLIFIER $\mu A714$

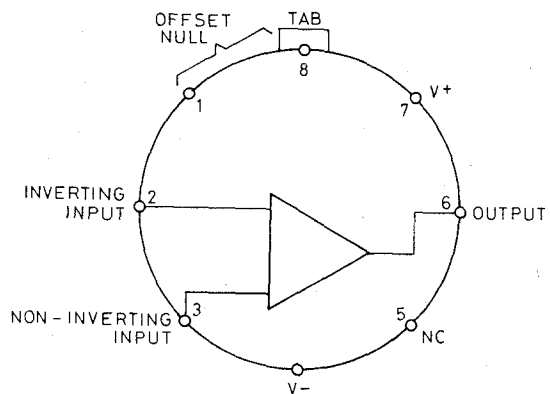


# GENERAL PURPOSE OPERATIONAL AMPLIFIER $\mu$ A741

## PIN CONFIGURATIONS (TOP VIEW)


### A PACKAGE

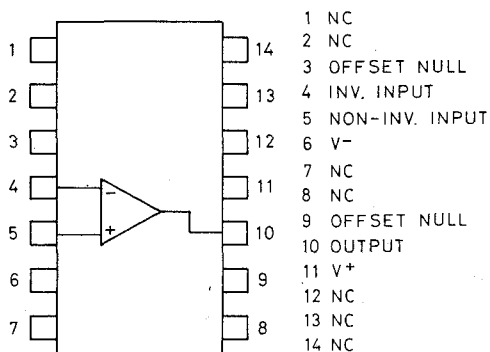

### T PACKAGE

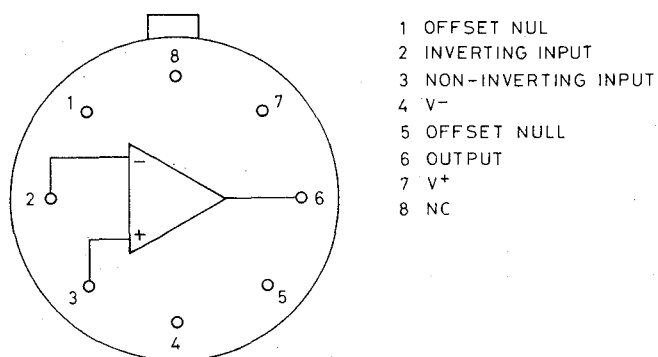

### V PACKAGE

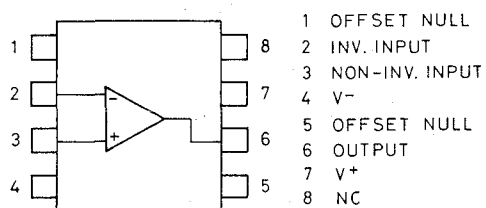

## 8.6. LOW POWER SCHOTTKY CIRCUITS (LS)


LOW POWER SCHOTTKY 54LS/74LS FAMILY CHARACTERISTICS  
DC CHARACTERISTICS OVER OPERATING TEMPERATURES

| Parameter                                     | Test conditions   | Limits |                  |      | Unit          |
|---|---|--------|------------------|------|---------------|
|   |   | Min    | Typ <sup>1</sup> | Max  |               |
| $V_{IH}$ Input HIGH voltage                   | Guaranteed input HIGH voltage for all inputs                            | 2.0    |                  |      | V             |
| $V_{IL}$ Input LOW voltage                    | Guaranteed input LOW voltage for inputs                                 |        |                  | 0.7  | V             |
|   |   |        |                  | 0.8  | V             |
| $V_{CD}$ Input clamp diode voltage            | $V_{CC} = \text{Min. } I_{IN} = -18\text{mA}$                           |        | -0.65            | -1.5 | V             |
| $V_{OL}$ Output LOW voltage                   | $V_{CC} = \text{Min. } I_{OL} = 4.0\text{mA}$                           |        | 0.25             | 0.4  | V             |
|   | $V_{CC} = \text{Min. } I_{OL} = 8.0\text{mA (Com. only)}$               |        | 0.35             | 0.5  | V             |
| $V_{OH}$ Output HIGH voltage                  | $V_{CC} = \text{Min. } I_{OH} = -400\mu\text{A}$                        |        |                  |      |               |
|   |   |        |                  |      |               |
| $I_{OH}$ Output HIGH current (open collector) | $V_{CC} = \text{Min. } V_{OUT} = 5.5\text{V}$                           |        |                  | 100  | $\mu\text{A}$ |
| $I_{OZH}$ Output "off" current HIGH (3-state) | $V_{CC} = \text{Max. } V_{OUT} = 2.4\text{V}$<br>$V_{OE} = 2.0\text{V}$ |        |                  | 20   | $\mu\text{A}$ |
| $I_{OZL}$ Output "off" current LOW (3-state)  | $V_{CC} = \text{Max. } V_{OUT} = 0.4\text{V}$<br>$V_{OE} = 2.0\text{V}$ |        |                  | -20  | $\mu\text{A}$ |
| $I_{IH}$ Input HIGH current <sup>2</sup>      | $V_{CC} = \text{Max. } V_{IN} = 2.7\text{V}$                            |        |                  | 20   | $\mu\text{A}$ |
| $I_I$ Input HIGH current at Max input voltage | $V_{CC} = \text{Max. } V_{IN} = 10\text{V}^3$                           |        |                  | 0.1  | mA            |
| $I_{IL}$ Input LOW current <sup>2</sup>       | $V_{CC} = \text{Max. } V_{IN} = 0.4\text{V}$                            |        |                  | -0.4 | mA            |
| $I_{OS}$ Output short circuit current         | $V_{CC} = \text{Max. } V_{OUT} = 0\text{V}$                             | -15    |                  | -100 | mA            |


## NOTES:

1. Typical limits are at  $25^\circ\text{C}$  and  $V_{CC}=5.0\text{V}$
2. The specified limits reflect one unit load for the family. When more than one load is connected internally, the limits must be multiplied by the number of connected loads. See the INPUT AND OUTPUT LOADING AND FAN-OUT TABLE on the data sheets for the guaranteed limit for each input.
3. The following LS devices are limited to a 5.5V input breakdown voltage. All inputs of the LS181 ; clock inputs of LS90, LS92, LS93, LS196, LS197, LS290, LS293, LS390, LS393 and LS490.


### QUAD 2-INPUT NAND GATE PIN CONFIGURATIONS

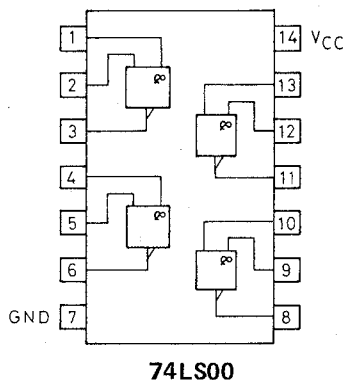

### TRIPLE 3-INPUT NAND GATE PIN CONFIGURATIONS

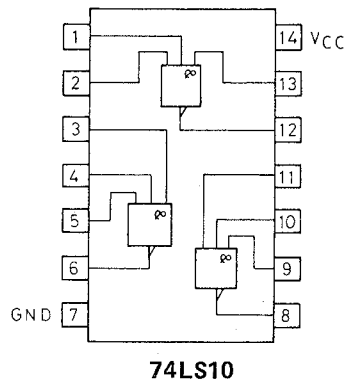

### QUAD 2-INPUT EXCLUSIVE-OR GATE PIN CONFIGURATIONS

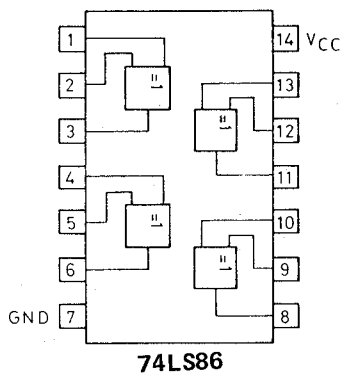


### TRUTH TABLE

| inputs |   | output |
|--------|---|--------|
| A      | B | Y      |
| L      | L | L      |
| L      | H | H      |
| H      | L | H      |
| H      | H | L      |

L = LOW voltage level.  
H = HIGH voltage level.

### 74LS244 OCTAL BUFFERS (3-STATE) PIN CONFIGURATIONS



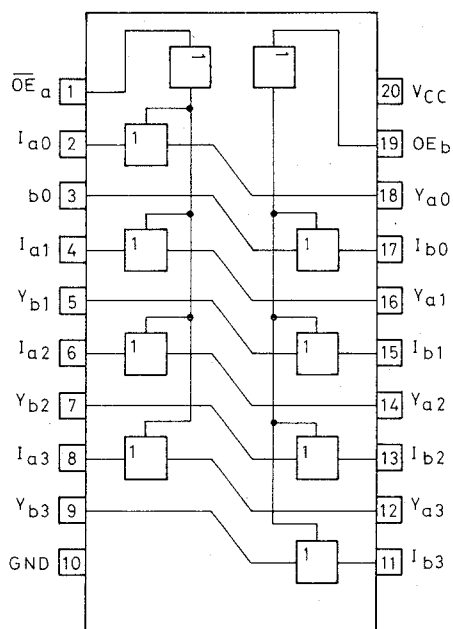


### TRUTH TABLE

| Inputs            |       |                   |       | Outputs |       |
|-------------------|-------|-------------------|-------|---------|-------|
| $\overline{OE}_a$ | $I_a$ | $\overline{OE}_b$ | $I_b$ | $Y_a$   | $Y_b$ |
| L                 | L     | L                 | L     | L       | L     |
| L                 | H     | L                 | H     | H       | H     |
| H                 | X     | H                 | X     | (Z)     | (Z)   |

H = HIGH voltage level  
L = LOW voltage level  
X = Don't care  
(Z) = High impedance (off) state

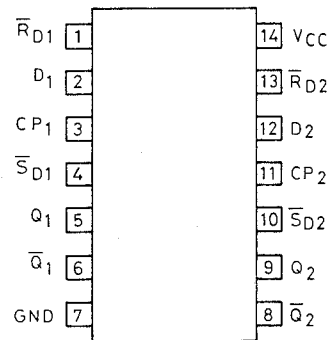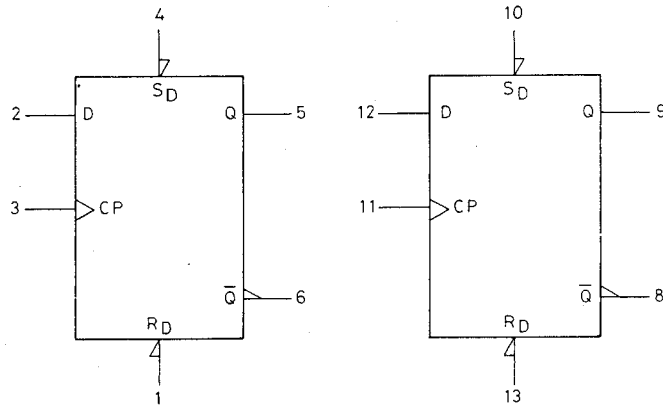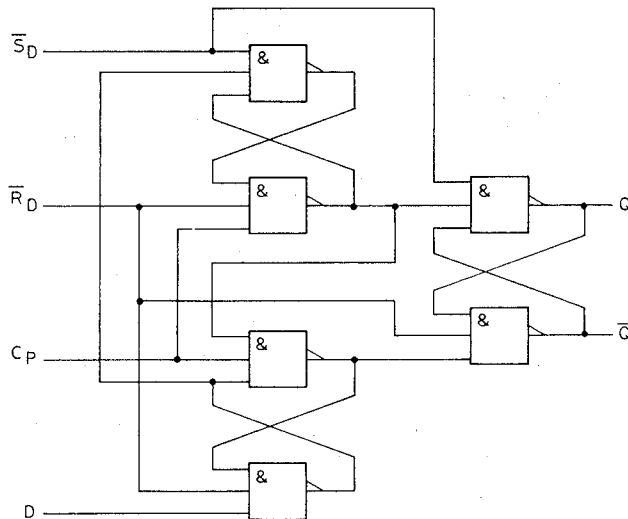

**74LS74 DUAL D-TYPE FLIP FLOP****PIN CONFIGURATION****LOGIC SYMBOL****LOGIC DIAGRAM****MODE SELECT-TRUTH TABLE**

| OPERATING MODE             | inputs           |                  |            |   | outputs |                |
|----------------------------|------------------|------------------|------------|---|---------|----------------|
|                            | $\overline{S}_D$ | $\overline{R}_D$ | CP         | D | Q       | $\overline{Q}$ |
| Asynchronous Set           | L                | H                | X          | X | H       | L              |
| Asynchronous Reset (Clear) | H                | L                | X          | X | L       | H              |
| Undetermined (c)           | L                | L                | X          | X | H       | H              |
| Load "1" (Set)             | H                | H                | $\uparrow$ | h | H       | L              |
| Load "0" (Reset)           | H                | H                | $\uparrow$ | l | L       | H              |



H = HIGH voltage level steady state.

h = HIGH voltage level one setup time prior to the LOW to HIGH clock transition.

L = LOW voltage level steady state.

l = LOW voltage level one setup time prior to the LOW to HIGH clock transition.

X = Don't care.

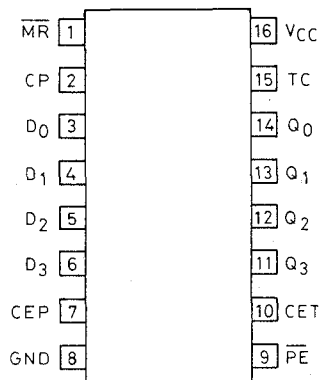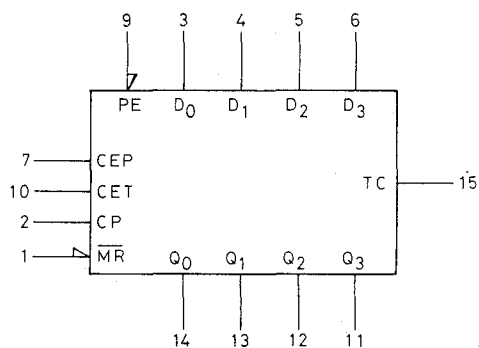**74LS161 4-BIT BINARY COUNTER****PIN CONFIGURATION****LOGIC SYMBOL****MODE SELECT-FUNCTION TABLE**

| OPERATING MODE    | Inputs                 |            |      |      |                        |       | Outputs |     |
|-------------------|------------------------|------------|------|------|------------------------|-------|---------|-----|
|                   | $\overline{\text{MR}}$ | CP         | CEP  | CET  | $\overline{\text{PE}}$ | $D_n$ | $Q_n$   | TC  |
| Reset (Clear)     | L                      | X          | X    | X    | X                      | X     | L       | L   |
| Parallel Load     | H                      | $\uparrow$ | X    | X    | L                      | L     | L       | L   |
|                   | H                      | $\uparrow$ | X    | X    | L                      | h     | H       | (b) |
| Count             | H                      | $\uparrow$ | h    | h    | h(d)                   | X     | count   | (b) |
| Hold (do nothing) | H                      | X          | L(c) | X    | h(d)                   | X     | $Q_n$   | (b) |
|                   | H                      | X          | X    | L(c) | h(d)                   | X     | $Q_n$   | L   |

H = HIGH voltage level steady state

L = LOW voltage level steady state

h = HIGH voltage level one setup time prior to the LOW-to-HIGH clock transition

L = LOW voltage level one setup time prior to the LOW-to-HIGH clock transition

X = Don't care

Q = Lower case letters indicate the state of the referenced output prior to the LOW-to-HIGH clock transition


 $\uparrow$  = LOW-to-HIGH clock transition

## 8.7. MEMORY AND MICROPROCESSOR

2716

16k (2kx8) UV ERASABLE PROM


## PIN CONFIGURATION

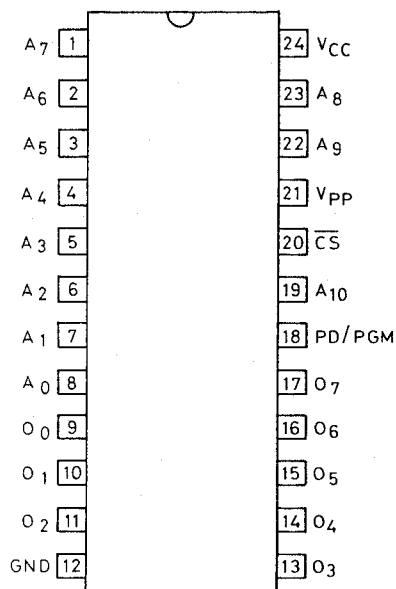

## PIN NAMES

|                                 |                    |
|---------------------------------|--------------------|
| A <sub>0</sub> –A <sub>10</sub> | ADDRESSES          |
| PD/PGM                          | POWER DOWN/PROGRAM |
| $\overline{\text{CS}}$          | CHIP SELECT        |
| O <sub>0</sub> –O <sub>7</sub>  | OUTPUTS            |


## BLOCK DIAGRAM

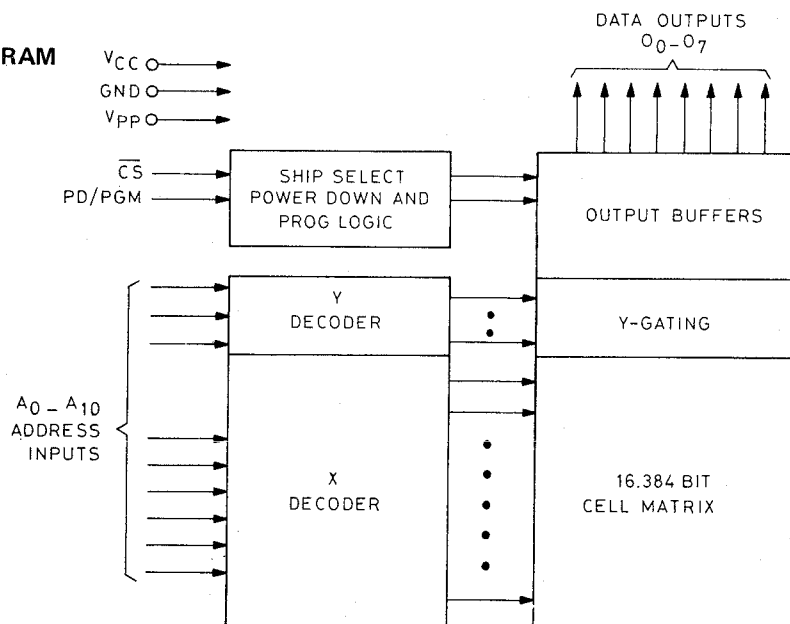


## MODE SELECTION

| Pins<br>Mode    | $\overline{\text{CE}}/\text{PGM}$<br>(18) | $\overline{\text{OE}}$<br>(20) | V <sub>pp</sub><br>(21) | V <sub>CC</sub><br>(24) | Outputs<br>(9-11, 13-17) |
|-----------------|---|--------------------------------|-------------------------|-------------------------|--------------------------|
| Read            | V <sub>IL</sub>                           | V <sub>IL</sub>                | +5                      | +5                      | D <sub>OUT</sub>         |
| Standby         | V <sub>IL</sub>                           | Don't care                     | +5                      | +5                      | High Z                   |
| Program         | Pulsed V <sub>IL</sub> to V <sub>IH</sub> | V <sub>IH</sub>                | +25                     | +5                      | D <sub>IN</sub>          |
| Program Verify  | V <sub>IL</sub>                           | V <sub>IL</sub>                | +25                     | +5                      | D <sub>OUT</sub>         |
| Program Inhibit | V <sub>IL</sub>                           | V <sub>IH</sub>                | +25                     | +5                      | High Z                   |

## 8035

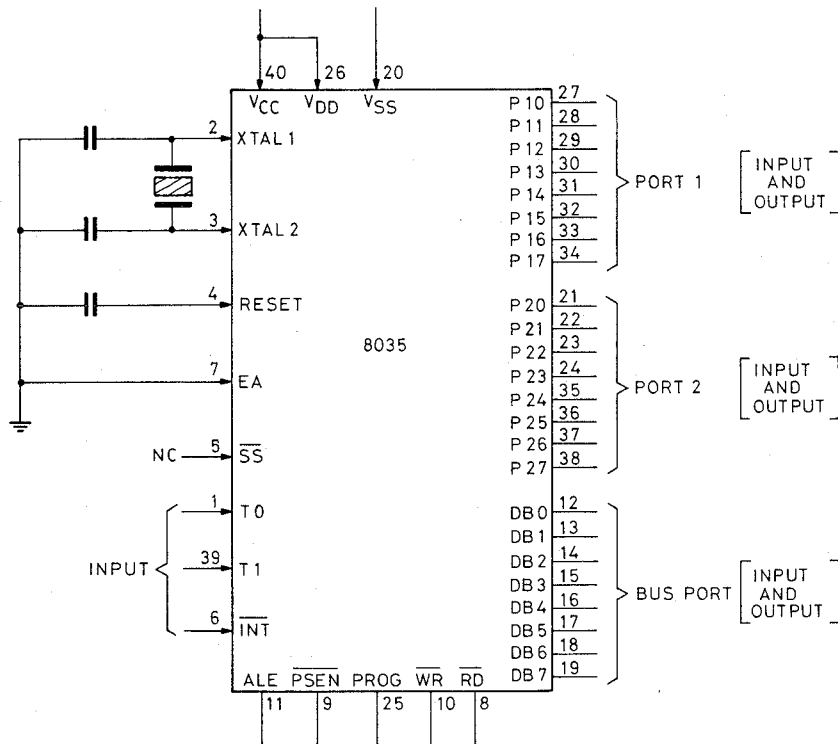




## MCS-48 PIN CONFIGURATIONS

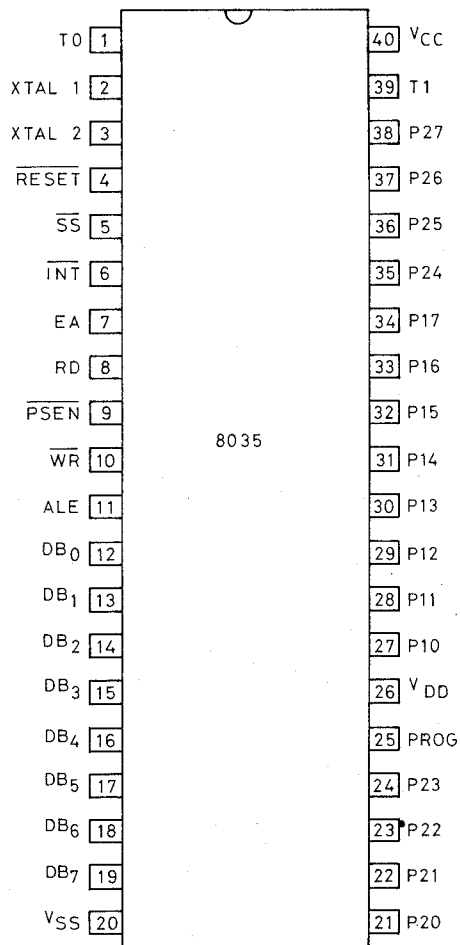

| Designation         | Pin number     | Function   |
|---------------------|----------------|--|
| V <sub>SS</sub>     | 20             | Circuit GND potential  |
| V <sub>DD</sub>     | 26             | Programming power supply; +25V during program, +5V during operation for both ROM and PROM. Low power standby pin in 8048 ROM version.  |
| V <sub>CC</sub>     | 40             | Main power supply; +5V during operation and 8748 programming.  |
| PROG                | 25             | Program pulse (+25V) input pin during 8748 programming.<br>Output strobe for 8232 I/O expander.  |
| P10-P17<br>(Port 1) | 27-34          | 8-bit quasi-bidirectional port. Internal Pullup $\approx 50K\Omega$  |
| P20-P27<br>(Port 2) | 21-24<br>35-38 | 8-bit quasi-bidirectional port. (Internal Pullup $\approx 50K\Omega$ )<br><br>P20-P23 contain the four high order program counter bits during an external program memory fetch and serve as a 4-bit I/O expander bus for 8243.   |
| D0-D7               | 12-19          | True bidirectional port which can be written or read synchronously using the $\overline{RD}$ , $\overline{WR}$ strobes. The port can also be statically latched.<br><br>Contains the 8 low order program counter bits during an external program memory fetch, and receives the addressed instruction under the control of PSEN. Also contains the address and data during an external RAM data store instruction, under control of ALE, $\overline{RD}$ , and $\overline{WR}$ . |
| T0                  | 1              | Input pin testable using the conditional transfer instructions JT0 and JNT0. T0 can be designated as a clock output using ENT0 CLK instruction. T0 is also used during programming.  |
| T1                  | 39             | Input pin testable using the JT1, and JNT1 instructions.<br>Can be designated the event counter input using the STRT CNT instruction.  |
| $\overline{INT}$    | 6              | Interrupt input. Initiates an interrupt if interrupt is enabled.<br>Interrupt is disabled after a reset. (Active low)  |
| $\overline{RD}$     | 8              | Output strobe activated during a BUS read. Can be used to enable data onto the BUS from an external device. (Active low).<br>Used as a Read Strobe to External Data Memory.  |
| $\overline{RESET}$  | 4              | Input which is used to initialize the processor. Also used during PROM programming and verification. (Active low).<br>(Internal pullup $\approx 200K\Omega$ ).   |
| $\overline{WR}$     | 10             | Output strobe during a BUS write. (Active low).<br>Used as write strobe to external data memory.   |
| ALE                 | 11             | Address Latch Enable. This signal occurs once during each cycle and is useful as a clock output.<br>The negative edge of ALE strobes address into external data and program memory.  |
| $\overline{PSEN}$   | 9              | Program Store Enable. This output occurs only during a fetch to external program memory. (Active Low).   |
| $\overline{SS}$     | 5              | Single step input can be used in conjunction with ALE to "single step" the processor through each instruction.<br>(Active Low) (Internally pullup $\approx 300K\Omega$ ).  |
| EA                  | 7              | External Access input which forces all program memory fetches to reference external memory. Useful for emulation and debug, and essential for testing and program verification. (Active High) Internal pullup $\approx 10M\Omega$ on 8048/8049, 8035L, 8039 only).   |
| XTAL1               | 2              | One side of crystal input for internal oscillator. Also input for external source.   |
| XTAL2               | 3              | Other side of crystal input.   |

## 8.8. RESISTORS
 
## INTEGRATED RESISTOR OM530

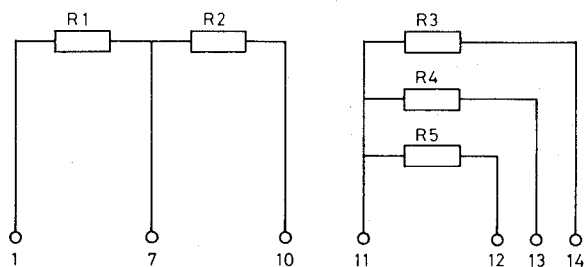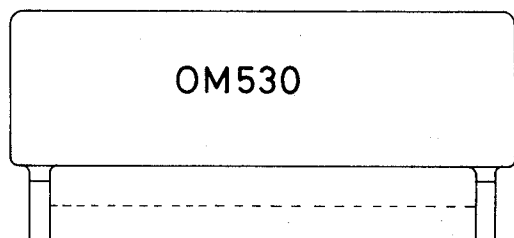

R1 10M  
 R2 9M96  
 R3 555k555  
 R4 50k505  
 R5 5k005

ST3445  
 820208

# CODING SYSTEM OF FAILURE REPORTING FOR QUALITY

## ASSESSMENT OF T & M INSTRUMENTS

(excl. potentiometric recorders)

The information contents of the coded failure description is necessary for our computerized processing of quality data.

Since the reporting of repair and maintenance routines must be complete and exact, we give you an example of a correctly filled-out PHILIPS SERVICE Job sheet.

| ①<br>Country | ②<br>Day Month Year | ③<br>Typenumber   | /Version | ④<br>Factory/Serial no. |
|--------------|---------------------|-------------------|----------|-------------------------|
| 3 2          | 1 5 0 4 7 5         | 0 P M 3 2 6 0 0 2 |          | D O 0 0 7 8 3           |

### CODED FAILURE DESCRIPTION

| ⑤<br>Nature of call  | Location | Component/sequence no. | Category | ⑦<br>Job completed                  | ⑧<br>Working time |
|--|----------|------------------------|----------|-------------------------------------|-------------------|
| <input type="checkbox"/> Installation                      |          | T S 0 6 0 7            | 5        | <input type="checkbox"/>            |                   |
| <input type="checkbox"/> Pre sale repair                   |          | R 0 0 6 3 1            | 2        | <input checked="" type="checkbox"/> |                   |
| <input type="checkbox"/> Preventive maintenance            | 0 0 2 1  | 9 9 0 0 0 1            | 4        |                                     | 1 2               |
| <input checked="" type="checkbox"/> Corrective maintenance |          |                        |          |                                     |                   |
| <input type="checkbox"/> Other                             |          |                        |          |                                     |                   |

Detailed description of the information to be entered in the various boxes:

①Country: 3 2 = Switzerland

②Day Month Year 1 5 0 4 7 5 = 15 April 1975

③Type number/Version 0 P M 3 2 6 0 0 2 = Oscilloscope PM 3260, version 02 (in later oscilloscopes this number is placed in front of the serial no)

④Factory/Serial number D O 0 0 7 8 3 = DO 783 These data are mentioned on the type plate of the instrument

⑤Nature of call: Enter a cross in the relevant box

⑥Coded failure description

#### Location

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|--|--|--|--|

These four boxes are used to isolate the problem area. Write the code of the part in which the fault occurs, e.g. unit no or mechanical item no of this part (refer to 'PARTS LISTS' in the manual).

Example: 0001 for Unit 1  
000A for Unit A  
0075 for item 75

If units are not numbered, do not fill in the four boxes; see Example Job sheet.

#### Component/sequence no.

|  |  |  |  |  |  |
|--|--|--|--|--|--|
|  |  |  |  |  |  |
|--|--|--|--|--|--|

These six boxes are intended to pinpoint the faulty component.

A. Enter the component designation as used in the circuit diagram. If the designation is alfa-numeric, the letters must be written (starting from the left) in the two left-hand boxes and the figures must be written (in such a way that the last digit occupies the right-most box) in the four right-hand boxes.

B. Parts not identified in the circuit diagram:

- 990000 Unknown/Not applicable
- 990001 Cabinet or rack (text plate, emblem, grip, rail, graticule, etc.)
- 990002 Knob (incl. dial knob, cap, etc.)
- 990003 Probe (only if attached to instrument)
- 990004 Leads and associated plugs
- 990005 Holder (valve, transistor, fuse, board, etc.)
- 990006 Complete unit (p.w. board, h.t. unit, etc.)
- 990007 Accessory (only those without type number)
- 990008 Documentation (manual, supplement, etc.)
- 990009 Foreign object
- 990099 Miscellaneous

#### Category

|  |
|--|
|  |
|--|

- 0 Unknown, not applicable (fault not present, intermittent or disappeared)
- 1 Software error
- 2 Readjustment
- 3 Electrical repair (wiring, solder joint, etc.)
- 4 Mechanical repair (polishing, filing, remachining, etc.)
- 5 Replacement (of transistor, resistor, etc.)
- 6 Cleaning and/or lubrication
- 7 Operator error
- 8 Missing items (on pre-sale test)
- 9 Environmental requirements are not met

⑦Job completed: Enter a cross when the job has been completed.

⑧Working time: Enter the total number of working hours spent in connection with the job (excluding travelling, waiting time, etc.), using the last box for tenths of hours.

1 2 = 1,2 working hours (1 h 12 min.)

# Sales and service all over the world

**Alger:** Bureau de Liaison Philips,  
24 bis Rue Bougainville,  
El Mouradia, Alger; tel.: 565672

**Argentina:** Philips Argentina S.A.,  
Casilla de Correo 3479, (Central), 1430 Buenos Aires;  
tel. (1) 70-12421/70-2325/2905/6488

**Australia:** Philips Scientific & Industrial  
Equipment Division, Centre Court,  
25 - 27 Paul Street, P.O. Box 119,  
North Ryde/NSW 2113; tel. (2) 888-8222

**Bangla Desh:** Philips Bangla Desh Ltd.,  
P.O. Box 62; Ramna, Dacca; tel. 283332

**België/Belgique:** Philips and MBLE associates,  
Philips Scientific and Industrial Equipment Division;  
80 Rue des Deux Gares; 1070 Bruxelles,  
tel. (2) 523.00.00

**Bolivia:** Industrias Bolivianas Philips S.A.,  
Cajón Postal 2964, La Paz;  
tel.: 50029/55270/55604

**Brasil:** Philips Do Brasil Ltda,  
Avenida 9 de Julho 5229; Caixa Postal 8681;  
CEP 01407 - Sao Paulo (S.P.);  
tel. 2825722  
**Service Centre:**  
Sistemas Profissionais  
Rua Amador Bueno, 474,  
Caixa Postal 3159 - S. Amaro  
CEP 04752 - Sto Amara (S.P.);  
tel. (11) 2476522

**Canada:** Philips Test and Measuring Instruments Inc.,  
6 Leswyn Road,  
Toronto (Ontario) M6A-1K2;  
tel. (416) 789-7188

**Chile:** Philips Chilena S.A.,  
Division Professional, Avda. Santa Maria 0760;  
Casilla Postal 2687, Santiago de Chile; tel. 770038

**Colombia:** Industrias Philips de Columbia S.A.,  
Calle 13 no. 51-39, Apartado Aereo 4282,  
Bogota; tel. 2600600

**Danmark:** Philips Elektronik-Systemer A/S,  
Afd. for Industri og Forskning; Strandlodsvej 4,  
P.O. Box 1919, 2300 København S,  
tel. (1) 572222

**Deutschland (Bundesrepublik):** Philips GmbH,  
Unternehmensbereich Elektronik für  
Wissenschaft und Industrie, Miramstrasse 87,  
Postfach 310 320; 35 Kassel-Bettenhausen;  
tel. (561) 5010

**Ecuador:** Philips Ecuador S.A.,  
Casilla 343, Quito; tel. 239080

**Egypt:** Resident Delegate Office of Philips Industries,  
5 Sherif Street, Corner Eloui, P.O. Box 1687, Cairo;  
tel. 754118/754259/754077.

**Eire:** Philips Electrical (Ireland) Ltd.  
Newstead, Clonskeagh, Dublin 14; tel. (1) 693355

**España:** Philips Ibérica S.A.E.,  
Dpto Aparatos de Medida, Martinez Villergas 2,  
Apartado 2065, Madrid 27;  
tel. (1) 4042200  
**Service Centre:**  
Dpto Tco. de Instrumentación,  
Calle de Albasanz 75, Madrid 17;  
tel. (1) 2047100

**Ethiopia:** Philips Ethiopia (Priv. Ltd. Co.),  
Ras Abebe Areguay Avenue,  
P.O.B. 2565,  
Addis Ababa; tel. 448300

**Finland:** See Suomi

**France:** S.A. Philips Industrielle et Commerciale,  
Division S&I,  
105 Rue de Paris, 93 002 Bobigny;  
tel. (1) 8301111

**Great Britain:** Pye Unicam Ltd., York Street,  
Cambridge CB1-2PX, tel. (223) 358866  
**Service Centre:**  
Beddington Lane, Croydon, Surrey CR9 4EN;  
tel. (1) 6843670

**Greece:** See Hellas

**Hellas:** Philips S.A. Hellénique,  
54 Avenue Syngrou, P.O. Box 153,  
Athens 403; tel. (1) 9215311

**Hong Kong:** Philips Hong Kong Ltd.,  
P.O.B. 2108, St. George's Building, 21st floor,  
Hong Kong city; tel. (5) 249246  
**Service Centre:**  
Hopewell Centre, 16th floor,  
No. 17, Kennedy Road,  
Wanchai, Hong Kong;  
tel. (5) 283575

**India:** Peico Electronics & Electricals Ltd.,  
S&I Equipment, Shivsagar Estate,  
Block "A", Dr. Annie Besant Road,  
P.O.B. 6598, Worli, Bombay 4000 18 (WB);  
tel. 391431

**Indonesia:** P.T. Philips Development Corporation,  
Jalan Let. Jen Haryone M.T. Kav. 17,  
P.O.B. 2287, Jakarta-Selatan; tel. (21) 820808

**Iran:** Philips Iran Ltd., P.O.B. 1297, Teheran;  
tel. 662281/5

**Iraq:** Philips Iraq W.L.L., Munir Abbas Building,  
4th floor; South Gate, P.O. box 5749, Baghdad;  
tel. 8880409

**Island:** Heimilsteaki SF, Saetún 8, Reykjavik;  
tel. 24000

**Islas Canarias:** Philips Ibérica S.A.E.,  
Triana 132, Las Palmas, Casilla 39-41,  
Santa Cruz de Tenerife

**Italia:** Philips S.p.A., Sezione S&I/T&M;  
Viale Elvezia 2, 20052 Monza; tel. (39) 36351

**Japan:** See Nippon

**Jordan:** Philips Delegate Office,  
P.O. Box 35268, Amman; tel. 43998

**Kenya:** Philips (Kenya) Ltd.,  
01 Kalou Road, Industrial Area,  
P.O.B. 30554, Nairobi; tel. 557999

**Kuwait:** Delegate Office of Philips Industries,  
P.O. Box 3801, Safat, Kuwait; tel. 428678

**Lebanon:** Philips Middle East S.A.R.L.;  
P.O. Box 11670, Beirut, tel. 382300

**Malaysia:** Philips Malaysia Sdn Bhd.,  
Lot 2, Jalan 222, Section 14,  
P.O. Box 2163, Petaling Jaya,  
Selangor; tel. 574411

**México:** Philips Mexicana S.A. de C.V.,  
Div. Científico Industrial, Calle Durango 167,  
Apartado Postal 24-328, Mexico 7 (D.F.);  
tel. 544-91-99

**Morocco:** S.A.M.T.E.L., Casa Bandoeng,  
B.P. 10896, Casablanca; tel. 303192

**Nederland:** Philips Nederland B.V.,  
Hoofdgroep PPS, Boschdijk 525, Gebouw VB,  
5600 VB Eindhoven; tel. 793333

**Service centre:**  
Technische Service Prof. Aktiviteiten  
Hurkstraat 42, Gebouw HBK,  
5600 MC Eindhoven; tel. 723094

**Ned. Antillen:** Philips Antillana N.V.,  
Postbus 523, Willemstad, Curaçao;  
tel. 37575/37475

**New Zealand:** Philips Electrical Industries of N.Z. Ltd.,  
Scientific and Industrial Equipment Division;  
Horlor Street, P.O. Box 2097,  
Naenae, Wellington; tel. 678639

**Nigeria:** Associated Electronic Products (Nigeria) Ltd.,  
Ikoro Road, P.O.B. 1921, Lagos; tel. 900160/61

**Nippon:** NF Trading Co. Ltd.,  
Kirimoto Bldg. 11-2,  
Tsunashima Higashi 1 - Chome, Kohoku-ku,  
Yokohama

**Norge:** Norsk A.S. Philips,  
Industri og Forskning, Essendrops gate 5,  
Postboks 5040, Oslo 3; tel. (2) 463890  
**Service Centre:**  
Postboks 1 Manglerud, Oslo 6; tel. (2) 336270

**Oesterreich:** Oesterreichische Philips Industrie GmbH,  
Abteilung Industrie Elektronik,  
Breitenfurterstrasse 219, A-1230 Wien;  
tel. (222)-841611/15.

**Pakistan:** Philips Electrical Co. of Pakistan Ltd.,  
El-Markz, M.A. Jinnah Road, P.O.B. 7101,  
Karachi 3; tel. 70071

**Paraguay:** Philips del Paraguay S.A.,  
Casilla de Correo 605, Asunción;  
tel. 48045/46919

**Perú:** Philips Peruana S.A.,  
Av. Alfonso Ugarte 1268  
Apartado Aereo 1841, Lima 100, tel. 326070

**Philippines:** Philips Industrial Development Inc.,  
2246 Pasong Tamo, P.O.B. 911,  
Makati Rizal, 3116, Manila; tel. 868951/868959

**Portugal:** Philips Portuguesa S.A.R.L.,  
Av. Eng. Duarte Pacheco 6, Apartado 1331, Lisboa 1000;  
tel. (19) 683121/9  
**Service Centre:**  
Servicos Técnicos Profissionais, Outurela,  
2795 Linda-a-Velha; tel. (19) 2180071

**Saudi Arabia:** Delegate Office Philips Industries,  
Sabreen Bldg., Airport Road, P.O. Box 9844,  
Riyadh; tel. 4777808/4778463

**Schweiz-Suisse-Svizzera:** Philips A.G.,  
Allmendstrasse 140, Postfach, CH-8027 Zürich;  
tel. (1) 4882211/4882629

**Singapore:** Philips Singapore Private Ltd.,  
Lorong 1, Tao Payoh, 1st floor,  
P.O. Box 340, Toa Payoh Central Post Office,  
Singapore 1231; tel. (2) 538811  
**Service Centre:**  
403 Delta House, 4th floor,  
No. 2 Alexandra Road,  
Singapore 0315; tel. 2712555

**South Africa:** South African Philips (Pty) Ltd.,  
2 Herb Street, New Doornfontein, P.O.B. 7703,  
Johannesburg 2000; tel. (11) 6140411

**South-Korea:** Philips Electronics (Korea) Ltd.,  
P.O. Box 3680, Seoul; tel. 794 4202

**Suomi:** Oy Philips Ab.,  
Kaivokatu 8,  
P.O. Box 10255,  
00101 Helsinki 10; tel. 17271  
**Service Centre:**  
P.O. Box 11, SF-02631 Espoo 63;  
tel. (0) 523122

**Sverige:** Svenska A.B. Philips,  
Philips Industri Elektronik, Lidingövägen 50,  
Fack, S11584 Stockholm; tel. (8) 635000

**Syria:** Philips Moyen-Orient S.A., Rue Fardoss 79,  
Immeuble Kassas and Sadate, B.P. 2442, Damas,  
tel. 118605/221650/228003

**Taiwan:** Philips Taiwan Ltd.,  
San Min Building, P.O. Box 22978, Taipei;  
tel. (2) 5631717

**Tanzania:** Philips (Tanzania) Ltd.,  
Box. 20104, Dar es Salaam; tel. 29571/4

**Thailand:** Philips Electrical Co. of Thailand Ltd.,  
283 Silom Road, P.O. Box 961, Bangkok 5;  
tel. 233-6330/9

**Tunisia:** S.T.I.E.T., 32 bis, Rue Ben Ghedham,  
Tunis; tel. 244268/243025

**Türkiye:** Türk Philips Ticaret A.S.,  
Posta Kutusu 504, Beyoglu,  
Istanbul 1; tel. 435910

**United Arab Emirates:** Philips Delegate Office,  
P.O. Box 2567, Dubai; tel. 220641/220642

**Uruguay:** Industrias Philips del Uruguay S.A.,  
Avda Uruguay 1287, Casilla de Correo 294,  
Montevideo; tel. 915641/44

**U.S.A.:**  
Philips Test and Measuring Instruments Inc.,  
California, Garden Grove 92645  
12882 Valley View Street, Suite 9;  
tel. : (213) 594-8741/ (714) 898-5000  
California, Milpitas 95035  
489 Valley Way;  
tel. (408) 946-6722  
Florida, Orlando 32805  
750 S Orange Blossom Trail, Suite 206;  
tel. (305) 422-8131  
Georgia, Norcross 30071  
7094 Peachtree Industrial Blvd., Suite 220;  
tel. (404) 586-0238  
Illinois, Elk Grove Village 60007  
175 Scott Street;  
tel. (312) 640-7860  
Massachusetts, Woburn 01801  
21 Olympia Avenue;  
tel. (617) 935-3972  
Minnesota, Minneapolis 55420  
7801 Metro Parkway, Suite 109;  
tel. (612) 854-2426  
New Jersey, Mahwah 07430  
85 McKee Drive;  
tel. (201) 529-3800, **Toll-free** (800) 631-7172

**Venezuela:** Industrias Venezolanas Philips S.A.,  
Apartado Aereo 1167, Caracas 107;  
tel. (2) 393811/353533

**Zaire:** S.A.M.E./S.Z.A.R.L., B.P. 16636, Kinshasa,  
tel. 31887/8

**Zambia:** Philips Electrical Zambia Ltd.,  
Mweneshi Road, P.O.B. 31878, Lusaka;  
tel. 218511/218701

**Zimbabwe:** Philips Electrical (PVT) Ltd.,  
62, Umtali Road, P.O. Box 994, Beverley/Salisbury;  
tel. 47211

**For information on change of address:**  
N.V. Philips' Gloeilampenfabrieken,  
Test and Measuring Instruments, Building TQ III-4,  
5600 MD Eindhoven - The Netherlands

**For countries not listed:**  
N.V. Philips' Gloeilampenfabrieken, S&I Export;  
Test and Measuring Instruments, Building TQII-3,  
5600 MD Eindhoven - The Netherlands





# PHILIPS

# SERVICE

Scientific & Analytical Equipment  
Test & Measuring Instruments  
Industrial Automation  
Advanced Automation Systems  
Welding

**Scientific &  
Industrial  
Equipment  
Division**

820607

PM2521/22

SME94

Already issued : SME93  
Re : Service documentation for the battery power supply

The service manual of the PM2521 together with this information sheet comprise the service manual for the PM2521/22.

## CONTENTS

### 1. CIRCUIT DESCRIPTION

- 1.1. General
- 1.2. Charging circuit
- 1.3. Level convertors
- 1.4. Schmitt trigger

### 2. ACCESS

### 3. FAULT-FINDING

### 4. CHECKING AND ADJUSTING

### 5. PARTS LIST

- 5.1. Resistors
- 5.2. Capacitors
- 5.3. Semiconductors
- 5.4. Integrated circuits
- 5.5. Miscellaneous

### 6. CIRCUIT DIAGRAMS

9499 478 12511

PRINTED IN THE NETHERLANDS

## 1. CIRCUIT DESCRIPTION


### 1.1. GENERAL

The PM2521/22 version is a standard PM2521 that includes a built-in battery power supply.

The battery power supply part consists of one Pb cell and a circuit that converts the battery voltage into +5V, +13V and -13V.

The circuit of the battery power supply can be subdivided into three main parts:

- Charging circuit
- Two level convertors
- Schmitt trigger

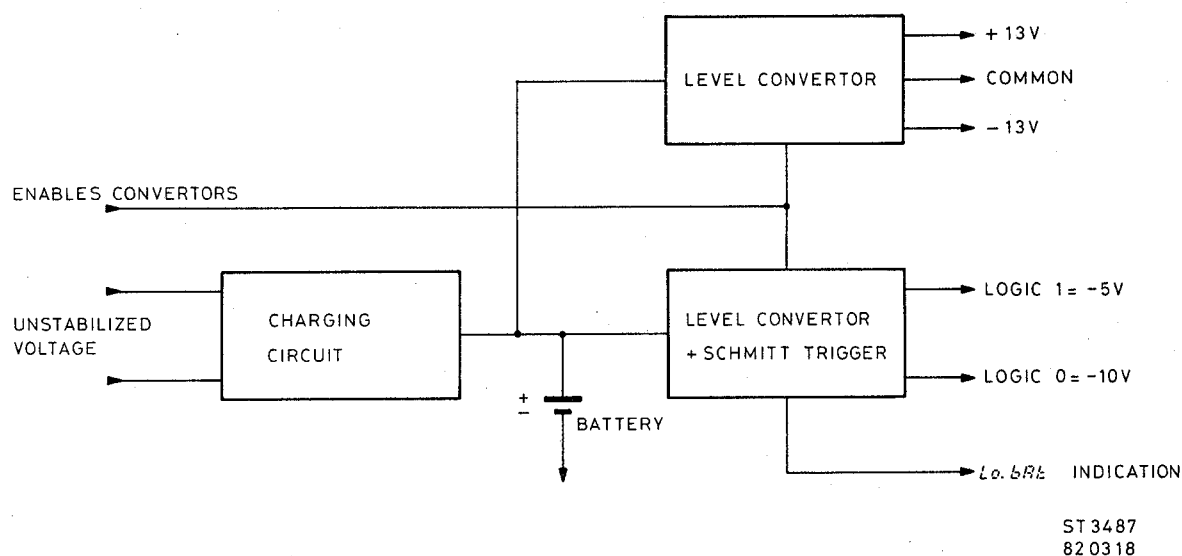

ST 3487  
82 03 18

*Fig. 1. Block diagram-battery power supply*

### 1.2. CHARGING CIRCUIT (refer to the overall circuit Fig. 6.).

If the battery is charged, by the power supply (power switch in position "OFF", PM2521 connected to the mains) the voltage on point 2 of X101 is stabilized by A101. The output voltage of A101 is the charging voltage for the battery.

When the temperature changes, the output voltage is compensated by V101, so the required charging voltage is always available.

In the position "OFF" the convertors are disabled by means of two diodes V202 and V203. By this means, the battery is prevented from discharging via the convertors.

### 1.3. LEVEL CONVERTORS

When the battery is being discharged, (power switch in position "ON", PM2521 disconnected from the mains) the battery voltage is supplied to V501. Due to this the circuit which is made by T501, A401 (Q3), R502 begins to oscillate. This oscillation produces a positive voltage (+13V) on point 3 of X101 and a negative voltage (−13V) on point 6 of X101 (with respect to pin 4 of X101).

The centre pin of T501 is fed to the base of Q1 (A401) and this provides a base current for V401 and V402. The result is a voltage of +5V on pin 5 of X101 (with respect to pin 8 of X101).

### 1.4. SCHMITT TRIGGER

The Schmitt trigger circuit consists of two transistors Q4 and Q5 (A401).

When the voltage of the battery drops below 5,5V, the Schmitt trigger switches the output (pin 7 of X101) from +5V to 0V (with respect to pin 8 of X101).

## 2 ACCESS

Dismantling the battery power supply:

- Remove the top cover as described in Chapter 2 of the PM2521 Service Manual.
- Disconnect the connector X101. (Fig. 2, item 1.).
- Remove the two screws from the battery power supply cover. (Fig. 2, item 2.).
- Lever up the cover and remove it.
- Remove the two screws. (Fig. 2, item 3.).
- The battery and the printed-circuit board can now be removed.


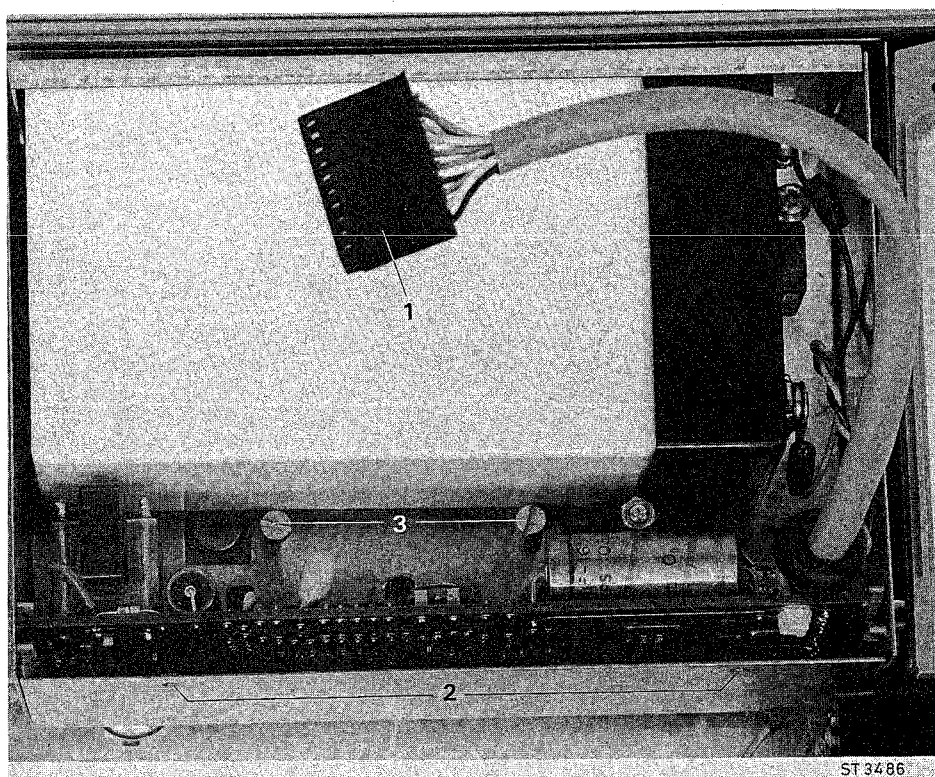


Fig. 2. Dismantling the battery power supply

### 3. FAULT-FINDING

The following flow-chart offers a simple method of locating faults in the PM2521/22.

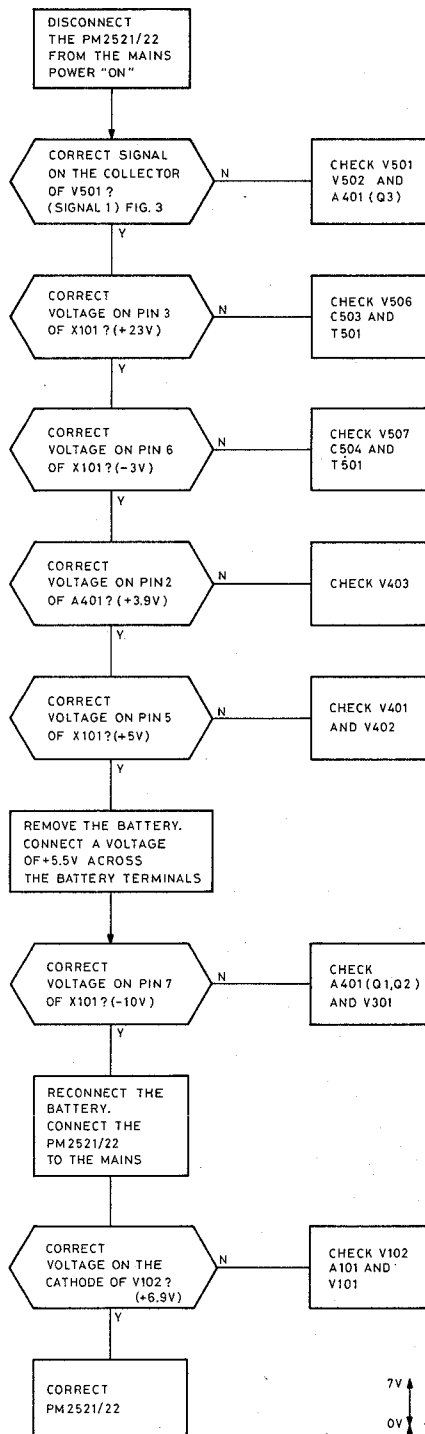

WITH RESPECT TO PIN 8 OF X101 (LOGIC 0)

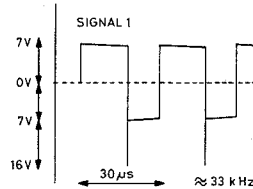


Fig. 3. Waveform-collector V501

ST3488  
8205 12

## 4. CHECKING AND ADJUSTING

- Disconnect the battery power supply from the PM2521/22.
- Remove the battery.
- In its place, fit a  $1k\Omega$  resistor across the battery terminals of the power supply unit.
- Connect a voltage of +10V (20mA) across points 10 (+) and 8 (–) of the printed-circuit board.
- With preset R105, adjust the voltage across the external  $1k\Omega$  resistor to 6,9V.
- Remove the  $1k\Omega$  resistor and connect a voltage of +7V (1A) between the battery terminals (red=+).
- Fit the connector X101 of the battery unit to X101 of the PM2521/22.
- Switch on the PM2521 and adjust the voltage between points 5 (+) and 8 (–) to +5,0V.
- Connect a voltage of 5,5V across the battery terminals.  
With preset R301, adjust the voltage on point 14 of A401 so that the voltage goes from –5V to –10V (not reverse).
- Remove the voltage from the battery terminals and refit the battery.
- Check the discharge current ( $\approx 700mA$ ).
- Check the voltage across C503 is between +12V and +15,5V.
- Check the voltage across C504 is between –12V and –15,5V.
- Connect the PM2521/22 to the mains and check the charging current is between 5mA and 400mA.

## 5. PARTS LIST

### 5.1. RESISTORS

| <i>Ordering number</i> | <i>Value (<math>\Omega</math>)</i> | <i>Tol. (%)</i> | <i>Item</i> |
|------------------------|------------------------------------|-----------------|-------------|
| 5322 116 55615         | 20                                 | 5%              | R101        |
| 5322 116 55614         | 6,49                               | 0,5%            | R102        |
| 5322 116 55614         | 6,49                               | 0,5%            | R103        |
| 5322 116 54502         | 216                                | 1%              | R104        |
| 4822 100 10019         | 220                                | 20%             | R105        |
| 5322 116 54541         | 825                                | 1%              | R106        |
| 5322 116 54696         | 100K                               | 1%              | R201        |
| 4822 100 10029         | 2K2                                | 20%             | R301        |
| 4822 116 51253         | 10K                                | 1%              | R302        |
| 5322 116 50729         | 4K22                               | 1%              | R303        |
| 5322 116 54696         | 100K                               | 1%              | R304        |
| 4822 116 51253         | 10K                                | 1%              | R305        |
| 4822 116 51253         | 10K                                | 1%              | R306        |
| 5322 116 54651         | 26K1                               | 1%              | R401        |
| 5322 116 50506         | 154                                | 1%              | R402        |
| 5322 116 50608         | 6K19                               | 1%              | R403        |
| 5322 116 50593         | 16K2                               | 1%              | R404        |
| 4822 100 10036         | 4K7                                | 1%              | R405        |
| 5322 116 54597         | 5K36                               | 1%              | R406        |
| 5322 116 50536         | 464                                | 1%              | R501        |
| 5322 116 54632         | 14K7                               | 1%              | R502        |

## 5.2. CAPACITORS

| <i>Ordering number</i> | <i>Value (F)</i> | <i>Tol. (%)</i> | <i>V</i> | <i>Item</i> |
|------------------------|------------------|-----------------|----------|-------------|
| 4822 124 20777         | 1000 $\mu$       | -10+50          | 16       | C101        |
| 4822 124 20977         | 15 $\mu$         | 20              | 16       | C201        |
| 4822 124 10204         | 2,2 $\mu$        | 20              | 16       | C401        |
| 4822 124 20945         | 33 $\mu$         | 20              | 10       | C402        |
| 4822 124 20679         | 100 $\mu$        | -10+50          | 10       | C501        |
| 4822 122 31439         | 270 P            | 2               | 100      | C502        |
| 4822 124 20699         | 47 $\mu$         | -10+50          | 25       | C503        |
| 4822 124 20699         | 47 $\mu$         | -10+50          | 25       | C504        |

## 5.3. SEMICONDUCTORS

| <i>Ordering number</i> | <i>Description</i> | <i>Item</i> |
|------------------------|--------------------|-------------|
| 4822 130 31248         | BZV46-C2V0         | V101        |
| 4822 130 30195         | BYX10 RECT         | V102        |
| 4822 130 30195         | BYX10 RECT         | V201        |
| 4822 130 30613         | BAW62              | V202        |
| 4822 130 30613         | BAW62              | V203        |
| 4822 130 44568         | BC557B             | V301        |
| 4822 130 40824         | BD140              | V401        |
| 4822 130 44568         | BC557B             | V402        |
| 5322 130 34916         | BZX79-C3V9         | V403        |
| 5322 130 44593         | BC369              | V501        |
| 4822 130 30613         | BAW62              | V502        |
| 4822 130 34398         | BZX79-C24          | V503        |
| 4822 130 30613         | BAW62              | V504        |
| 4822 130 30613         | BAW62              | V505        |
| 5322 130 34605         | BAX12A             | V506        |
| 5322 130 34605         | BAX12A             | V507        |

## 5.4. INTEGRATED CIRCUITS

| <i>Ordering number</i> | <i>Description</i> | <i>Item</i> |
|------------------------|--------------------|-------------|
| 4822 209 80591         | LM317T VOLT REG NS | A101        |
| 5322 209 84111         | CA3086             | A401        |

## 5.5. MISCELLANEOUS

| <i>Ordering number</i> | <i>Description</i> | <i>Item</i> |
|------------------------|--------------------|-------------|
| 5322 148 84061         | TRAFO TFU15        | T501        |
| 4822 253 20018         | FUSE 1A FAST       | F101        |
| 5322 158 10052         | HF CHOKE 38W-band  | L501        |
| 5322 158 10052         | HF CHOKE 38W-band  | L502        |

## 6. CIRCUIT DIAGRAMS

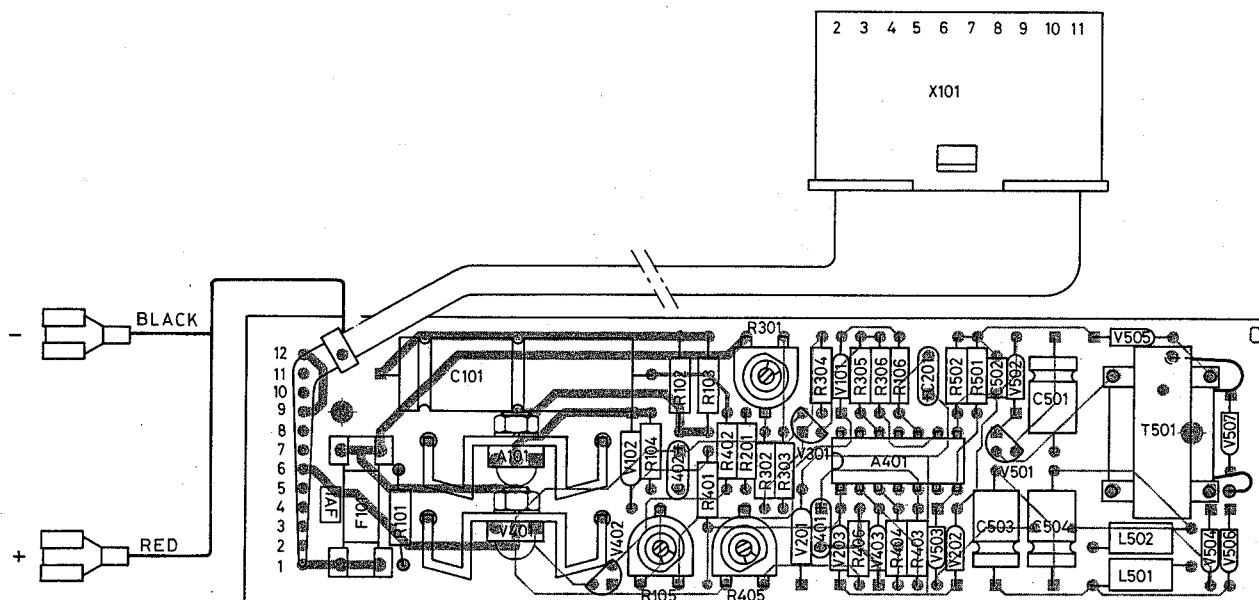


Fig. 4. Main p.c.b. lay-out, component side

RD 3468  
82 05 07

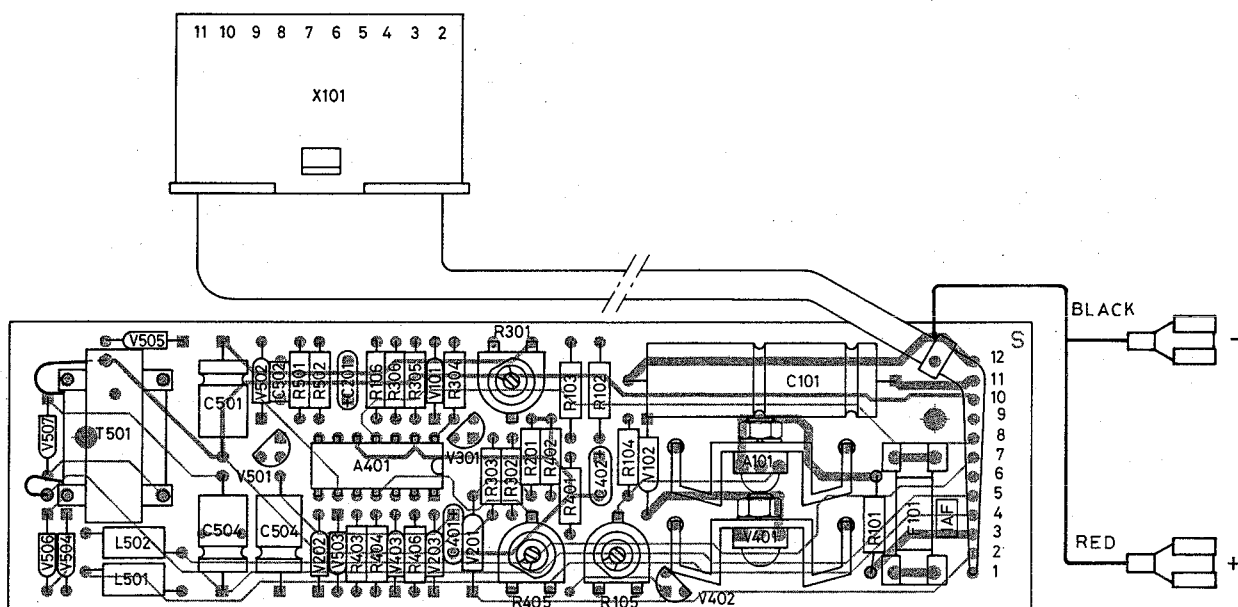


Fig. 5. Main p.c.b. lay-out, conductor side

ST 3469  
82 05 07



*Fig. 6. Circuit diagram*





# PHILIPS

# SERVICE

Cryogenic Equipment / Electro Chemistry /  
Electron Optics / Electronic Weighing /  
Industrial Data Systems / Numerical Control /  
Philips Pollution Measuring / Radiation Measuring Equipment /  
Test and Measuring Equipment / Welding Equipment /  
X-Ray Analytical Equipment

## equipment for science and industry

811110

PM 2521

SME 90

Already issued : —

Re : Erratum of the technical data

This erratum gives the complete specification of:

Alternating voltage measurements (section 2.1.2.)

Alternating current measurements (section 2.1.4.)

dB measurements (section 2.1.5.) and

Counter measurements (section 2.1.9.)

By this information, the given specification in the mentioned sections of the operating manual (9499 470 15901) are no longer valid.

### 2.1.2. Alternating voltage measurements

Ranges

|    |               |
|----|---------------|
| mV | 200           |
| V  | 2 20 200 2000 |

Maximum input voltage in range 2000 V

600 V

Resolution

10  $\mu$ V in range 200 mV

Measured value less than 0,5 % of range is displayed as zero

Number of representation units

21000


Accuracy

(valid between 3 % and 100 % of range)

| Range 200 mV up to and including 200 V |  |
|--|--|
| 40 Hz - 500 Hz                         | $\pm$ (0,3 % of reading + 0.15 % of range) |
| at 20 kHz                              | $\pm$ (1 % of reading + 0.15 % of range)   |
| at 100 kHz                             | $\pm$ (5 % of reading + 1 % of range)      |

9499 478 12101

PRINTED IN THE NETHERLANDS

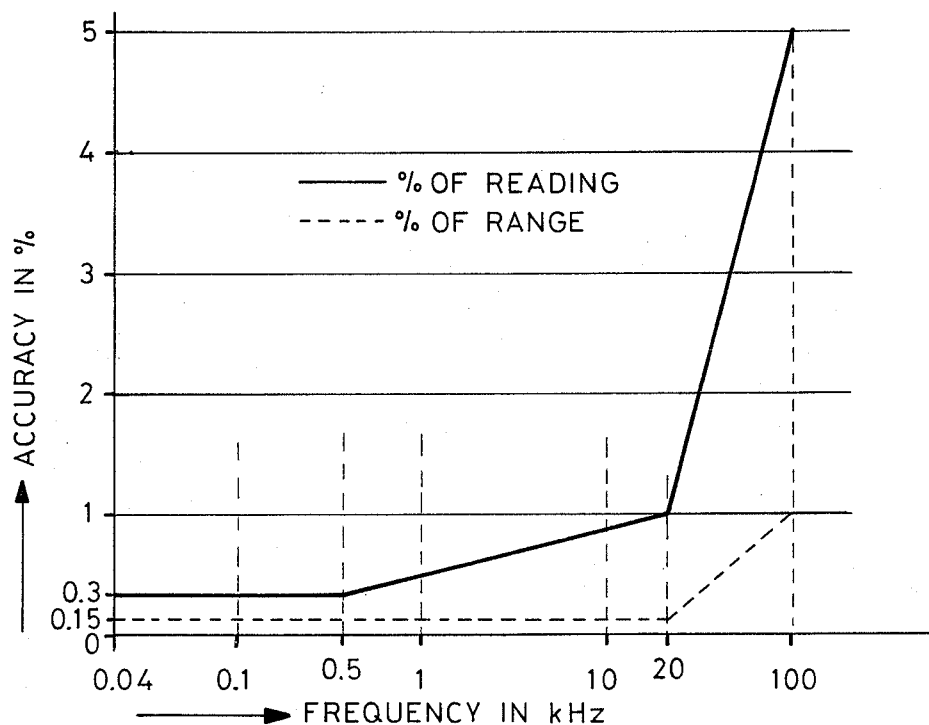

ST 3354

Temperature coefficient

Input impedance

**Range 2000 V**40 Hz - 60 Hz  $\pm (0.3 \% \text{ of reading} + 0.15 \% \text{ of range})$  $\pm (0.03 \% \text{ of reading } / ^\circ\text{C} + 0.01 \% \text{ of range } / ^\circ\text{C})$ 

| Range           | Input impedance      |
|-----------------|----------------------|
| 200 mV<br>2 V   | 20 M $\Omega$ /60 pF |
| 20 V            | 11 M $\Omega$ /85 pF |
| 200 V<br>2000 V | 10 M $\Omega$ /95 pF |

Common Mode Rejection Ratio (CMRR)

AC detector

Crest factor

Response time

Maximum input voltage

100 dB for dc signals

80 dB for ac signals 50 Hz or 60 Hz  $\pm 1 \%$ 

RMS convertor, ac coupled

2 at range end

1.5 s without ranging

3 s including ranging

In all ranges:

Between Hi and Lo 600 V rms

Between Hi and earth 1000 V rms

Between Lo and earth 400 V rms

Maximum dc voltage 400 V

Maximum VHz product  $10^7$

### 2.1.4. Alternating current measurements

Ranges

|               |   |    |     |
|---------------|---|----|-----|
| $\mu\text{A}$ | 2 | 20 | 200 |
| mA            | 2 | 20 | 200 |
| A             | 2 | 20 |     |

Maximum input current in range 20 A

10 A

Resolution

1 nA in range 2  $\mu\text{A}$

Measured value less than 0.5 % of range is displayed as zero

Number of representation units

2100

Accuracy

40 Hz - 200 Hz  $\pm$  (0.4 % of reading + 0.15 % of range)

(valid between 3 % and 100 % of range)

Temperature coefficient

$\pm$  (0.03 % of reading / $^{\circ}\text{C}$  + 0.01 of range / $^{\circ}\text{C}$ )

Voltage drop over shunt

| Range  | Voltage drop | Frequency |
|--|--------------|-----------|
| 2 $\mu\text{A}$<br>20 $\mu\text{A}$<br>200 $\mu\text{A}$<br>2 mA | < 2.5 mV     | 50 Hz     |
| 20 mA<br>200 mA  | < 25 mV      |           |
| 2 A<br>20 A  | < 250 mV     |           |

AC detector

RMS convertor, ac coupled

Crest factor

2 at range end

Response time

1 s without ranging

3 s including ranging

Protection

Range 2  $\mu\text{A}$  - 20 mA; 250 V rms

Range 200 mA - 20 A are not protected

$I_{\text{max.}}$  = 20 A for 20 seconds

Maximum Common Mode voltage

400 V rms, 560 V peak

Maximum input voltage

In all ranges:

Between Hi and Lo 250 V rms

Between Hi and earth 400 V rms

Between Lo and earth 400 V rms

### 2.1.5. dB measurements (valid in function V~ rms)

Range

-57,7 dB ... +57,7 dB

0 dB reference

1 mW in 600  $\Omega$ , 0.775 V or when selecting the relative reference function with pushbutton ZERO SET at the front of the PM 2521

Resolution

0.1 dB

Measured value less than -57.7 dB is displayed as -99.9 dB

Number of representation units

999

Accuracy

| Signals             | Frequency                          | Accuracy                   |
|---------------------|------------------------------------|----------------------------|
| -31,7 dB ... +47 dB | 40 Hz - 20 kHz<br>20 kHz - 100 kHz | $\pm$ 0.2 dB<br>$\pm$ 1 dB |
| -50 dB ... -31,7 dB | 40 Hz - 20 kHz                     | $\pm$ 2 dB                 |
| -57,7 dB ... -50 dB | 40 Hz - 20 kHz                     | $\pm$ 3 dB                 |
| > +47 dB            | 40 Hz - 500 Hz                     | $\pm$ 1,5 dB               |

Temperature coefficient

0.02 dB/°C

| Signals      | Impedance             |
|--------------|-----------------------|
| 0 V - 1.8 V  | 20 M $\Omega$ //60 pF |
| 1.8 V - 18 V | 11 M $\Omega$ //85 pF |
| 18 V - 600 V | 10 M $\Omega$ //95 pF |

Common Mode Rejection Ratio (CMRR)

100 dB for dc signals

80 dB ac signals 50 Hz or 60 Hz  $\pm$  1 %

AC detector

RMS convertor, ac coupled

Crest factor

2 at range end

Response time

3 s

Relative reference setting

With pushbutton ZERO SET at the front of the PM 2521

Maximum input voltages

In all ranges:

Between Hi and Lo 600 V rms

Between Hi and earth 1000 V rms

Between Lo and earth 400 V rms

Maximum dc voltage 400 V

Maximum VHz product  $10^7$ **2.1.9. Counter measurements (Hz)**

Ranges

|     |    |     |
|-----|----|-----|
| kHz | 10 | 100 |
| MHz | 1  | 10  |

Range selection

Range 100 kHz, 1 MHz and 10 MHz; Manual or automatic  
Range 10 kHz; Manual only

Resolution

0.1 Hz in range 10 kHz

Number of representation units

99999

Accuracy for counter measurements

| Range   | Accuracy                                      |
|---------|---|
| 10 kHz  | $\pm$ (0.005 % of reading + 0.001 % of range) |
| 100 kHz |   |
| 1 MHz   |   |
| 10 MHz  | $\pm$ (0.01 % of reading + 0.001 % of range)  |

Gate time

| Range   | Gate time |
|---------|-----------|
| 10 kHz  | 10 s      |
| 100 kHz | 1 s       |
| 1 MHz   | 100 ms    |
| 10 MHz  | 10 ms     |

Conversion rate

| Range   | Rate         |
|---------|--------------|
| 10 kHz  | 1 conv./10 s |
| 100 kHz | 1 conv./s    |
| 1 MHz   |              |
| 10 MHz  |              |

Trigger mode

On positive going crossings of the + trigger level  
On negative going crossings of the - trigger level

Counter sensitivity

DC to 1 MHz 150 mV peak

1 MHz to 10 MHz 300 mV peak

Resolution 1 mV

Trigger level adjustment

With thumbwheel at the front of the PM 2521

Bereits veröffentlicht : —

Betrifft : Erratum for Technische Daten

Dieses Korrekturblatt enthält die vollständige technische Beschreibung von:

Wechselspannungsmessungen (Abschnitt 2.1.2.)

Wechselstrommessungen (Abschnitt 2.1.4.)

dB-Messungen (Abschnitt 2.1.5.) und

Zählermessungen (Abschnitt 2.1.9.)

Hierdurch werden die Angaben in den genannten Abschnitten der Bedienungsanleitung 9499 470 15901 ungültig.

## 2.1.2. Wechselspannungsmessungen

Bereiche

|    |                     |
|----|---------------------|
| mV | 200                 |
| V  | 2 - 20 - 200 - 2000 |

Maximale Eingangsspannung im 2000 V Bereich 600 V

Auflösung 10  $\mu$ V im 200 mV Bereich

Gemessener Wert kleiner als 0,5 % des Bereichs wird als Null angezeigt.

Anzahl der Anzeigeeinheiten


21000

Fehlergrenze

(geltend zwischen 3 % und 100 % des Bereichs)

**Bereich 200 mV bis einschliesslich 200 V**

|                |  |
|----------------|--|
| 40 Hz - 500 Hz | $\pm (0,3 \% \text{ der Ablesung} + 0,15 \% \text{ des Bereichs})$ |
| bei 20 kHz     | $\pm (1 \% \text{ der Ablesung} + 0,15 \% \text{ des Bereichs})$   |
| bei 100 kHz    | $\pm (5 \% \text{ der Ablesung} + 1 \% \text{ des Bereichs})$      |

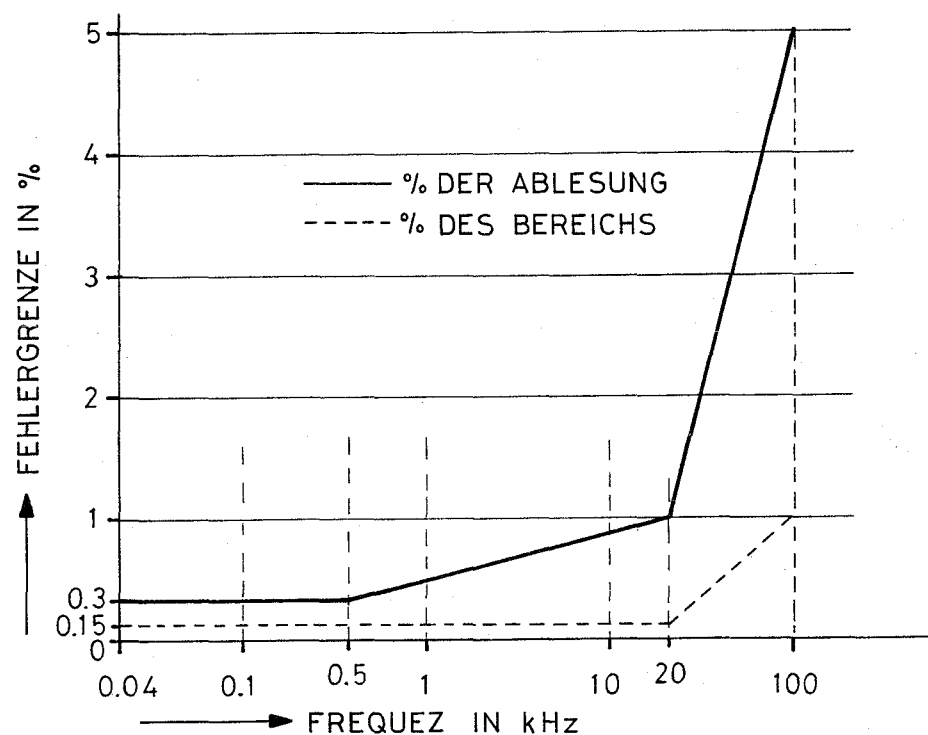

ST 3355

Temperaturkoeffizient

Eingangsimpedanz

Gleichtaktunterdrückung (CMRR)

Wechselspannungsdetektor

Scheitelfaktor

Ansprechzeit

Maximale Eingangsspannungen

**2000 V Bereich**40 Hz - 60 Hz  $\pm (0,3 \% \text{ der Ablesung} + 0,15 \% \text{ des Bereichs})$  $\pm (0,03 \% \text{ der Ablesung} / ^\circ\text{C} + 0,01 \% \text{ des Bereichs} / ^\circ\text{C})$ 

| Bereich         | Eingangsimpedanz      |
|-----------------|-----------------------|
| 200 mV<br>2 V   | 20 M $\Omega$ //60 pF |
| 20 V            | 11 M $\Omega$ //85 pF |
| 200 V<br>2000 V | 11 M $\Omega$ //95 pF |

100 dB für Gleichspannungssignale

80 dB für Wechselspannungssignale 50 oder 60 Hz  $\pm 1 \%$ 

Effektivwertkonverter, wechselspannungsgekoppelt.

2 bei Bereichsende

1,5 s ohne Bereichsumschaltung

3 s einschliesslich Bereichsumschaltung

In allen Bereichen:

Zwischen Hi und Lo 600 V<sub>eff</sub>Zwischen Hi und Erde 1000 V<sub>eff</sub>Zwischen Lo und Erde 400 V<sub>eff</sub>

Maximale Gleichspannung 400 V

Maximales VHz-Produkt  $10^7$ **2.1.4. Wechselstrommessungen**

Bereiche

|               |          |
|---------------|----------|
| $\mu\text{A}$ | 2 20 200 |
| mA            | 2 20 200 |
| A             | 2 20     |

Maximaler Eingangsstrom im 20 A Bereich

10 A

Auflösung

1 nA im 2  $\mu\text{A}$  Bereich

Gemessener Wert kleiner als 0,5 % des Bereichs wird als Null angezeigt

Anzahl der Anzeigeeinheiten

2100

Fehlergrenze

(geltend zwischen 3 % und 100 % des Bereichs)

40 Hz - 200 Hz  $\pm (0,4 \% \text{ der Ablesung} + 0,15 \% \text{ des Bereichs})$ 

Temperaturkoeffizient

 $\pm (0,03 \% \text{ der Ablesung} / ^\circ\text{C} + 0,01 \% \text{ des Bereichs} / ^\circ\text{C})$ 

Spannungsabfall über Shunt

| Bereich  | Spannungsabfall | Frequenz |
|--|-----------------|----------|
| 2 $\mu\text{A}$<br>20 $\mu\text{A}$<br>200 $\mu\text{A}$<br>2 mA | < 2,5 mV        | 50 Hz    |
| 20 mA<br>200 mA  | < 25 mV         |          |
| 2 A<br>20 A  | < 250 mV        |          |

Wechselspannungsdetektor

Effektivwert-Konverter, wechselspannungsgekoppelt

Scheitelfaktor

2 bei Bereichsende

Ansprechzeit

1 s ohne Bereichsumschaltung

3 s einschliesslich Bereichsumschaltung

**Überlastungsschutz**

Bereich  $2\ \mu\text{A} - 20\ \text{mA}$ ;  $250\ V_{\text{eff}}$   
 Bereiche  $200\ \text{mA} - 20\ \text{A}$  sind nicht geschützt  
 $I_{\text{max.}} = 20\ \text{A}$  über 20 Sekunden

**Maximale Gleichtaktspannung**

$400\ V_{\text{eff}}$ ,  $560\ V_{\text{Spitze}}$

**Maximale Eingangsspannung**

In allen Bereichen:  
 Zwischen Hi und Lo  $250\ V_{\text{eff}}$   
 Zwischen Hi und Erde  $400\ V_{\text{eff}}$   
 Zwischen Lo und Erde  $400\ V_{\text{eff}}$

**2.1.5. dB-Messungen (geltend in Funktion V~)****Bereich**

$-57,7\ \text{dB} \dots +57,7\ \text{dB}$

**dB-Nullreferenz**

$1\ \text{mW}$  in  $600\ \Omega$   $0,775\ \text{V}$  oder bei Wahl der relativen Referenzfunktion mit Drucktaste ZERO SET auf der Frontplatte des PM 2521.

**Auflösung**

$0,1\ \text{dB}$

Gemessener Wert kleiner als  $-57,7\ \text{dB}$  wird als  $-99,9\ \text{dB}$  angezeigt

**Anzahl der Anzeigeeinheiten**

999

**Fehlergrenze**

| Signale                                 | Frequenz   | Genauigkeit                                |
|---|--|--|
| $-31,7\ \text{dB} \dots +47\ \text{dB}$ | $40\ \text{Hz} - 20\ \text{kHz}$<br>$20\ \text{kHz} - 100\ \text{kHz}$ | $\pm 0,2\ \text{dB}$<br>$\pm 1\ \text{dB}$ |
| $-50\ \text{dB} \dots -31,7\ \text{dB}$ | $40\ \text{Hz} - 20\ \text{kHz}$                                       | $\pm 2\ \text{dB}$                         |
| $-57,7\ \text{dB} \dots -50\ \text{dB}$ | $40\ \text{Hz} - 20\ \text{kHz}$                                       | $\pm 3\ \text{dB}$                         |
| $> +47\ \text{dB}$                      | $40\ \text{Hz} - 500\ \text{Hz}$                                       | $\pm 1,5\ \text{dB}$                       |

**Temperaturkoeffizient**

$0,02\ \text{dB}/^\circ\text{C}$

**Eingangsimpedanz**

| Signale              | Impedanz                              |
|----------------------|---------------------------------------|
| $0 - 1,8\ \text{V}$  | $20\ \text{M}\Omega // 60\ \text{pF}$ |
| $1,8 - 18\ \text{V}$ | $11\ \text{M}\Omega // 85\ \text{pF}$ |
| $18 - 600\ \text{V}$ | $11\ \text{M}\Omega // 95\ \text{pF}$ |

**Gleichtaktunterdrückung (CMRR)**

$100\ \text{dB}$  für Gleichspannungssignale  
 $80\ \text{dB}$  Wechselspannungssignale  $50\ \text{Hz}$  oder  $60\ \text{Hz} \pm 1\ \%$

**Wechselspannungsdetektor**

Effektivwert-Konverter, wechselspannungsgekoppelt

**Scheitelfaktor**

2 bei Bereichsende

**Ansprechzeit**

3 s

**Relative Referenzeinstellung**

Mit Drucktaste ZERO SET auf der Frontplatte des PM 2521

**Maximale Eingangsspannungen**

In allen Bereichen:  
 Zwischen Hi und Lo  $600\ V_{\text{eff}}$   
 Zwischen Hi und Erde  $1000\ V_{\text{eff}}$   
 Zwischen Lo und Erde  $400\ V_{\text{eff}}$

Maximale Gleichspannung  $400\ \text{V}$   
 Maximales VHz Produkt  $10^7$

**2.1.9. Frequenzmessungen (Hz)****Bereiche**

|     |    |     |
|-----|----|-----|
| kHz | 10 | 100 |
| MHz | 1  | 10  |

**Bereichswahl**

Bereich  $100\ \text{kHz}$ ,  $1\ \text{MHz}$  und  $10\ \text{MHz}$ : manuell oder automatisch  
 Bereich  $10\ \text{kHz}$ : nur manuell

Auflösung

0,1 Hz im 100 kHz Bereich

Anzahl der Anzeigeeinheiten

99999

Fehlergrenze für Zählermessungen

| Bereich                    | Fehler   |
|----------------------------|--|
| 10 kHz<br>100 kHz<br>1 MHz | $\pm (0,005 \% \text{ der Anzeige} + 0,001 \% \text{ des Bereichs})$ |
| 10 MHz                     | $\pm (0,01 \% \text{ der Anzeige} + 0,001 \% \text{ des Bereichs})$  |

Torzeit

| Bereich | Torzeit |
|---------|---------|
| 10 kHz  | 10 s    |
| 100 kHz | 1 s     |
| 1 MHz   | 100 ms  |
| 10 MHz  | 10 ms   |

Umsetzrate

| Bereich                    | Rate       |
|----------------------------|------------|
| 10 kHz                     | 1 Um./10 s |
| 100 kHz<br>1 MHz<br>10 MHz | 1 Um./s    |

Triggerart

Auf positiv gehende Überschreitungen des "+" Triggerpegels  
 Auf negativ gehende Überschreitungen des "-" Triggerpegels

Zählerempfindlichkeit

DC bis 1 MHz; 150 mV<sub>peak</sub>  
 10 MHz bis 10 MHz; 300 mV<sub>peak</sub>  
 Auflösung: 1 mV

Triggerpegeljustierung

Mittels Daumenrad auf der Frontplatte des PM 2521



Déjà publié : —  
 Concerne : Erratum caractéristiques techniques

Le présent erratum donne les spécifications complètes de:

Mesures de tensions alternatives (section 2.1.2.)  
 Mesures de courants alternatifs (section 2.1.4.)  
 Mesures de dB (section 2.1.5.) et  
 Mesures par compteur (section 2.1.9.)

Conformément à la présente information, les spécifications données dans les sections mentionnées du mode d'emploi 9499 470 15901 ne sont plus valables.

## 2.1.2. Mesures de tension alternative

Gammes

|    |               |
|----|---------------|
| mV | 200           |
| V  | 2 20 200 2000 |

Tension maximale d'entrée dans la gamme  
 2000 V

600 V

Résolution

10  $\mu$ V dans la gamme 200 mV


Une valeur mesurée inférieure à 0,5 % de gamme est affichée  
 comme zéro

Nombre d'unités de représentation

21000

Précision (valable entre 3 % et 100 %  
 de gamme)

| Gamme 200 mV à 200 V inclus |   |
|-----------------------------|---|
| 40 Hz - 500 Hz              | $\pm (0,3 \% \text{ d'affichage} + 0,15 \% \text{ de gamme})$ |
| a 20 kHz                    | $\pm (1 \% \text{ d'affichage} + 0,15 \% \text{ de gamme})$   |
| a 100 kHz                   | $\pm (5 \% \text{ d'affichage} + 1 \% \text{ de gamme})$      |

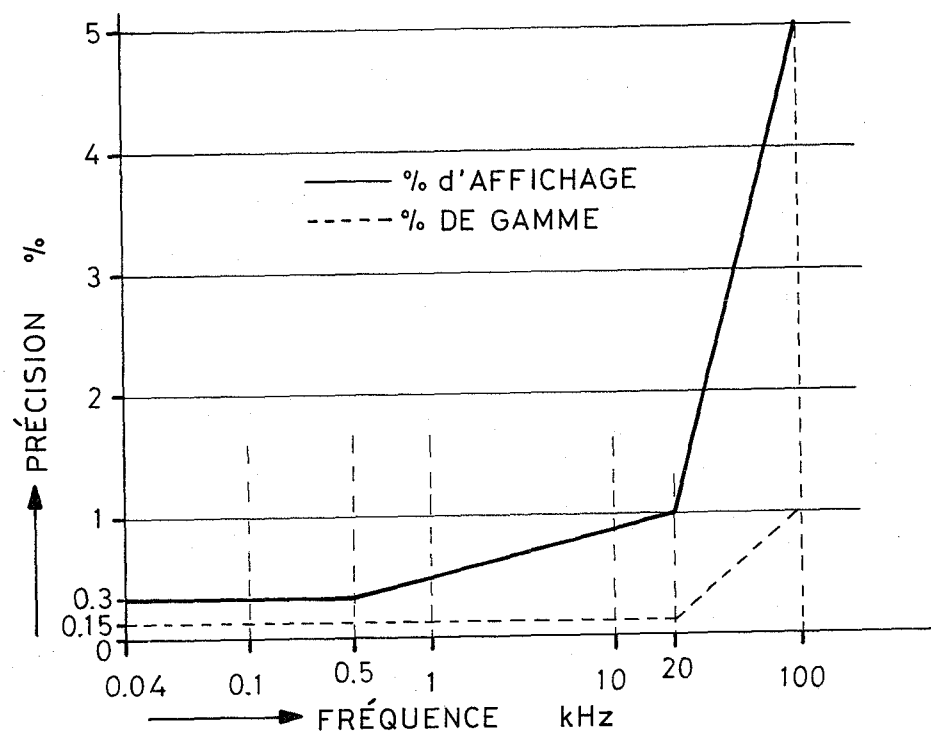

ST 3356

Coefficient de température

Impédance d'entrée

Réjection en mode commun (CMRR)

Déecteur alternatif

Facteur de crête

Temps de réponse

Tensions maximale d'entrée

**Gamme 2000 V**40 Hz à 60 Hz  $\pm (0,3 \% \text{ d'affichage} + 0,15 \% \text{ de gamme})$  $\pm (0,03 \% \text{ de l'affichage} / ^\circ\text{C} + 0,01 \% \text{ de gamme} / ^\circ\text{C})$ 

| Gamme           | Impédance d'entrée    |
|-----------------|-----------------------|
| 200 mV<br>2 V   | 20 M $\Omega$ //60 pF |
| 20 V            | 11 M $\Omega$ //85 pF |
| 200 V<br>2000 V | 10 M $\Omega$ //95 pF |

100 dB pour signaux continus

80 dB pour signaux alternatifs ou 50 ou 60 Hz  $\pm 1 \%$ 

Convertisseur efficace, couplage capacitif

2 en fin de gamme

1,5 s sans sélection automatique de gamme

3 s avec sélection automatique de gamme

Dans toutes les gammes:

entre Hi et Lo 600 V<sub>eff</sub>entre Hi et terre 1000 V<sub>eff</sub>entre Lo et terre 400 V<sub>eff</sub>

Tension maximale continu: 400 V

Produit VHz maxi:  $10^7$ **2.1.4. Mesures de courant alternatif**

Gammes

|               |          |
|---------------|----------|
| $\mu\text{A}$ | 2 20 200 |
| mA            | 2 20 200 |
| A             | 2 20     |

Courant maximal d'entrée dans la  
gamme 20 A

Résolution

Nombre d'unités de représentation

Précision

Coefficient de température

Perte de tension par le shunt

10 A

1 nA dans la gamme 2  $\mu\text{A}$ Valeur mesurée inférieure à 0,5 % de la gamme est affichée  
comme zéro

2100

40 Hz - 200 Hz  $\pm 0,4 \% \text{ de l'affichage} + 0,15 \% \text{ de la gamme})$  $\pm (0,03 \% \text{ de l'affichage} / ^\circ\text{C} + 0,01 \% / ^\circ\text{C de gamme})$ 

| Gamme  | Perte de tension | Fréquence |
|--|------------------|-----------|
| 2 $\mu\text{A}$<br>20 $\mu\text{A}$<br>200 $\mu\text{A}$<br>2 mA | < 2,5 mV         | 50 Hz     |
| 20 mA<br>200 mA  | < 25 mV          |           |
| 2 A<br>20 A  | < 250 mV         |           |

Déecteur alternatif

Facteur de crête

Temps de réponse

Convertisseur efficace, couplage capacitif

2 en fin de gamme

0,7 s sans sélection automatique de gamme

3 s avec sélection automatique de gamme

**Protection**

Gamme  $2 \mu\text{A} - 20 \text{ mA}$ ;  $250 V_{\text{eff}}$   
 Gamme  $200 \text{ mA} - 20 \text{ A}$ ; n'est pas protégée  
 $I_{\text{max.}} = 20 \text{ A}$  pendant 20 secondes

**Tension maxi en mode commun**

$400 V_{\text{eff}}$ ,  $560 \text{ V}$  crête

**Tension maxi d'entrée**

dans toutes les gammes:

entre Hi en Lo  $250 V_{\text{eff}}$   
 entre Hi et terre  $400 V_{\text{eff}}$   
 entre Lo et terre  $400 V_{\text{eff}}$

**2.1.5. Mesures dB (valables en fonction  $V \sim \text{rms}$ )****Gamme**

$-57,7 \text{ dB}$  à  $+57,7 \text{ dB}$

**0 dB référence**

$1 \text{ mW}$  pour  $600 \Omega$   $0,775 \text{ V}$  ou en sélectionnant la référence relative à l'aide du bouton-poussoir ZERO SET à l'avant du PM 2521

**Résolution**

$0,1 \text{ dB}$

Valeur mesurée inférieure à  $-57,7 \text{ dB}$  est affichée comme  $-99,9 \text{ dB}$

**Nombre d'unités de représentation**

999

**Précision**

| Signaux                                 | Frequence  | Précision                                  |
|---|--|--|
| $-31,7 \text{ dB} \dots +47 \text{ dB}$ | $40 \text{ Hz} - 20 \text{ kHz}$<br>$20 \text{ kHz} - 100 \text{ kHz}$ | $\pm 0,2 \text{ dB}$<br>$\pm 1 \text{ dB}$ |
| $-50 \text{ dB} \dots -31,7 \text{ dB}$ | $40 \text{ Hz} - 20 \text{ kHz}$                                       | $\pm 2 \text{ dB}$                         |
| $-57,7 \text{ dB} \dots -50 \text{ dB}$ | $40 \text{ Hz} - 20 \text{ kHz}$                                       | $\pm 3 \text{ dB}$                         |
| $> +47 \text{ dB}$                      | $40 \text{ Hz} - 500 \text{ Hz}$                                       | $\pm 1,5 \text{ dB}$                       |

**Coefficient de température**

$0,02 \text{ dB}/^\circ\text{C}$

**Impédance d'entrée**

| Signaux              | Impédance                             |
|----------------------|---------------------------------------|
| $0 - 1,8 \text{ V}$  | $20 \text{ M}\Omega // 60 \text{ pF}$ |
| $1,8 - 18 \text{ V}$ | $11 \text{ M}\Omega // 85 \text{ pF}$ |
| $18 - 600 \text{ V}$ | $10 \text{ M}\Omega // 95 \text{ pF}$ |

**Réjection en mode commun (CMRR)**

$100 \text{ dB}$  pour signaux continus  
 $80 \text{ dB}$  pour signaux alternatifs  $50$  ou  $60 \text{ Hz} \pm 1 \%$

**Détecteur alternatif**

Convertisseur efficace, couplage capacitif

**Facteur de crête**

2 en fin de gamme

**Temps de réponse**

3 s

**Réglage de référence relative**

Avec bouton-poussoir ZERO SET à l'avant du PM 2521

**Tensions maximales d'entrée**

Dans toutes les gammes:

entre Hi et Lo  $600 V_{\text{eff}}$   
 entre Hi et terre  $1000 V_{\text{eff}}$   
 entre Lo et terre  $400 V_{\text{eff}}$

Tension maximale en continu:  $400 \text{ V}$   
 Produit  $V\text{Hz}$  maxi:  $10^7$

**2.1.9. Mesures de fréquence (Hz)****Gammes**

|     |    |     |
|-----|----|-----|
| kHz | 10 | 100 |
| MHz | 1  | 10  |

**Sélection de gamme**

Gamme  $100 \text{ kHz}$ ,  $1 \text{ MHz}$  et  $10 \text{ MHz}$ ; manuelle ou automatique

Gamme  $10 \text{ kHz}$ ; manuelle

**Résolution**

$0,1 \text{ Hz}$  dans la gamme  $10 \text{ kHz}$

**Nombre d'unités de représentation**

99999

## Précision pour les mesures de fréquence

| Gamme                      | Précision  |
|----------------------------|--|
| 10 kHz<br>100 kHz<br>1 MHz | $\pm (0,005 \% \text{ d'affichage} + 0,001 \% \text{ de gamme})$ |
| 10 MHz                     | $\pm (0,01 \% \text{ d'affichage} + 0,001 \% \text{ de gamme})$  |

## Temps de porte

| Gamme   | Temps de porte |
|---------|----------------|
| 10 kHz  | 10 s           |
| 100 kHz | 1 s            |
| 1 MHz   | 100 ms         |
| 10 MHz  | 10 ms          |

## Taux de conversion

| Gamme                      | Taux         |
|----------------------------|--------------|
| 10 kHz                     | 1 conv./10 s |
| 100 kHz<br>1 MHz<br>10 MHz | 1 conv./s    |

## Mode de déclenchement

Par dépassement positif du niveau de déclenchement +  
Par dépassement négatif du niveau de déclenchement -

## Sensibilité de compteur

continu à 1 MHz; 150 mV<sub>crête</sub>  
10 MHz à 100 MHz; 300 mV<sub>crête</sub>  
Résolution: 1 mV

## Réglage du niveau de déclenchement

Avec bouton moleté à l'avant



# PHILIPS

# SERVICE

Scientific & Analytical Equipment  
Test & Measuring Instruments  
Industrial Automation  
Advanced Automation Systems  
Welding

Scientific &  
Industrial  
Equipment  
Division

820607

PM2521

SME95

Already issued : SME93, SME94  
Re : Modifications to the PM2521

From serial number DM 01 3010 on, the PM2521 complies with the VDE safety specifications.  
This modifies the safety input sockets, safety mains cord, etc.  
The service manual of the PM2521 (9499 475 01911), SME93, SME94 and this information sheet should be used.

## 1. Modification to the part list

| Chapter                      | Part                           | Old code number | New code number                                 |
|------------------------------|--------------------------------|-----------------|---|
| 5.2.                         | Carrying handle                | 5322 498 50126  | 5322 <del>532 14709</del> <sup>498 45 105</sup> |
| 5.3.                         | Front                          | 5322 447 74009  | 5322 447 70000 <sup>53</sup>                    |
| 5.3.                         | TL Potentiometer knob          | 5322 414 34269  | 5322 414 30035                                  |
| 5.5.1.                       | Input sockets                  | 5322 532 14709  | 5322 267 30435                                  |
| 5.5.1.                       | Switch for high current ranges | 5322 492 62405  | deleted   |
| 5.5.2.                       | 10A shunt                      | 5322 115 84046  | 5322 115 80115                                  |
| <i>Netzsch ohne Erdstift</i> |                                |                 | 5322 267 30 434                                 |
| Additions to the part list.  |                                |                 |   |

|                  |                |
|------------------|----------------|
| Test prod. black | 5322 264 20045 |
| Test prod. red   | 5322 264 20064 |
| Lead black       | 5322 321 20572 |
| Lead red         | 5322 321 20573 |

## 2. Modifications to circuit diagrams

The following diagram must be used to adapt the transformer (refer to fig. 58. of the service manual).

9499 478 12611

PRINTED IN THE NETHERLANDS






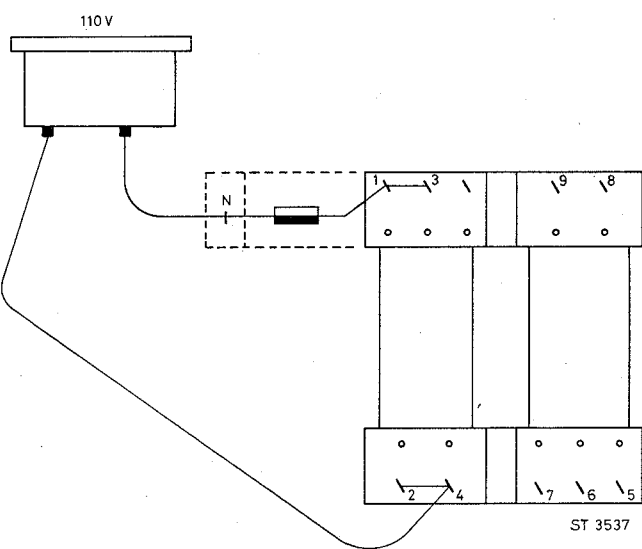


Fig. 58. Adapting the mains transformer

ST 3537

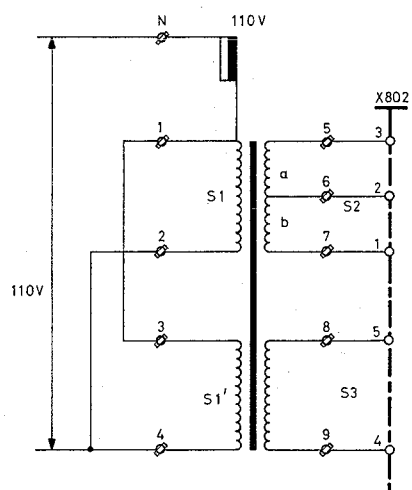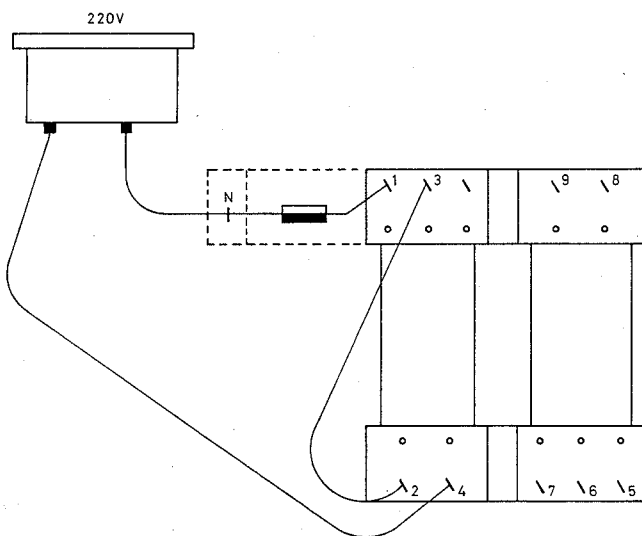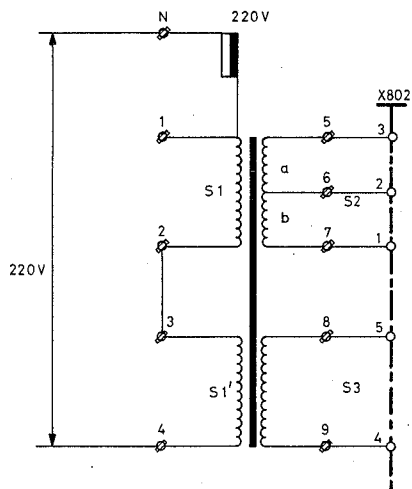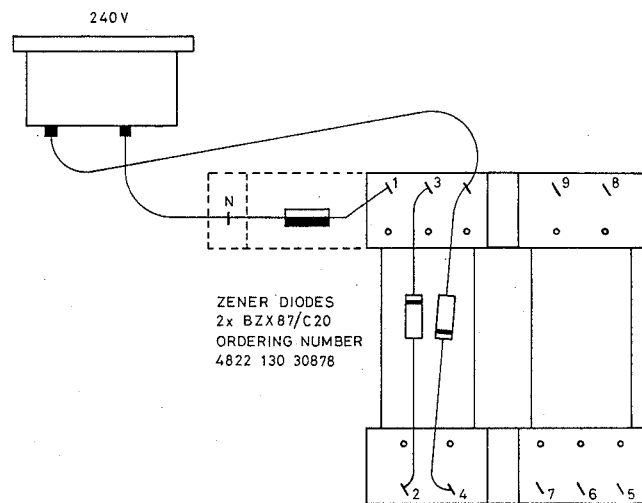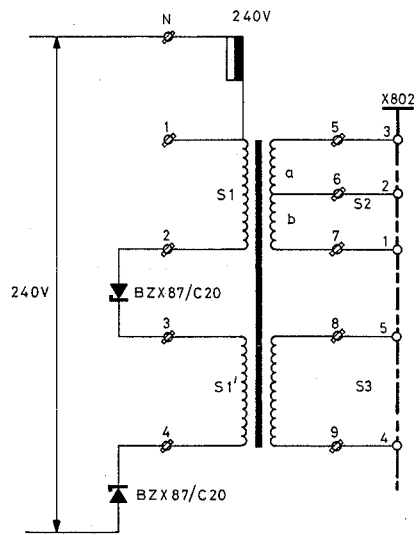

# PHILIPS

# SERVICE

Scientific & Analytical Equipment  
Test & Measuring Instruments  
Industrial Automation  
Advanced Automation Systems  
Welding

Scientific &  
Industrial  
Equipment  
Division

820214

PM 2521

SME101

Already issued :SME 93, SME 94, SME 95.  
Re :1. Erratum of SME 95  
2. Replacement of ROM's (2x2k--->1x4k)

As documentation for the PM 2521 the service manual 9499 475 01911, SME 93, SME 94, SME 95 and this information sheet should be used.

## 1. Erratum of SME 95

The following code numbers should be added and modified.

| Chapter | Part            | Old code number | New code number |
|---------|-----------------|-----------------|-----------------|
| 5.1     | Mains connector | 5322 267 44135  | 5322 267 30434  |
| 5.2     | Carrying handle | 5322 498 50126  | 5322 498 54105  |
| 5.3     | Front           | 5322 447 74009  | 5322 447 70053  |
|         | Test prod. red  | 5322 264 20064  | 5322 264 20046  |

## 2. ROM's (2x2k--->1x4k)

From serial number DY 02 6611 onwards, the PM 2521/02... is supplied with one 4k ROM.



| POS.NR. | Description | Ordering code  | Replaced by    | Description |
|---------|-------------|----------------|----------------|-------------|
| D1909   | ROM (2k)    | 5322 209 54696 | obsolete       |             |
| D1920   | ROM (2k)    | 5322 209 54699 | 5322 209 81665 | ROM (4k)    |

If an instrument, with 2x2k ROM's, has to be modified to an instrument with a 4k ROM, proceed as follows:

- Unsolder the two soldering spots (see fig 1 and fig 2 item 1)
- Repair the track interruption (see fig 1 item 2)
- Place a jumper. Ordering code 5322 263 64007 (see fig 1 item 3)

9499 478 13211

PRINTED IN THE NETHERLANDS

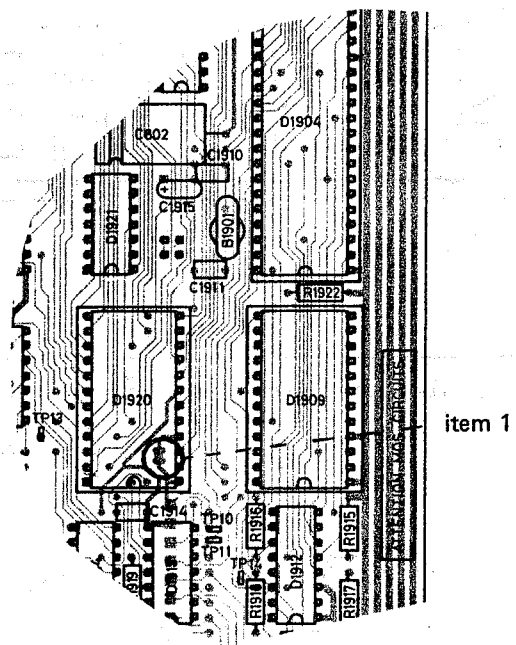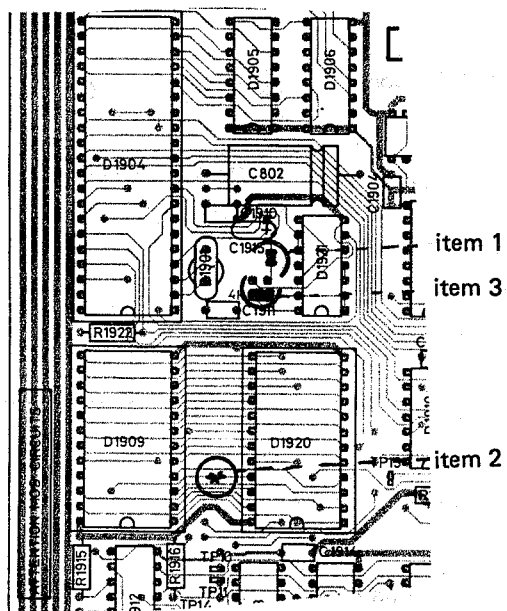





# PHILIPS

## SERVICE

Scientific & Analytical Equipment  
Test & Measuring Instruments  
Industrial Automation  
Advanced Automation Systems  
Welding

Scientific &  
Industrial  
Equipment  
Division

830916

PM 2521

SME 107

1. Review of the service publications already issued.
2. Review of the existing versions.

1. Review of service publications.
  - standard service manual
  - service informations SME 93, SME 94, SME 107.

Attention: This service information (SME 107) replaces SME 95 and SME 101.

2. Existing versions.
  - 2.1 PM 2521/01 up to serialnumber DY 3010.  
This is the standard version, see the service manual.
  - 2.2 PM 2521/02 from serialnumber DY 3010 onwards.  
The instruments comply with the VDE safety specifications.

Modifications with respect to version PM 2521/01:

- Service parts list

| Part                           | Code number    |
|--------------------------------|----------------|
| Mains connector                | 5322 267 30434 |
| Front                          | 5322 447 70053 |
| TL Potentiometer knob          | 5322 414 30035 |
| Input sockets                  | 5322 267 30435 |
| Switch for high current ranges | deleted        |
| 10 A shunt                     | 5322 115 80115 |
| Test prod. black               | 5322 264 20045 |
| Test prod. red                 | 5322 264 20046 |
| Lead black                     | 5322 321 20572 |
| Lead red                       | 5322 321 20573 |

- Circuit diagrams

The following diagram must be used to adapt the transformer (refer to fig. 58 of the service manual).

9499 478 13811

PRINTED IN THE NETHERLANDS

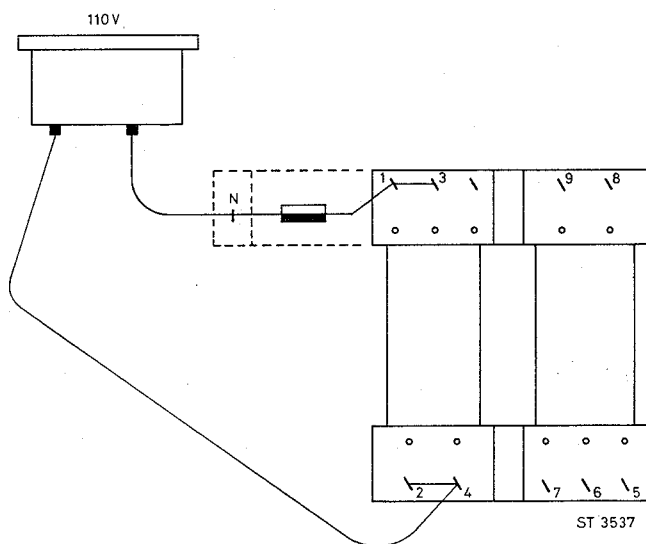
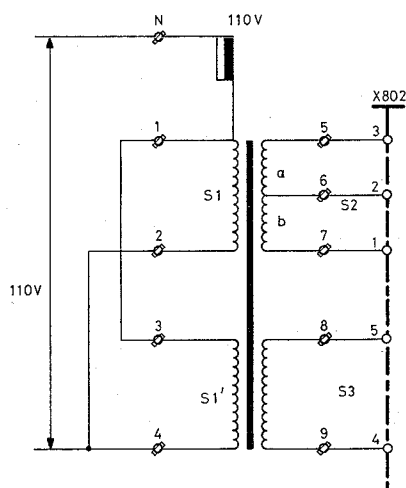
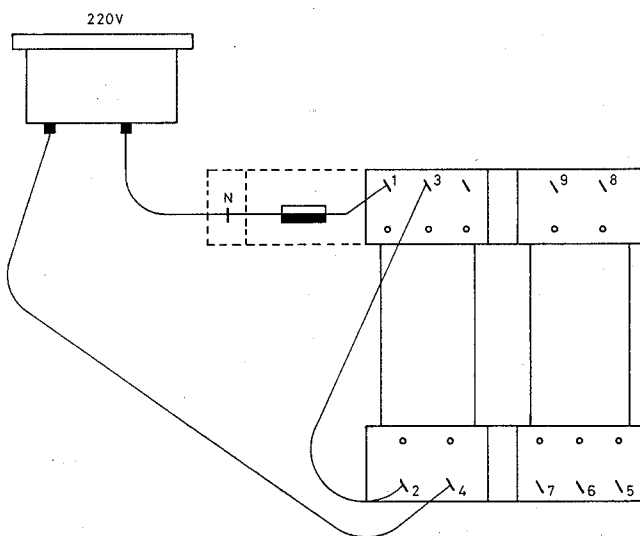
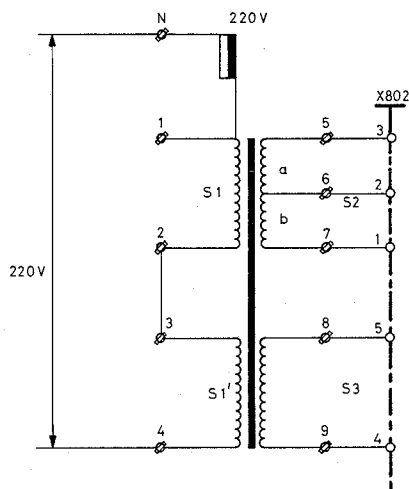
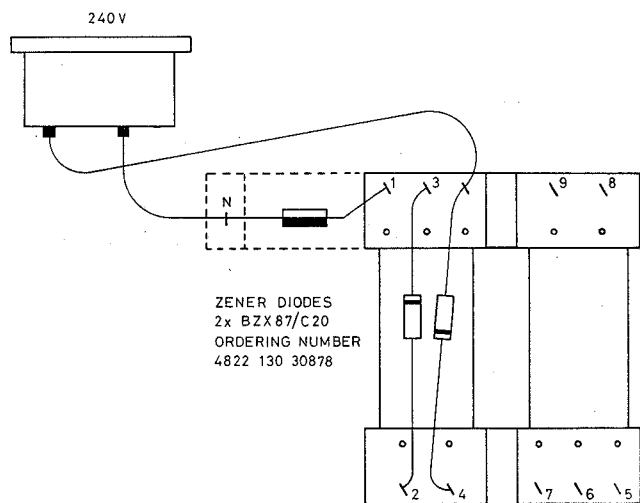
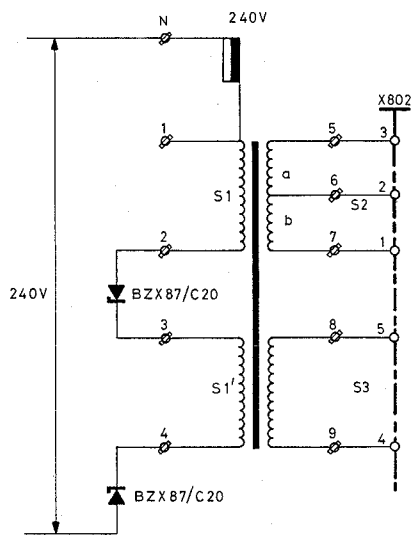


Fig. 58. Adapting the mains transformer

### 2.3 PM 2521/02 from serialnumber DY 6611 onwards.

These instruments are provided with a 4K ROM.

| Pos.no | Description | Ordering code  | Replaced by    | Description |
|--------|-------------|----------------|----------------|-------------|
| D1909  | ROM (2K)    | 5322 209 54696 | obsolete       |             |
| D1920  | ROM (2K)    | 5322 209 54697 | 5322 209 81665 | ROM (4K)    |

If an instrument, with 2x2K ROM's, has to be modified to an instrument with a 4K ROM, proceed as follows:

- Unsolder the two soldering spots (see fig. 1 and 2 item 1)
- Repair the track interruption (see fig. 1 item 2)
- Place a jumper. Ordering code 5322 263 64007 (see fig. 1 item 3)

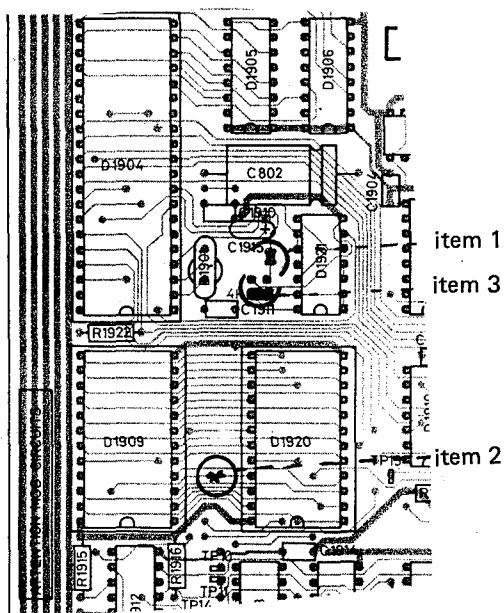


Fig. 1. Main p.c.b. lay-out, component side

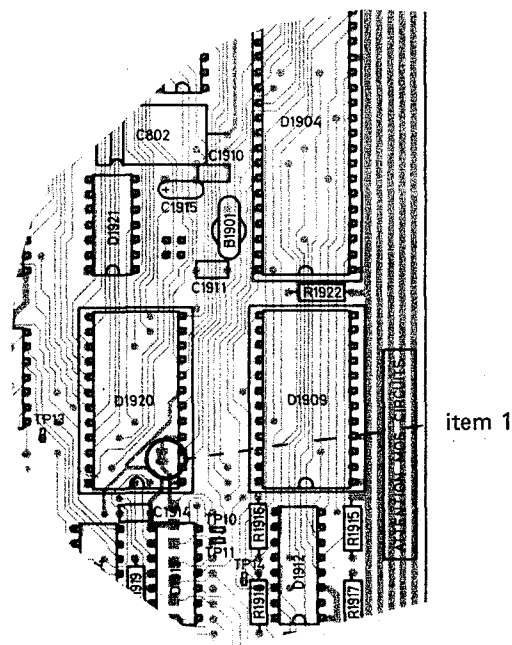


Fig. 2. Main p.c.b. lay-out, conductor side

2.4 PM 2521/03 from serial number DY 7611 onwards.

The instruments are delivered in the new colours. (brown)

Modifications with respect to version PM 2521/02

- service parts list

| Part                      | Codenummer     |
|---------------------------|----------------|
| Input sockets             | 5322 267 30487 |
| Top cover assy.           | 5322 694 54017 |
| Bottom cover assy.        | 5322 447 70069 |
| Front                     | 5322 447 70071 |
| Function selector         | 5322 414 40016 |
| Adjust knob               | 5322 414 40019 |
| Knob for mains switch     | 5322 414 20034 |
| Knobs for range selection | 5322 414 60037 |
| Handle                    | 5322 498 54105 |

2.5 PM 2521/22 and PM 2521/23 (battery versions of the PM 2521)

The difference between the PM 2521/22 and the PM 2521/23 is that the PM 2521/22 is delivered in the old colours and the PM 2521/23 in the new colours.

Therefore the service manual for the PM 2521/22 version has to be used for the PM 2521/23 as well.

## 1. CIRCUIT DESCRIPTION

### 1.1. GENERAL

The circuit of the Automatic Multimeter PM2521 can be subdivided into three main functional sections as shown in Fig. 1.:

- Analog section
- Control section
- Display section

Each of the sections is described separately in conjunction with the overall circuit diagrams (Fig. 62, 63 and 64).

However, basic circuit diagrams of the various stages are included, within the text, where considered necessary to assist in a better understanding of the more complex parts of the overall circuit. For the principles of operation of the instrument, the reader is referred to the PM2521 Operating Manual.

### 1.2. SURVEY OF MAIN SECTIONS

The functional circuit blocks within the three main sections, analog, control and display and the basic signal paths are shown in block diagram Fig. 2.

#### 1.2.1. Analog section

The analog section comprises the following input measuring signal facilities:

- a) A voltage measuring path consisting of:
  - A.C./D.C. voltage attenuator
  - R.M.S. convertor (OQ 0061)
  - Active filter
  - ADC (OQ 0064/OQ 0060)
- b) A current measuring path consisting of:
  - A.C./D.C. active I-V convertor
  - R.M.S. convertor
  - Active filter
  - ADC
- c) A resistance/diode measuring path consisting of:
  - Current source (OQ 0063)
  - Active filter
  - ADC
- d) A temperature measuring path consisting of:
  - Thomson bridge
  - Current source
  - ADC
- e) A timer/counter path consisting of:
  - A.C./D.C. voltage attenuator
  - Trigger level circuit

*NOTE: The OQ integrated circuits used in this instrument are specially designed LSI circuits for multimeter applications to ensure high accuracy and stability.*

# Automatic Multimeter PM2521

Instruction Manual

9499 473 00111  
820701

Repair by  
Signature Analysis

**S&I**

Scientific & Industrial Equipment Division



**PHILIPS**


# Automatic Multimeter PM2521

## Repair by Signature Analysis

### Instruction Manual

9499 473 00111

820701

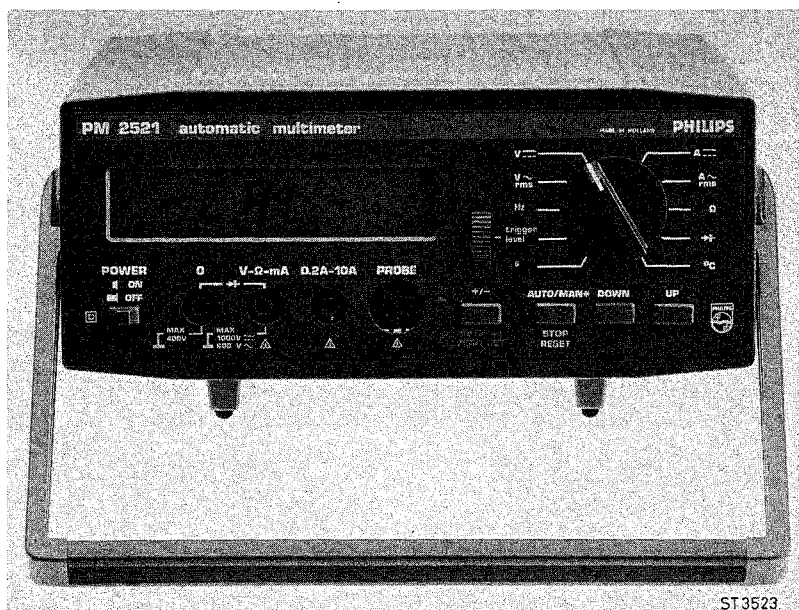

# PHILIPS

## CONTENTS

## Page

|       |  |    |
|-------|--|----|
| 1.    | General . . . . .  | 1  |
| 2.    | Why use a signature analyser? . . . . .                                      | 1  |
| 3.    | Check with a signature analyser . . . . .                                    | 1  |
| 4.    | Type of signature analyser to be used . . . . .                              | 1  |
| 5.    | Settings and connection of the signature analyser . . . . .                  | 2  |
| 6.    | Brief description of the tests . . . . .                                     | 2  |
| 7.    | How to use the documentation and the testrom? . . . . .                      | 3  |
| 8.    | Fault-finding hints . . . . .  | 3  |
| 9.    | How to order the signature analysis testrom and the documentation? . . . . . | 3  |
| 10.   | Testing the PM2521 . . . . .   | 4  |
| 10.1. | General . . . . .  | 4  |
| 10.2. | Free Run test . . . . .  | 5  |
| 10.3. | Ram and I/O test . . . . . test 0 . . . . .                                  | 7  |
| 10.4. | Visual LCD test . . . . . test 1 . . . . .                                   | 9  |
| 10.5. | Switch decoding test . . . . . test 2 . . . . .                              | 10 |
| 10.6. | Relay and FET test . . . . . test 3 . . . . .                                | 11 |
| 10.7. | Static relay and FET test . . . . . test 4 . . . . .                         | 12 |
| 10.8. | Counter and counter input control test . . . . . test 5 . . . . .            | 14 |
| 10.9. | Interrupt controller test . . . . . test 6 . . . . .                         | 15 |



## REPAIR BY SIGNATURE ANALYSIS

### 1. GENERAL

For repair by signature analysis a testrom has been developed.

This testrom enables the user to test the digital part of the PM2521 by means of signature analysis.

It also enables troubleshooting at component level in the circuit under test, by comparing the actual signature to the correct one. So the trouble-shooter can trace back the faulty node.

In total there are 8 tests. In the testrom 7 tests have been implemented and one test is made with the help of the free run facility of the PM2521.

### 2. WHY USE A SIGNATURE ANALYSER ?

Thanks to the microcomputer in the digital part of the PM2521, the instrument can be very small.

Due to this the bus structure is very complex. Data flow on the bus becomes complex and cannot be analysed with an oscilloscope and voltmeter any longer. Therefore the need to test and service the digital part is acute.

The trouble-shooting involves the detection of circuit failure and the localization of faults at the source.

Finding the fault source in a bus system, such as the bus in the PM2521, with complex feedbacks can be difficult. But opening the feedbacks paths and using the signature analyser makes fault-finding easy.

### 3. CHECK WITH A SIGNATURE ANALYSER

The signature analyser checks the digital part of the PM2521 by detecting the bit stream at various circuits nodes, and displaying them as hexadecimal signatures.

To do this the PM2521 supplies the signature analyser with three gating signals, or in some cases four:

START, STOP, CLOCK and QUALIFIER.

START signals the beginning of a measurement and prepares the signature analyser to receive information from the data probe. STOP closes this measurement. In cases of measuring signatures with RC delays, a QUALIFIER has to be used to stop the incoming information for a short period of time. The CLOCK is the system clock of the PM2521 under test to accept the data synchronously.

*NOTE: The active edge of each of these gating signals must be selectable.*

 
 



### 4. TYPE OF SIGNATURE ANALYSER TO BE USED ?

The signature analyser to be used in combination with the PM2521 should have the following capabilities:

- Selectable edges of; START, STOP and CLOCK
- A QUALIFIER
- Signatures in the following sequence:

| DIGIT | DISPLAY | DIGIT | DISPLAY |
|-------|---------|-------|---------|
| 0000  | 0       | 1000  | 8       |
| 0001  | 1       | 1001  | 9       |
| 0010  | 2       | 1010  | A       |
| 0011  | 3       | 1011  | C       |
| 0100  | 4       | 1100  | F       |
| 0101  | 5       | 1101  | H       |
| 0110  | 6       | 1110  | P       |
| 0111  | 7       | 1111  | U       |

## 5. SETTINGS AND CONNECTION OF THE SIGNATURE ANALYSER.

| SETTING SIGNATURE ANALYSER |   | CONNECTION SIGNATURE ANALYSER |             |                           |
|----------------------------|---|-------------------------------|-------------|---------------------------|
| NAME                       | EDGE  | NAME                          | TESTPOINT   | SIGNAL NAME               |
| START                      |  (neg) | START                         | TP 14       | <b>P17</b> (D1904 pin 34) |
| STOP                       |  (pos) | STOP                          | TP 14       | <b>P17</b> (D1904 pin 34) |
| CLOCK                      |  (pos) | CLOCK                         | TP 15       | ALE (D1911 pin 11)        |
| GROUND                     | ---   | GROUND                        | TP 1        | Logic 0                   |
|                            |  (neg) |                               | D1903 pin 7 | <b>AZC/P</b>              |
| QUALIFIER                  |  (pos) | QUALIFIER                     | D1903 pin 2 | <b>AZ</b>                 |

**NOTE:** 1. The qualifier is only necessary for test 3 and 5.  
2. The testrom must be placed in the D1909 socket.

## 6. BRIEF DESCRIPTION OF THE TESTS

### Free run test

With this test it is possible to measure signatures on the address latches and the databus of the processor. This is necessary to check if the data can be taken from the testrom.

### Test 0 (ram and I/O test)

This test checks the internal RAM of the microcomputer. When the RAM is good it will also test the I/O ports of the microcomputer. Only then can signatures be measured on the I/O ports, databus and ROMs. It also activates the connections of the L.C.D. unit.

### Test 1 (visual L.C.D. test, no S.A.)

The test fills the display, segment after segment. When a connection to a segment is broken, that segment will not light. When two connections are short circuit, then two segments will be lit simultaneously. In this test signature analysis is not provided.

### Test 2 (switch decoding test)

Test 2 activates the circuit necessary for reading the function switch, and the +/—, AUTO, DOWN, UP, 10 Amp. input bus, and the battery low input. Signatures can be measured on IC's D1912, D1916, D1919 and on I/O port 2. (P20', P21', P22', P23' and **P25**). The signatures on **P25** depends on the position of the function switch and keys, pressed or not pressed.

### Test 3 (relay/fet switch test)

This test activates the circuit for relay/fet switch control. Signatures can be measured on the inputs of D1908, and the outputs driving the relays. The outputs of D1908 are activated sequentially. Outputs driving the fet's will give stable signatures, but with an oscilloscope it is also possible to see if the fet's are switching.

### Test 4 (static relay/fet switch test, no S.A.)

This test is not intended for signature analysis. It sets the relay/fet's in the state, according to the selected function and range. It can also change the internal program status. With the button +/—, the polarity can be changed if the V<sub>—</sub>, A<sub>—</sub>, or the function trigger level is selected. With the button AUTO/MAN\*, the internal program status can be changed. (normal measurements, AUTOCAL 0,1V or 1V, IZERO 200mA or 2A). So it is possible to make measurements in the analog part of the PM2521.

**Test 5 (counter test)**

Test 5 activates the counter and counter input control circuit, and the AZC flip-flop D1903. Signature analysis is possible.

**Test 6 (interrupt controller test)**

Test 6 activates the interrupt control circuit. Signature analysis in this test is also possible.

*NOTE: All the signatures are given in circuit diagrams.*

*The signatures signed with a \* seem to be logic 0 or logic 1 signatures, but the difference is that they have activity at that point. (blinking lamp)  
(e.g. only logic 0 or logic 1 between start and stop).*

**7. HOW TO USE THE DOCUMENTATION AND THE TESTROM**

This service manual should be used in combination with the service manual of the PM2521. The user of the fault-finding procedure in the PM2521 service manual will be directed to a certain part of the PM2521. If the fault-finding procedure does not solve the problem, then select a signature analysis test which is associated with the part of the PM2521.

Begin always with the microcomputer, or with the inputs of the integrated circuits, and try to find the faulty node. Bear in mind that when the faulty node has been found, more than one circuit can cause the faulty signature.

**8. FAULT-FINDING HINTS**

The first thing to do is to get an analysis of what is wrong. If this is not possible (e.g. continuously —cal—), get the PM2521 in the free run mode by breaking the bus system between the microcomputer and the ROMs. This is done by removing the ROMs.

The microcomputer is now forcing—in some instruction that will cause a repeated increment of the address lines. So at this point the microcomputer is scanning the whole address field.

With START and STOP lines from the signature analyser, both connected to the most significant address bit and triggering on different edges, a measurement will be defined. Connecting the CLOCK line of the signature analyser to the ALE signal of the microcomputer and selecting the edge at which the address is valid, the input probe will get a signature at every address line.

By touching the probe in every test to a logic 1 level, a characteristic signature is obtained. This is the result of shifting ones (logic 1) in for every cycle that occurs while the gate is open. So the characteristic signature can be used to diagnose this condition elsewhere. The logic 0 is always a signature of "0000". Assume there are no bad signatures in the free-run test, then the TESTROM can be placed in the D1909 socket and it is possible to start measuring with test 0.

If an incorrect part can be located with the fault-finding procedure it is recommended to start with the test which is responsible for that fixed part of the PM2521.


To do this, short circuit TP10 and TP11 for a short period.

**9. HOW TO ORDER THE SIGNATURE ANALYSIS TESTROM AND THE DOCUMENTATION**

Under ordering number 5322 694 54013 the testrom and the documentation can be ordered from Concern Service.

## 10. TESTING THE PM2521

### 10.1. General

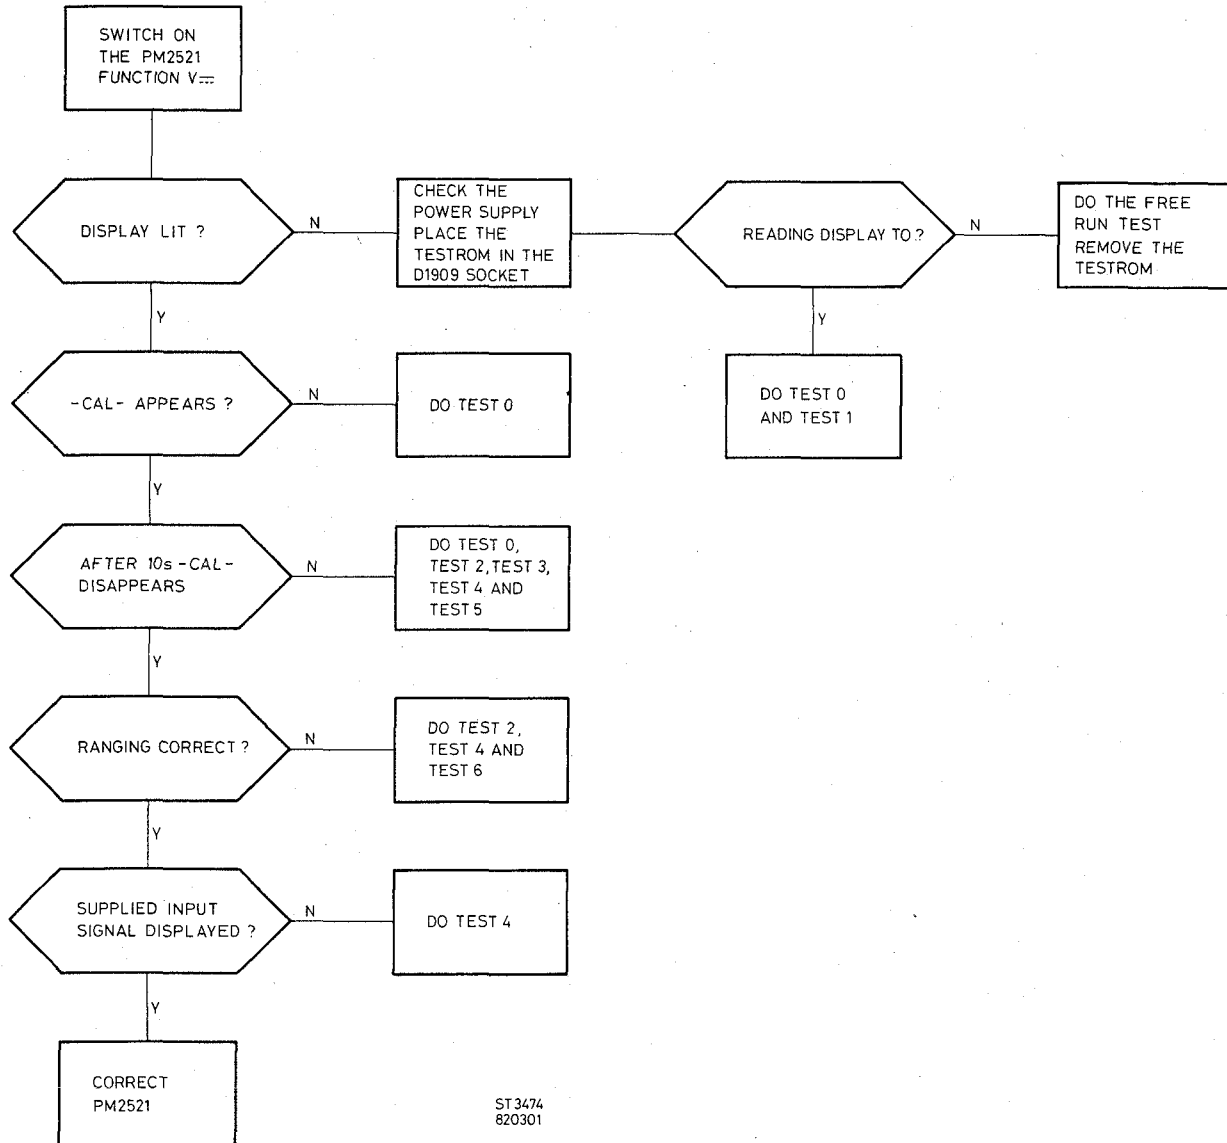

ST3474  
820301



### 10.2. Free-run test.


### Settings signature analyser

| Setting | Edge    | Testpoint    | Signalname |
|---------|---------|--------------|------------|
| start   | ┐ (neg) | D1905 pin 12 | A10        |
| stop    | ┘ (pos) | D1905 pin 12 | A10        |
| clock   | ┘ (pos) | TP15         | ALE        |
| ground  | —       | TP1          | logic 0    |

**NOTE:**

1. Remove D1909 and D1920 (ROMs).
2. Signals with a \* seem to be logic 0 or logic 1 but still show activity.  
(blinking led.)
3. Reference logic 0 = 0000  
logic 1 = 8P54

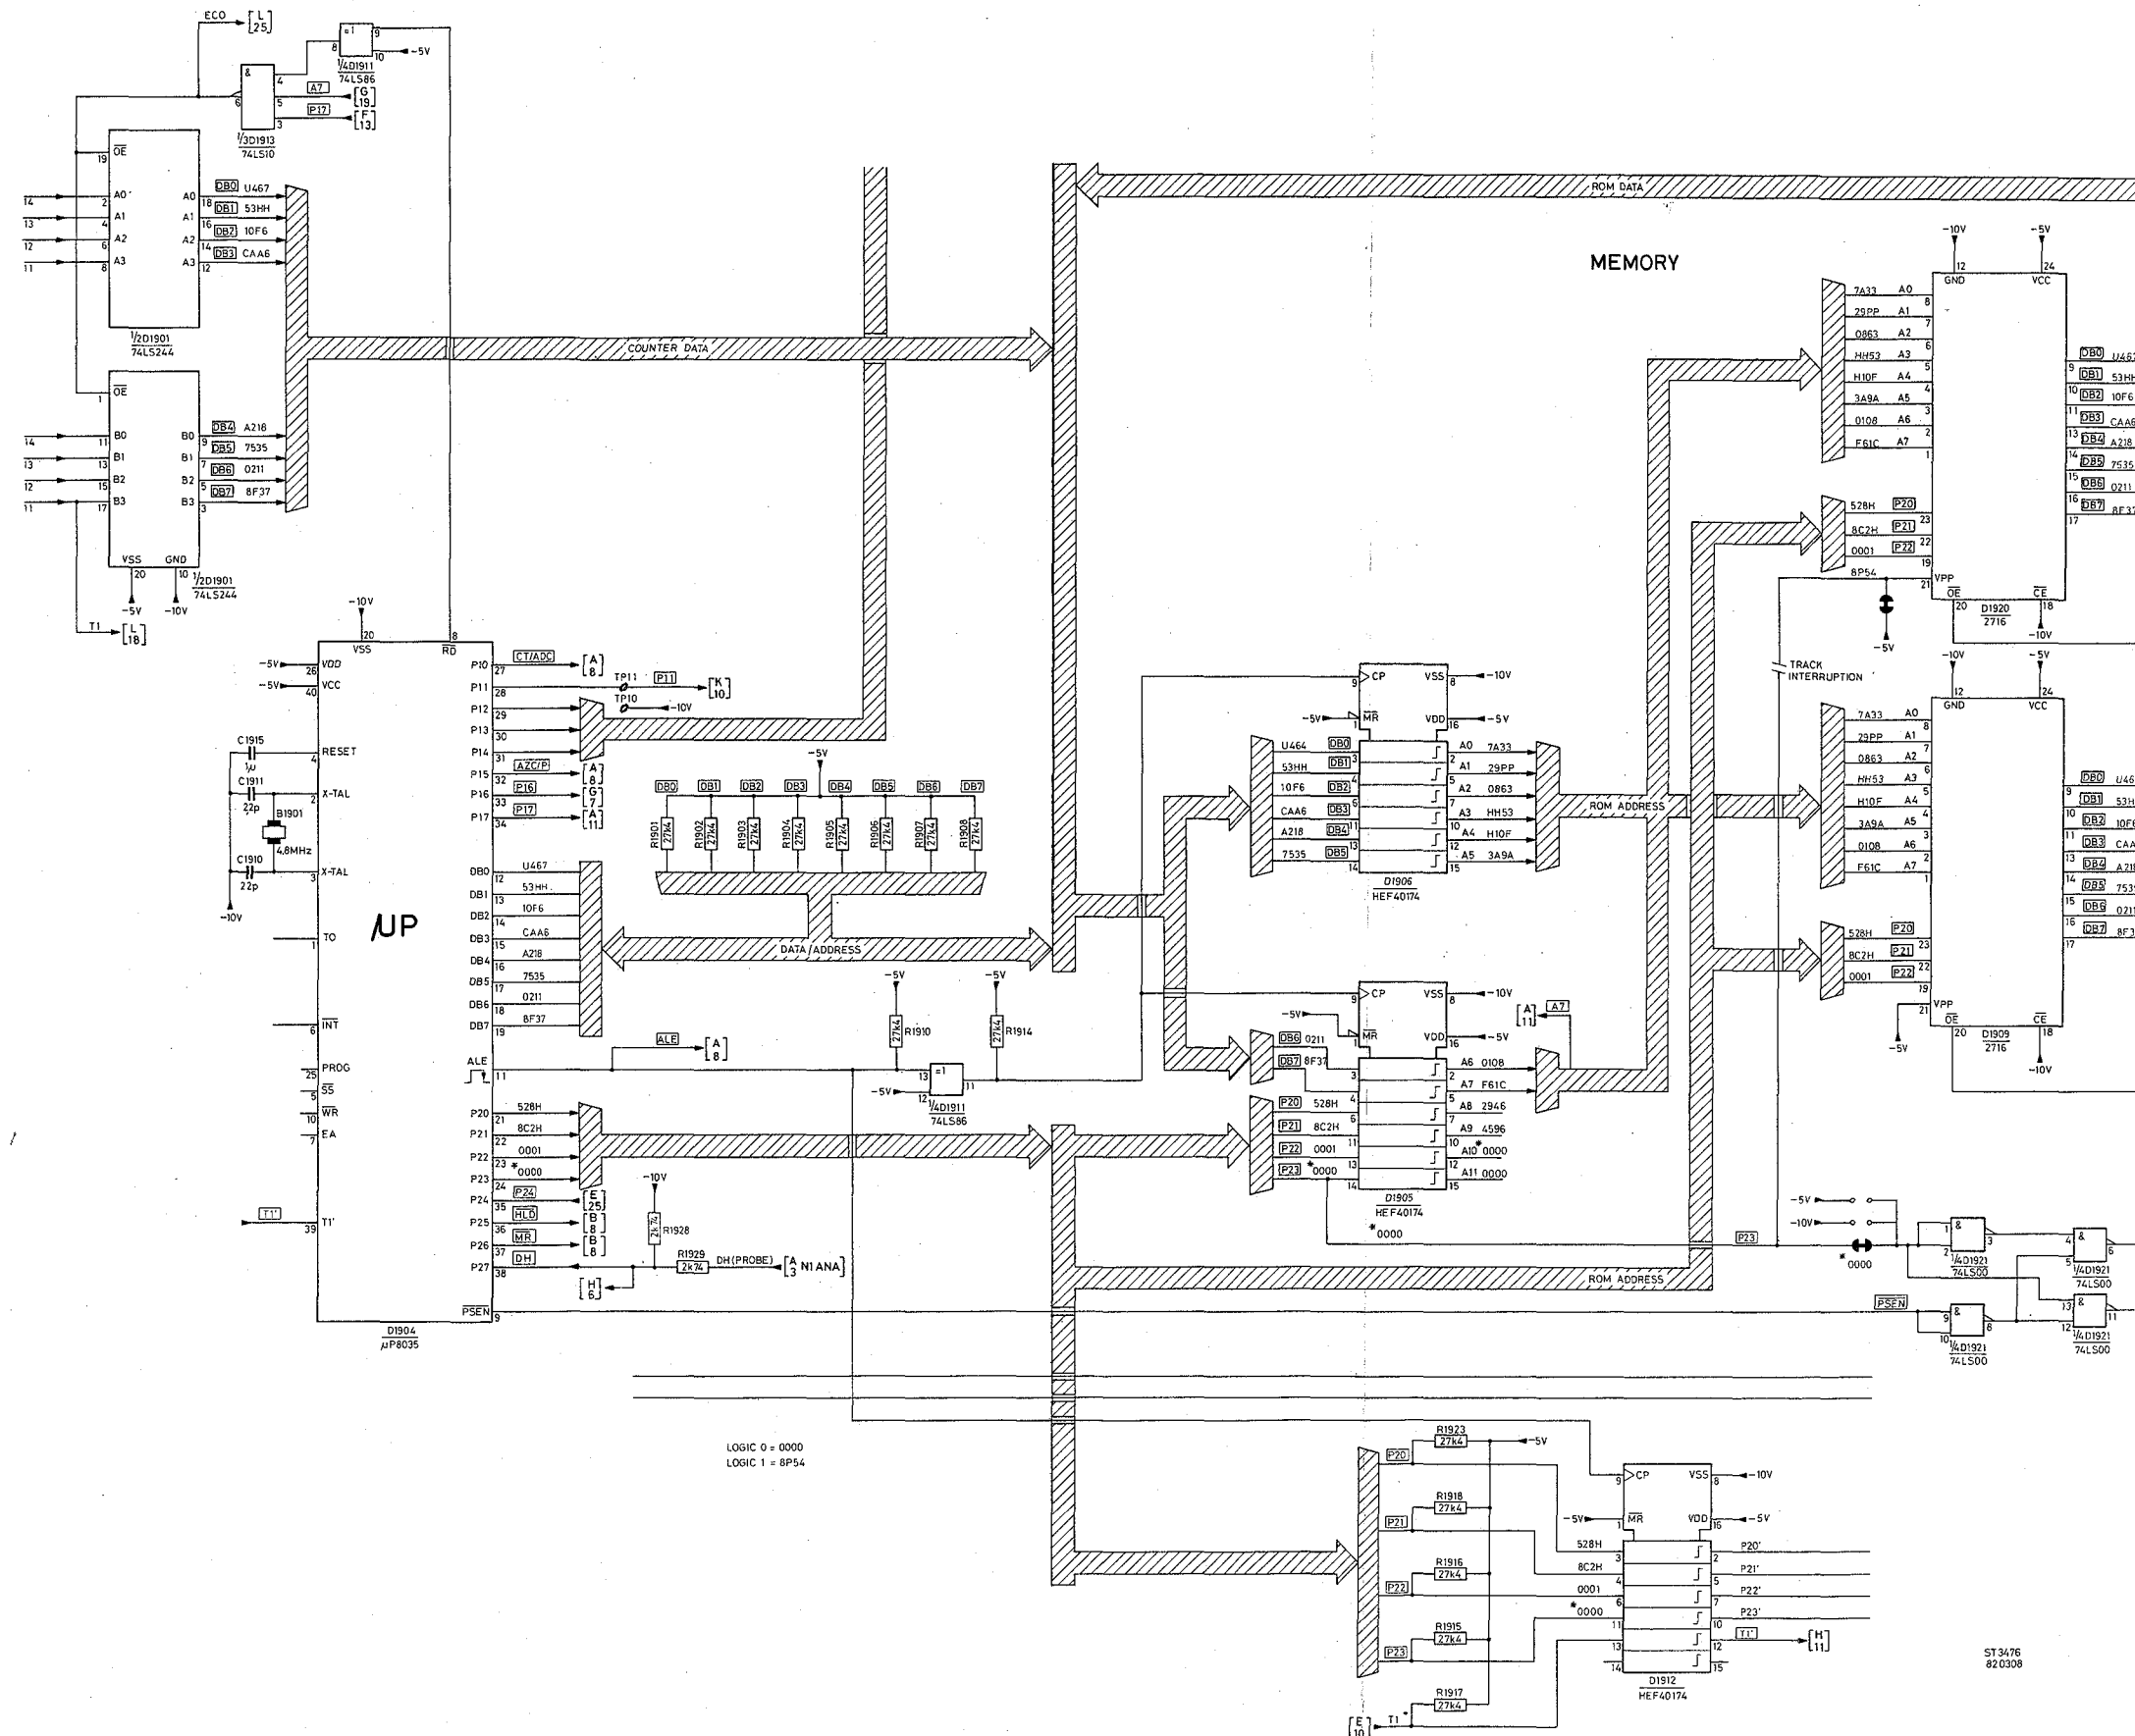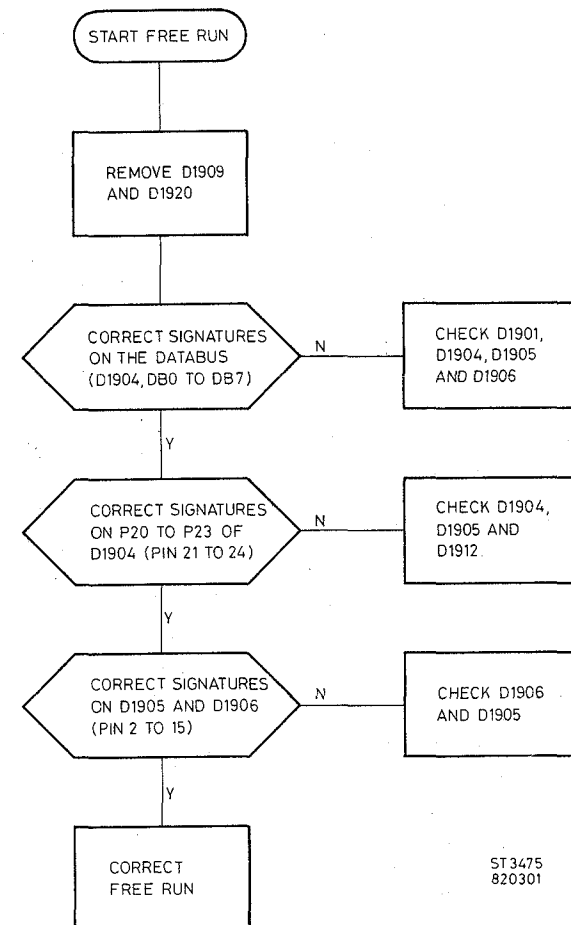

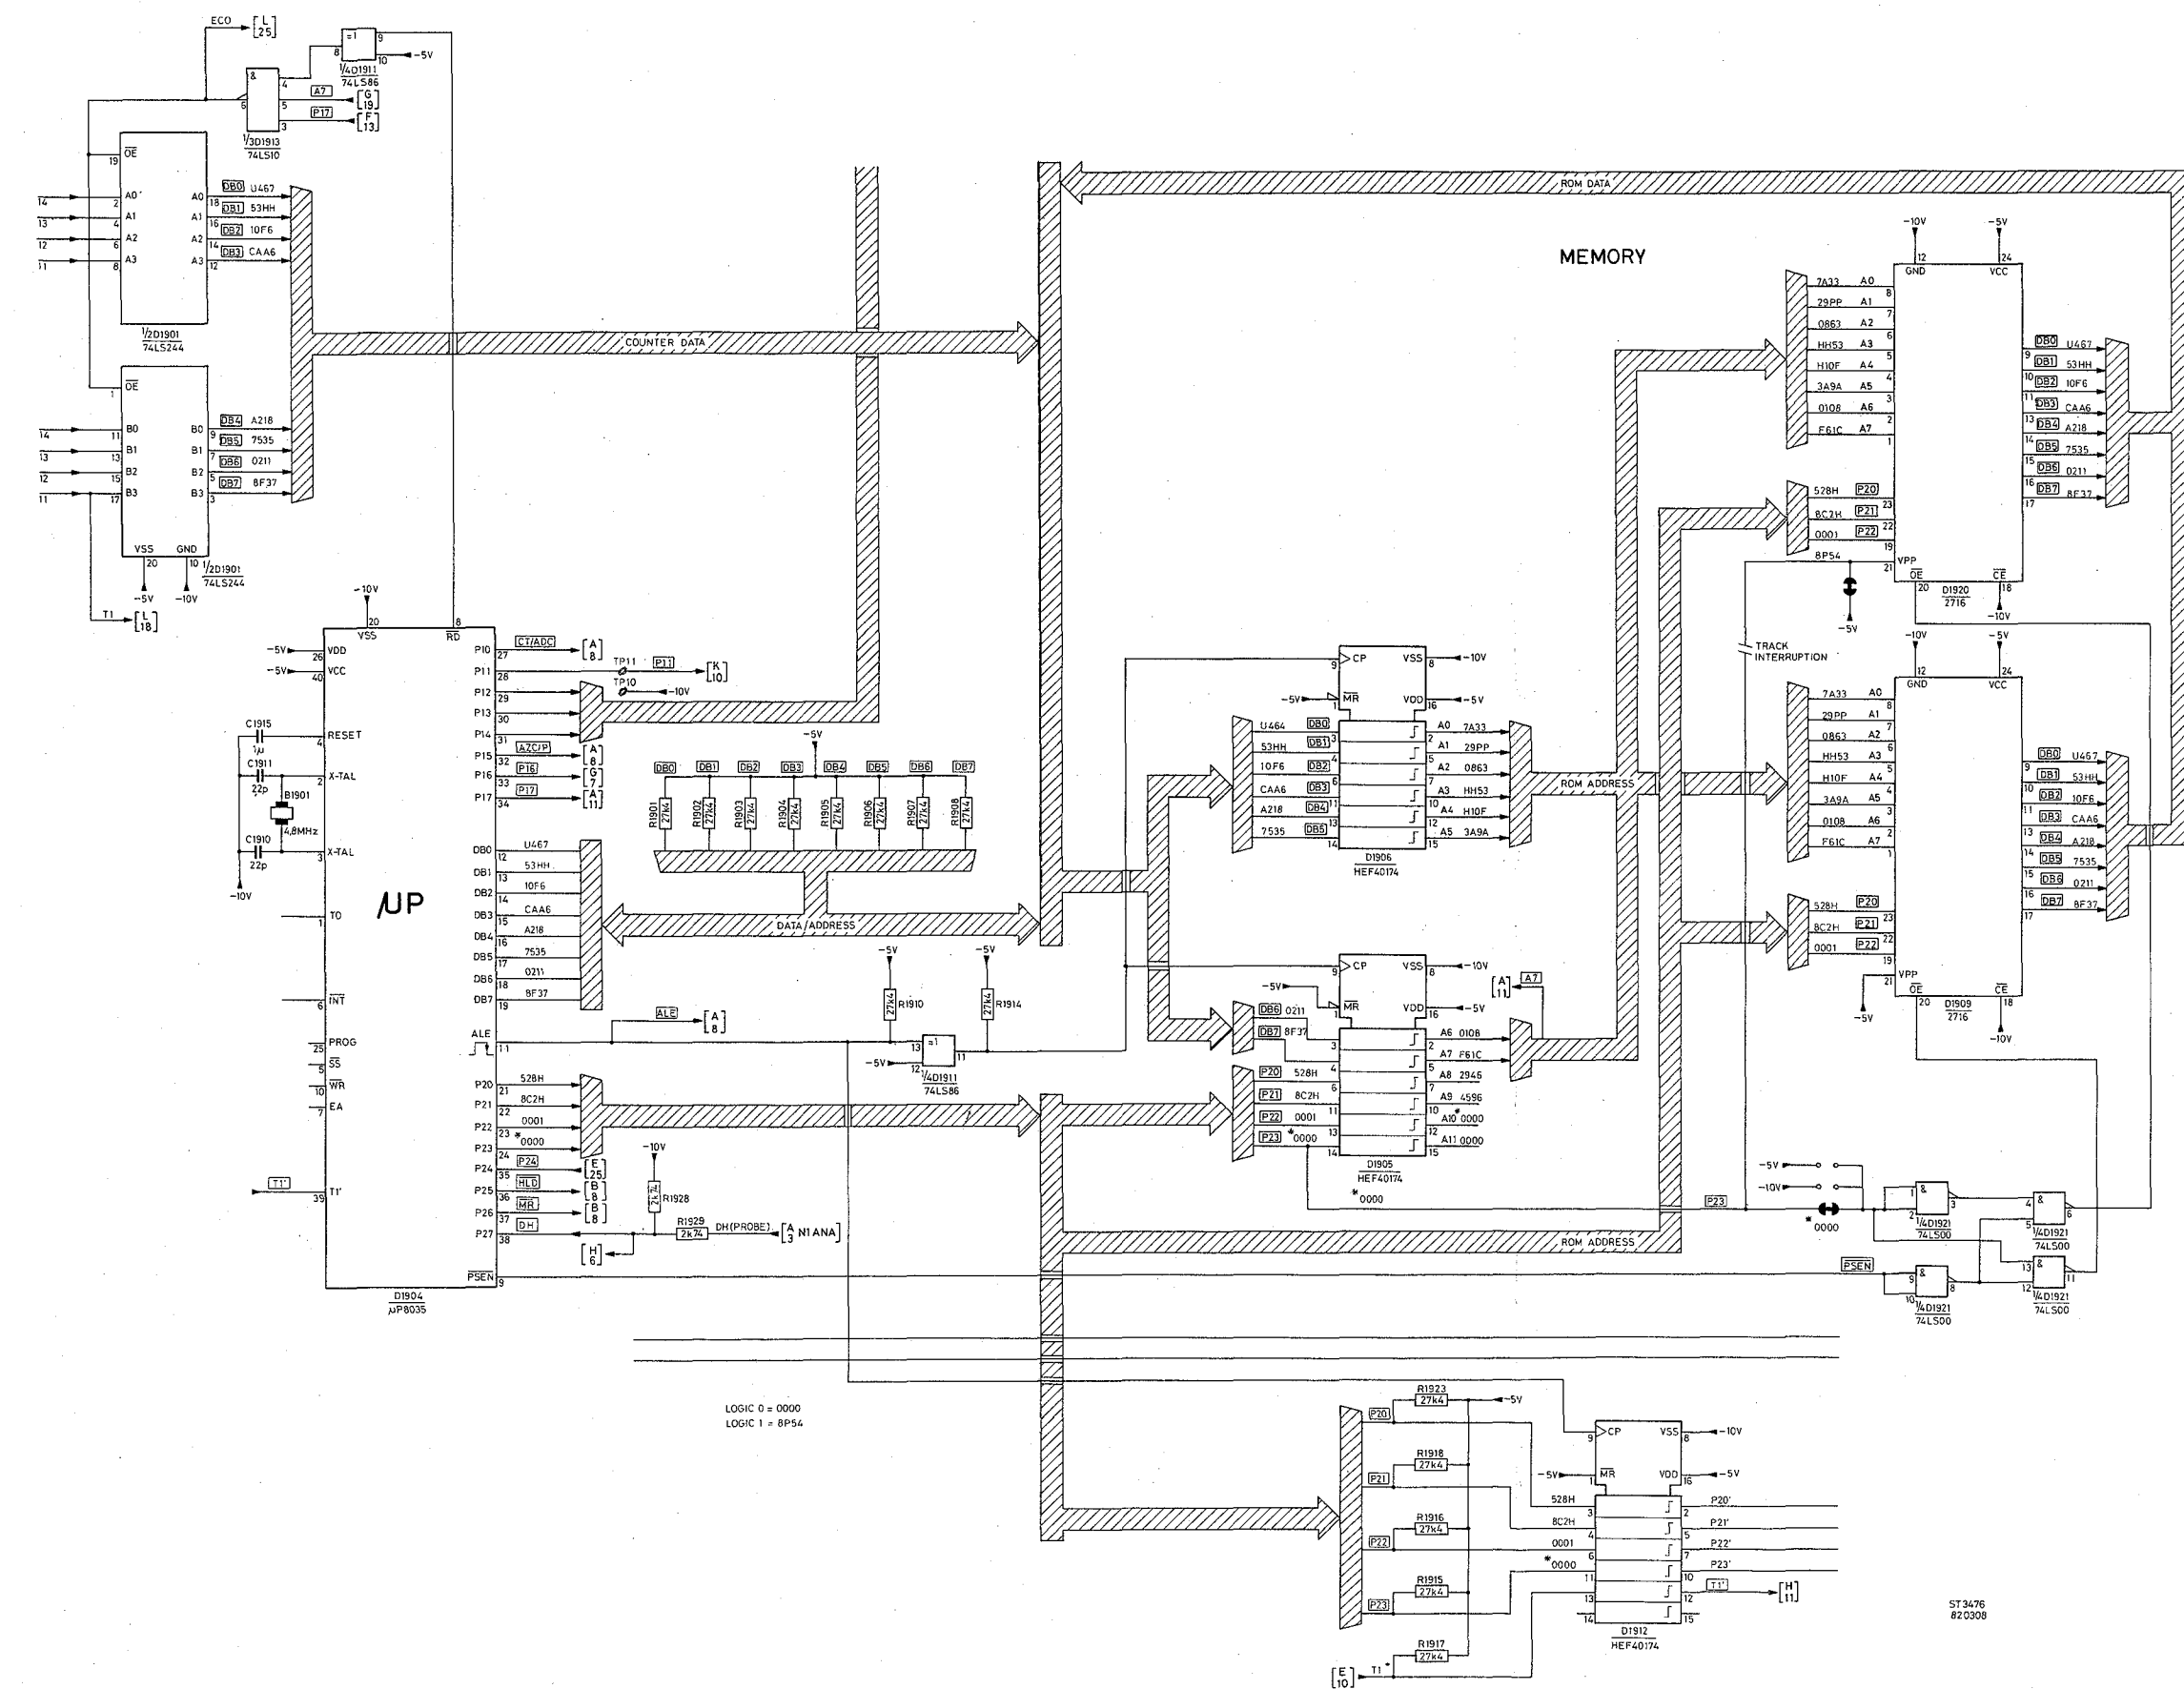



### Settings signature analyser

| Setting | Edge    | Testpoint | Signalname                |
|---------|---------|-----------|---------------------------|
| start   | ┐ (neg) | TP14      | <b>P17</b> (D1904 pin 34) |
| stop    | ┘ (pos) | TP14      | <b>P17</b> (D1904 pin 34) |
| clock   | ┘ (pos) | TP15      | ALÉ (D1911 pin 11)        |
| ground  | —       | TP1       | Logic 0                   |

**NOTE:**

1. The testrom placed in the D1909 socket.
2. Reference logic 0 = 0000.  
logic 1 = HCH5
3. Reading display:  $\frac{1}{2}$   $\square$

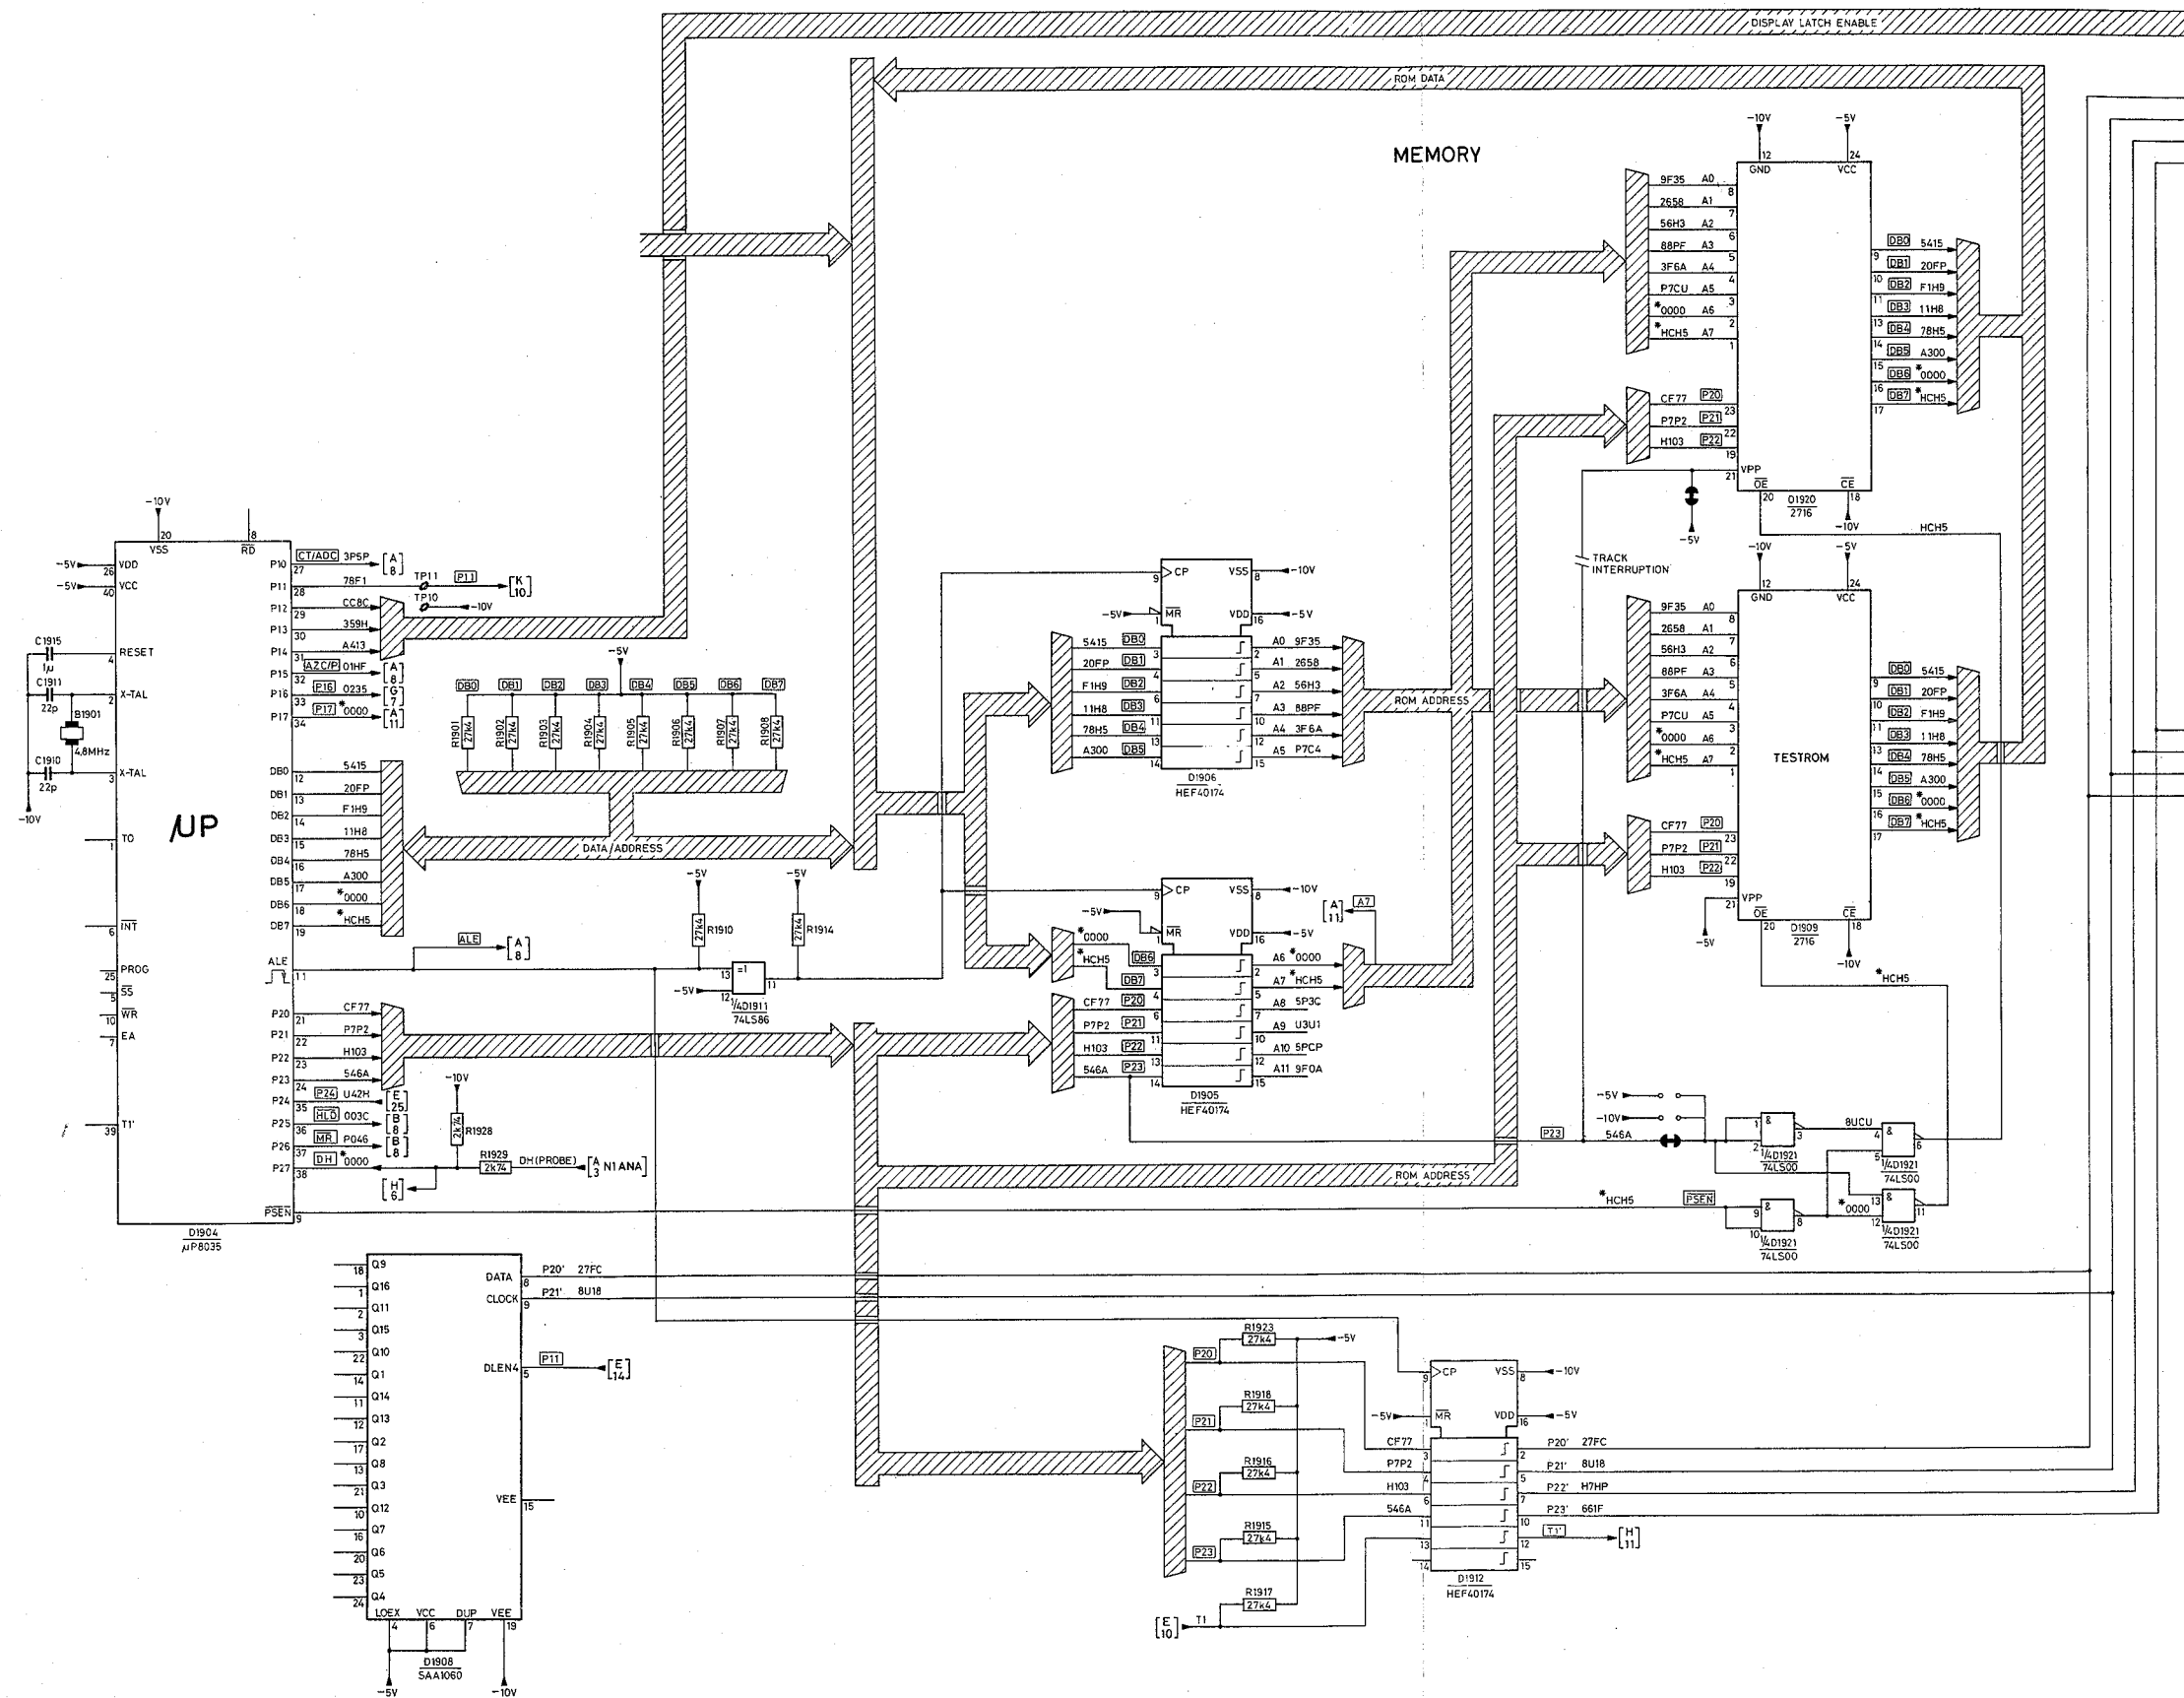

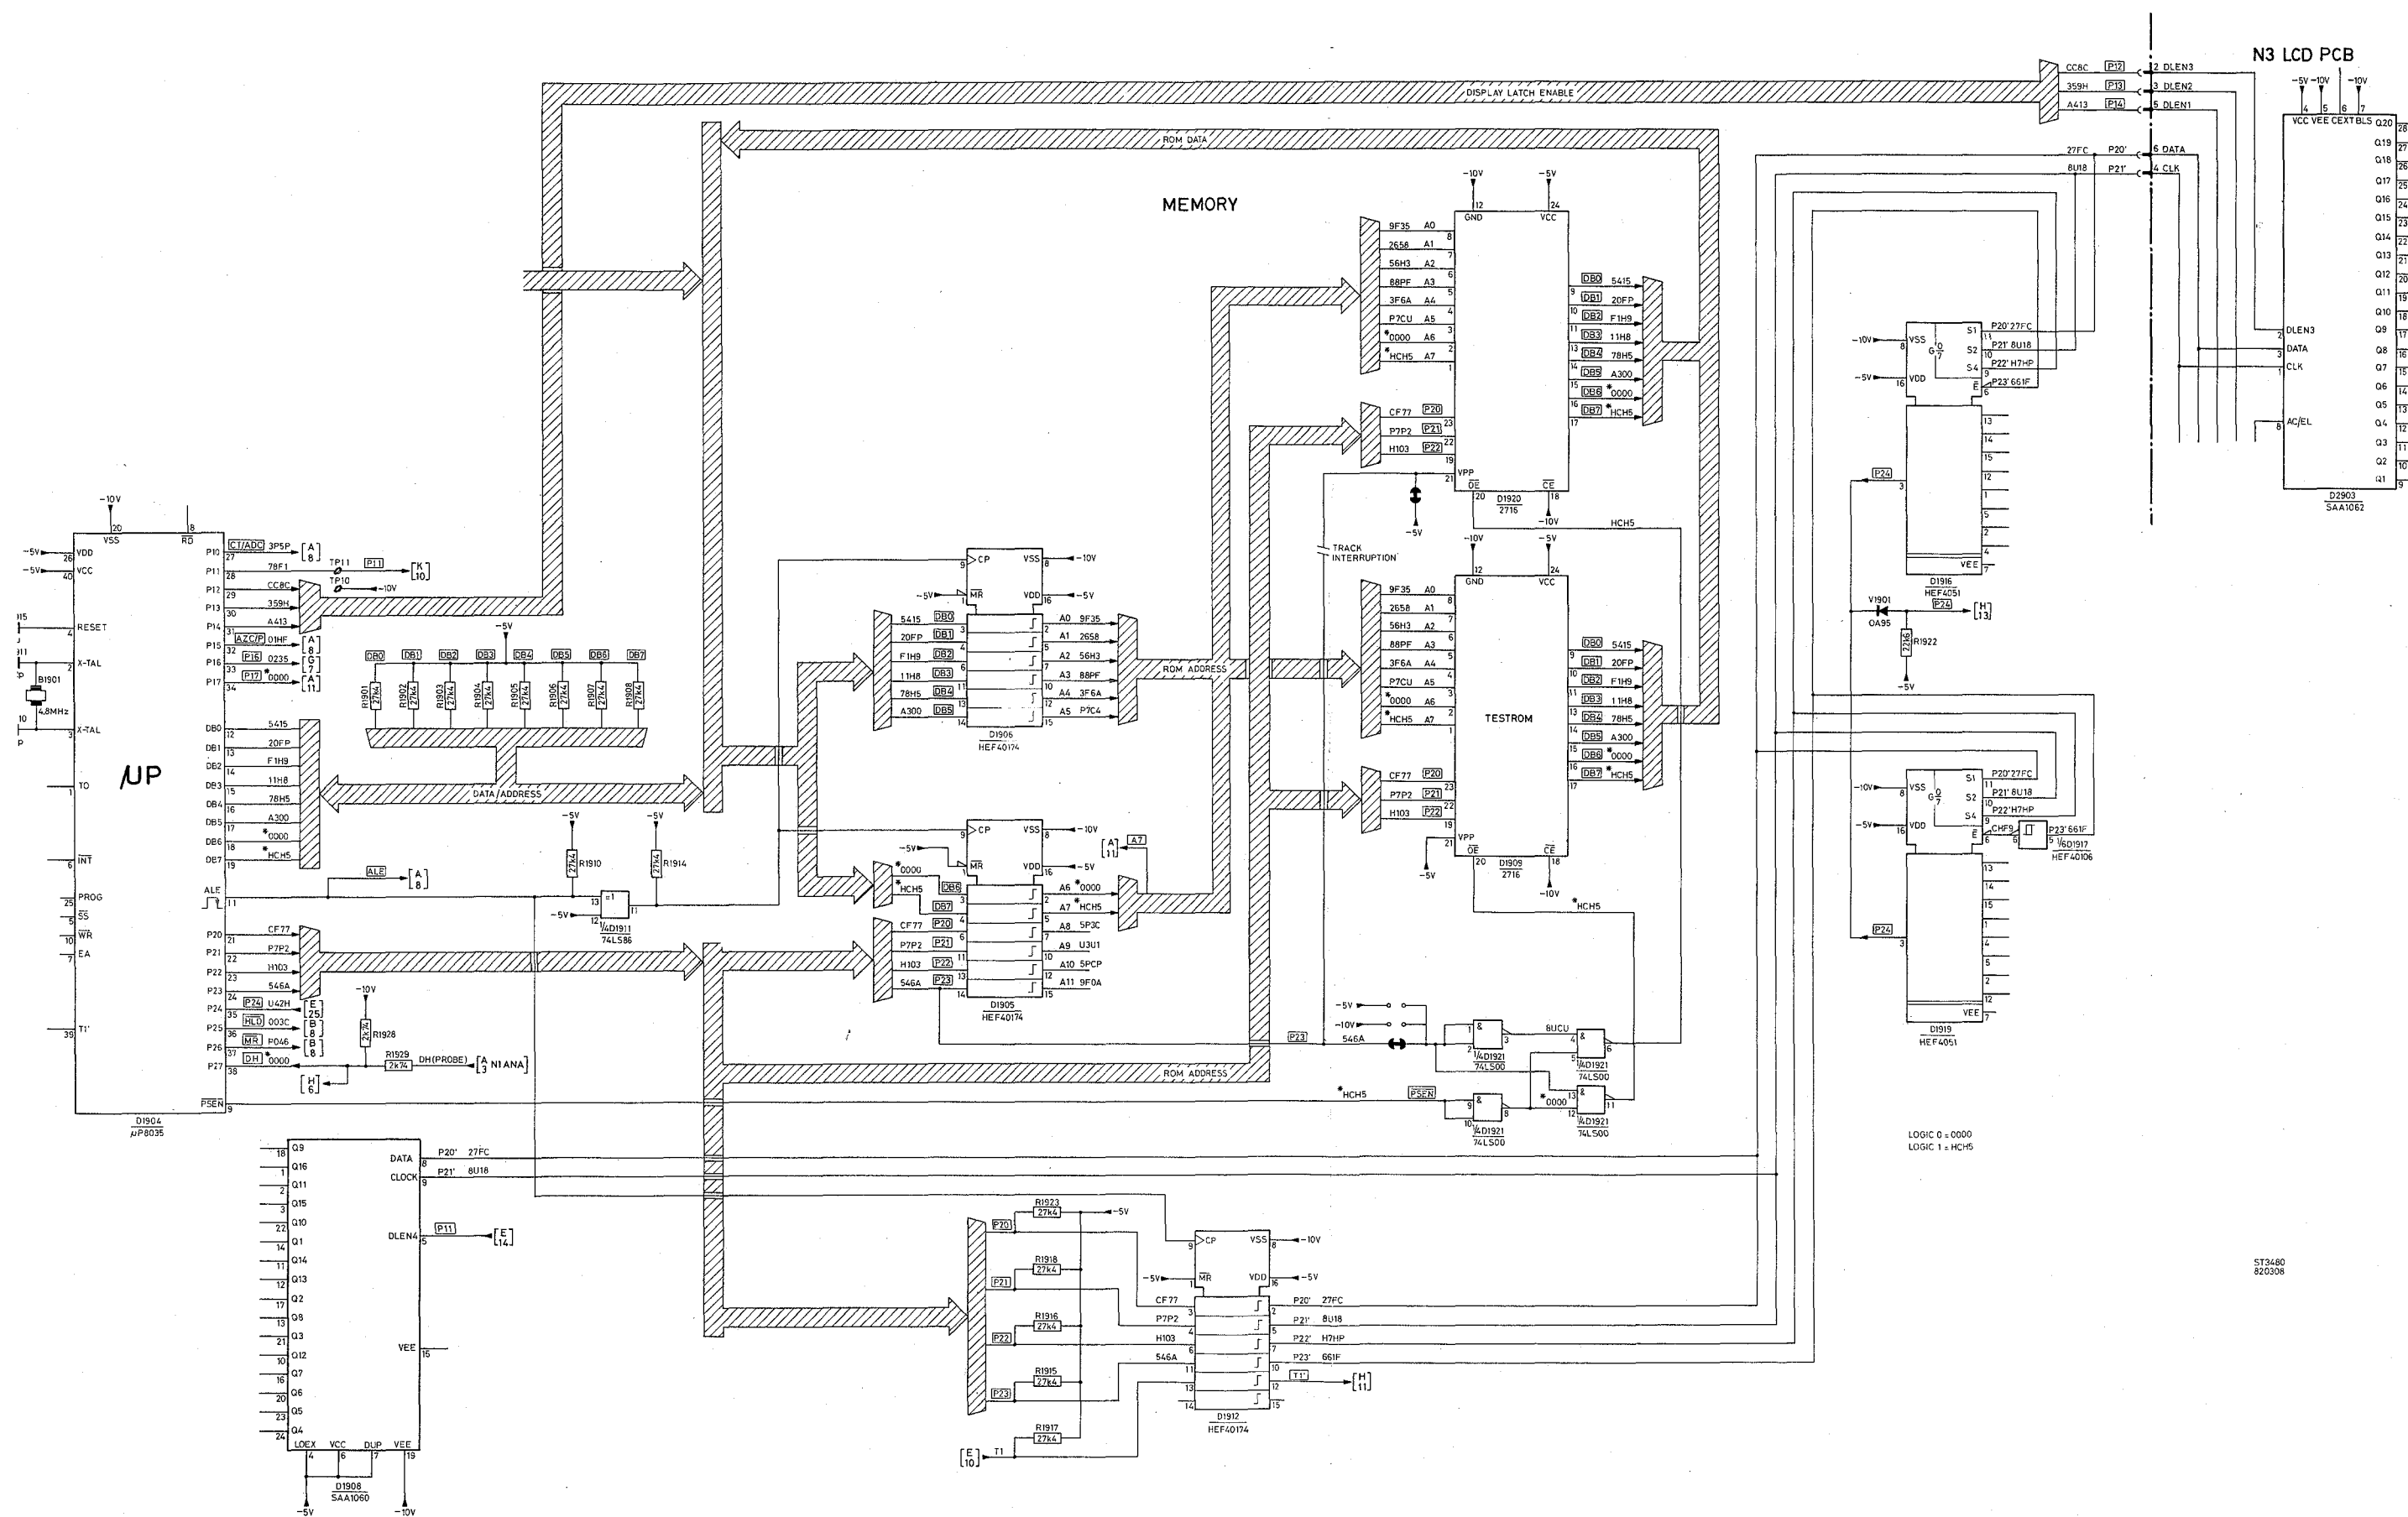




#### 10.4. Test 1 (visual L.C.D. test, no S.A.)

This test is a visual L.C.D. test which fills the display, segment after segment. If all segments are lit the display becomes empty and the whole measuring sequence starts again.

Only when all segments are lit can the test be stopped by short circuiting TP10 and TP11.

When a connections are short circuited then the segments will light simultaneously.

**NOTE:** 1. Testrom placed in D1909 socket (Both ROMs removed)  
2. Short circuit TP10 and TP11  
3. Reading on display: All segments will be filled.

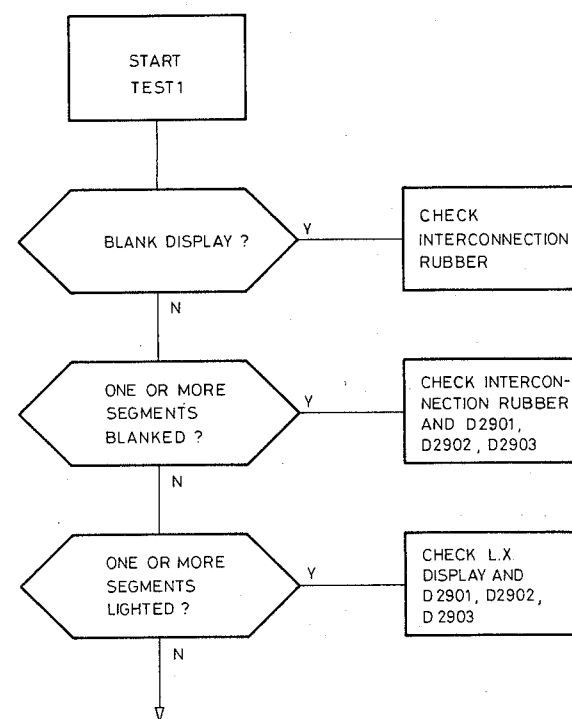

ST3473  
820301

CONNECTION TABLE

| CONNECTIONS<br>D2901 D2902 D2903 |         | D2901 | LX-display | D2902 | LX-display | D2903              | LX-display |
|----------------------------------|---------|-------|------------|-------|------------|--------------------|------------|
| Output no.                       | Pin no. | Char. | Pin no.    | Char. | Pin no.    | Char.              | Pin no.    |
| Q1                               | 9       |       | 2          | .3    | 22         | a5                 | 42         |
| Q2                               | 10      | —     | 3          | d3    | 23         | b5                 | 43         |
| Q3                               | 11      | +     | 4          | e3    | 24         | g5                 | 44         |
| Q4                               | 12      | GATE  | 5          | f3    | 25         | c5                 | 45         |
| Q5                               | 13      | .1    | 6          | a3    | 26         | M (Hz)             | 46         |
| Q6                               | 14      | d1    | 7          | b3    | 27         | k (Hz)             | 47         |
| Q7                               | 15      | e1    | 8          | g3    | 28         | Hz                 | 48         |
| Q8                               | 16      | f1    | 9          | c3    | 29         | Z                  | 49         |
| Q9                               | 17      | a1    | 10         | .4    | 30         | s                  | 50         |
| Q10                              | 18      | b1    | 11         | d4    | 31         | V                  | 51         |
| Q11                              | 19      | g1    | 12         | e4    | 32         | A                  | 52         |
| Q12                              | 20      | c1    | 13         | f4    | 33         | *                  | 53         |
| Q13                              | 21      | .2    | 14         | a4    | 34         | m                  | 54         |
| Q14                              | 22      | d2    | 15         | b4    | 35         | $\mu$              | 55         |
| Q15                              | 23      | e2    | 16         | g4    | 36         | $^{\circ}\text{C}$ | 56         |
| Q16                              | 24      | f2    | 17         | c4    | 37         | $\Omega$           | 57         |
| Q17                              | 25      | a2    | 18         | .5    | 38         | k ( $\Omega$ )     | 58         |
| Q18                              | 26      | b2    | 19         | dB    | 39         | M ( $\Omega$ )     | 59         |
| Q19                              | 27      | g2    | 20         | e5    | 40         | n.c.               | —          |
| Q20                              | 28      | c2    | 21         | f5    | 41         | n.c.               | —          |



10.5. Test 2 Switch decoding test

Due to the capacitors in the circuit which read-out the function switch, the signatures on point 3 of D1916 and D1919 (P24) are unstable. Therefore the microcomputer reads the signatures on P24 and sends them to P25. This gives a stable signature which can be measured by the signature analyser.

Settings signature analyser

| Setting | Edge    | Testpoint | Signalname         |
|---------|---------|-----------|--------------------|
| start   | ⌋ (neg) | TP14      | P17 (D1904 pin 34) |
| stop    | ⌋ (pos) | TP14      | P17 (D1904 pin 34) |
| clock   | ⌋ (pos) | TP15      | ALE (D1911 pin 11) |
| ground  | —       | TP1       | Logic 0            |

- NOTE: 1. The testrom placed in the D1909 socket. (Both ROMs removed).  
2. Short circuit TP10 and TP11.  
3. Reading on display **EE**  
4. Reference logic 0 = 0000  
logic 1 = C66C

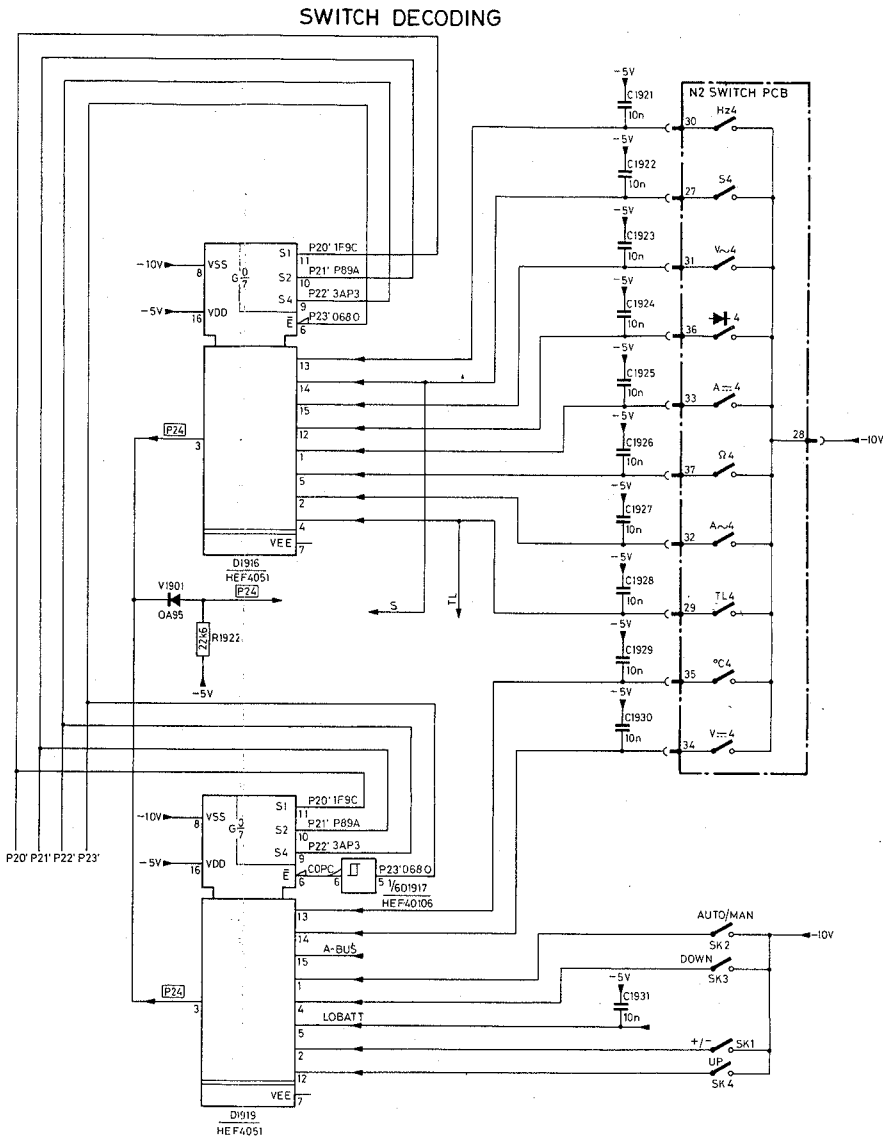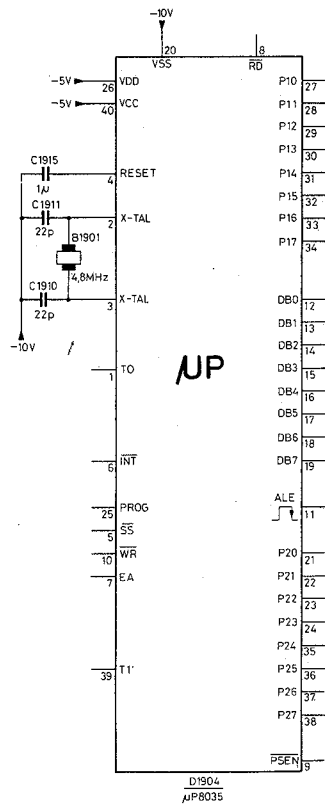

| POSITION                                  | SIGNATURE |
|---|-----------|
| V <sub>cc</sub>                           | 3A08      |
| V <sub>ee</sub>                           | 7F0F      |
| HZ  | 45AU      |
| TRIGGER LEVEL                             | 8876      |
| S   | 968A      |
| C   | 251C      |
| ⌋   | 139P      |
| Ω   | A514      |
| A <sub>cc</sub>                           | 5A02      |
| A <sub>cc</sub>                           | 677C      |
| V <sub>cc</sub> AND $\frac{1}{2}$         | HU11      |
| V <sub>cc</sub> AND AUTO/MAN              | 538F      |
| V <sub>cc</sub> AND DOWN                  | 3AF7      |
| V <sub>cc</sub> AND UP                    | 1C2P      |
| V <sub>cc</sub> AND A BUS (LEAD IN A BUS) | 7520      |

LOGIC 0 = 0000  
LOGIC 1 = C66C

ST3479  
820309

# 10.6. Test 3 (Relay and FET test).


| Setting   | Edge    | Testpoint   | Signalname |
|-----------|---------|-------------|------------|
| start     | ⌋ (neg) | TP14        | P17        |
| stop      | ⌋ (pos) | TP14        | P17        |
| clock     | ⌋ (pos) | TP15        | ALE        |
| qualifier | ⌋ (neg) | D1903 pin 7 | AZC/P      |
| qualifier | ⌋ (pos) | D1903 pin 2 | AZ         |
| ground    | —       | TP1         | Logic 0    |

NOTE: 1. The testrom placed in D 1909 socket  
(Both ROMs removed)

2. Short circuit TP10 and TP11

3. Reading display:  $\overline{E} \overline{3}$

4. Reference logic 0 = 0000  
logic 1 = 593A

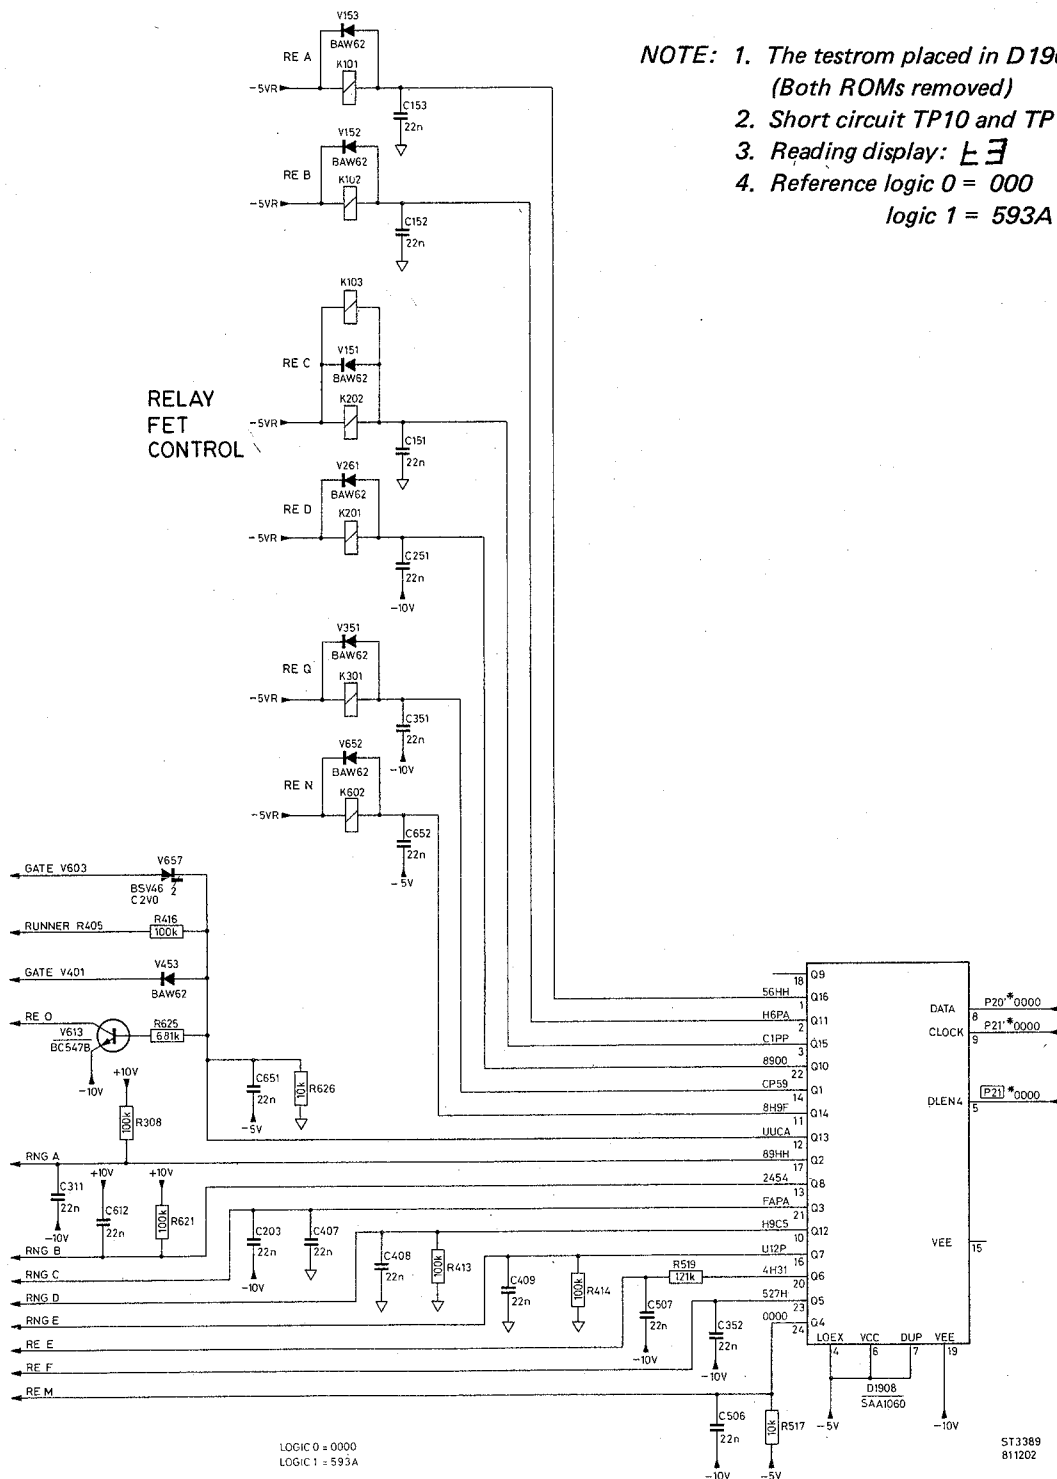

### 10.7. Test 4 (Static relay and FET test, no. S.A.)

This test sets all the RELAYS/FETS corresponding to the selected function and range.  
 With the +/- button the AZ status can be changed, and also in the functions  $V_{\sim}$ ,  $A_{\sim}$ , and trigger level, the polarity can be changed.  
 Pushing the AUTO/MAN\* button starts another measurement.

#### POSSIBLE READINGS BY PRESSING THE UP, DOWN AND +/- BUTTONS.

| Position      | Readings  | Position | Readings   |
|---------------|---|----------|--|
| V=            | +/- PO-t4 mV<br>+/- P.O-t4 V<br>+/- PO.-t4 V<br>+/- PO-t4 V<br>+/- PO-t.4 V     | A=       | +/- P.O-t4 uA<br>+/- PO.-t4 uA<br>+/- PO-t4 uA<br>+/- P.O-t4 mA<br>+/- PO.-t4 mA<br>With lead in the A-bus<br>+/- PO-t4 mA<br>+/- P.O-t4 mA<br>+/- PO.-t4 mA |
| V~            | ~ PO-t4 mV<br>~ P.O-t4 V<br>~ PO.-t4 V<br>~ PO-t.4 V                            |          |  |
| Hz            | P.O-t4 KHz<br>PO.-t4 KHz<br>.PO-t4 MHz<br>P.O-t4 MHz                            | A~       | ~ P.O-t4 uA<br>~ PO.-t4 uA<br>~ PO-t4 uA<br>~ P.O-t4 mA<br>~ PO.-t4 mA<br>With lead in the A-bus<br>~ PO-t4 mA<br>~ P.O-t4 mA<br>~ PO.-t4 mA                 |
| Trigger level | gate +/- P.O-t4 V<br>gate +/- PO.-t4 V<br>gate +/- PO-t4 V<br>gate +/- PO-t.4 V |          |  |
| s             | P.O-t4 s<br>PO.-t4 s<br>PO-t4 s<br>PO-t.4 s<br>PO-t4 s                          | °C       | +/- PO-t.4 °C  |
|               |   | Diode    | P.O-t4 V   |
|               |   | $\Omega$ | PO-t4 $\Omega$<br>P.O-t4 K $\Omega$<br>PO.-t4 K $\Omega$<br>PO-t4 K $\Omega$<br>P.O-t4 M $\Omega$<br>PO.-t4 M $\Omega$                                       |

NOTE: In these ranges the relays are also set.

By pressing the auto/man\* button the measurement number can be changed.

| NUMBER OF PRESSINGS | RELAYS SETTING     | DISPLAY   |
|---------------------|--------------------|-----------|
| 0                   | normal measurement | ...PO.... |
| 1                   | AUTO CAL 0.1V      | ...P1.... |
| 2                   | normal measurement | ...P2.... |
| 3                   | IZERO 200mA        | ...P3.... |
| 4                   | normal measurement | ...P4.... |
| 5                   | AUTO CAL 1V        | ...P5.... |
| 6                   | normal measurement | ...P6.... |
| 7                   | IZERO 2A           | ...P7.... |

## DESCRIPTION

When making a normal measurement (..PO...) the microcomputer sets all the relays and FET's which are necessary to make a measurement. For instance: Select the V<sub>Ω</sub> function and the range 200mV. The relays and FET's which are now set can be found in the relay table. So it is possible to determine if the relays are really set.

When making an AUTOCAL 0,1V (..P1...) the microcomputer programs the 0Q 0063 so that a current of 100  $\mu$ A flows through R606, which causes a voltage drop of 100mV across it. With this test it is possible to measure this voltage.

In the position AUTOCAL 1V (..P5...) the microcomputer programs the 0Q 0063 to give a current of 1mA through R606. The result is 1V across R606.

With the I ZERO measurements, normally the offset is measured in the I—V convertor. (current offset). In the ..P3... and the ..P7... tests these IZERO measurements are simulated. (see relay table on page 52 and page 53 of the PM2521 service manual).

In all these tests (..P0... to ..P7...) the AZ status can be changed. This means that the input of the ADC can be selected. To do this push the +/— button. Thanks to this it is possible to measure the input voltage, or the voltage across the R606 resistance, on the input of the ADC (pin 5 and pin 10 of the 0Q 0064)

### Example:

When there is no input signal, the voltage on pin 5 and pin 10 of the ADC is 0,460V. (with respect tot the 0 input socket)  
 Set 200mV on the input terminals. After attenuation the voltage on point 6 of A601 is 100mV.  
 This voltage of 100mV causes either a voltage of 0,360V on pin 5 of A602 or a voltage of 0,360V on pin 10 of A602, depending on the state of the AZ flip-flop. ( $0,460V - 0,1V = 0,360V$ ).  
 So the input voltage after attenuation degrees the voltage on pin 5 or pin 10 corresponding to the input signal.

10.8. Test 5 (Counter and counter input control test).

Settings signature analyser

| Setting | Edge    | Testpoint | Signalname |
|---------|---------|-----------|------------|
| start   | ⌋ (neg) | TP14      | P17        |
| stop    | ⌋ (pos) | TP14      | P17        |
| clock   | ⌋ (pos) | TP15      | ALE        |
| ground  | —       | TP1       | logic 0    |

- NOTE: 1. Testrom placed in D1909 socket (Both ROMs removed)  
2. Short circuit TP10 and TP11  
3. Reading on display: **LS**  
4. Connect point 1 of D1910 to logic 0  
5. Adjust with R502 the signature on D1911 point 2 to 0000  
6. Select the signature on point 15 of D1903 with the +/- button: 154H  
7. Reference logic 0 = 0000  
    logic 1 = 3UH7

